

OPTIONAL 3 BUTTON CONFIGURATION
PCB IS USED FOR EITHER 3 OR 4 BUTTON CONFIGURATION.



OPTIONAL 4 BUTTON CONFIGURATION
PCB IS USED FOR EITHER 3 OR 4 BUTTON CONFIGURATION.



TOP AND BOTTOM OF 3 BUTTON RUBBER KEYPAD



TOP AND BOTTOM OF 4 BUTTON RUBBER KEYPAD





TOP OF 3 AND 4 BUTTON ASSEMBLED CASE



BOTTOM OF 3 AND 4 BUTTON ASSEMBLED CASE