

OPTIONAL 3 BUTTON CONFIGURATION
PCB IS USED FOR EITHER 3 OR 4 BUTTON CONFIGURATION.



OPTIONAL 4 BUTTON CONFIGURATION
PCB IS USED FOR EITHER 3 OR 4 BUTTON CONFIGURATION.



PCB USED FOR EITHER 3 OR 4 BUTTON IS THE SAME.



PCB USED FOR EITHER 3 OR 4 BUTTON IS THE SAME
FRONT OF 474S.



BACK OF 474S.

