


The following pictures describe the normal operation modes for the device. According to the "AirStation WLI-U2-AG108HP" page 3 of user manual, normal operation is when the antenna is faced to the access point. This means the word BUFFALO appears away from body or the phantom. Figures 1 through 4 are examples of normal operations and figures 5 and 6 are NOT normal operation modes.

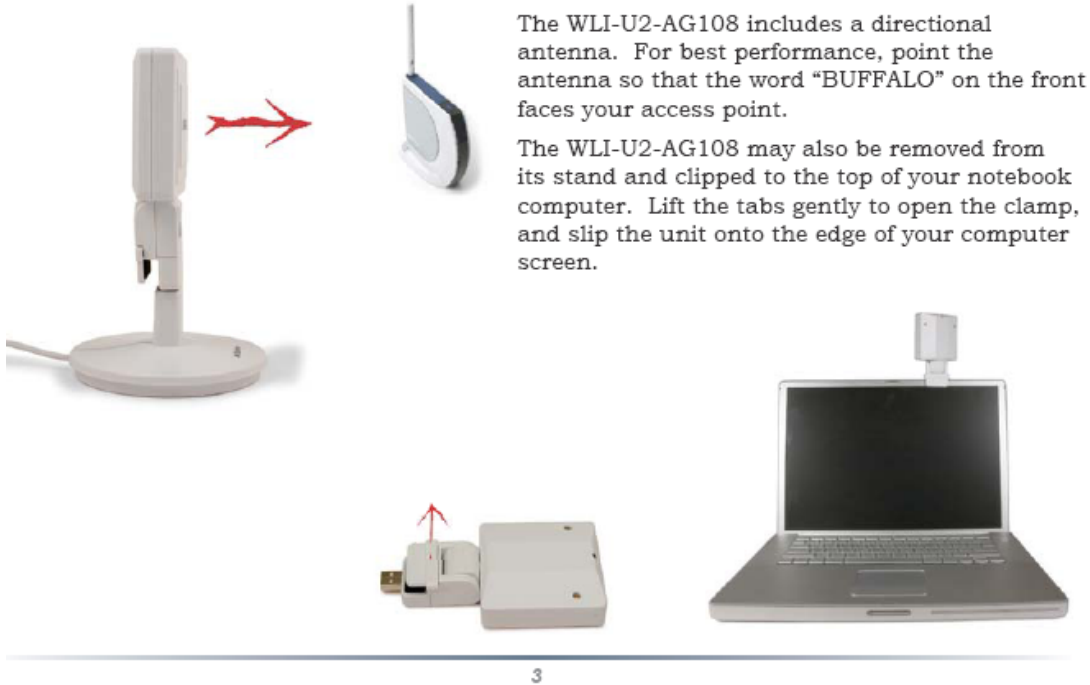

The spacing between the USB ports and phantom for three laptops are: for host # 1: 15mm, for host # 2: 17mm, and for host # 3: 11mm



Figure 1. Normal operation



Figure 2. Normal operation



Figure 3. Normal operation



Figure 4. Normal operation



Figure 5. Not a normal operation



Figure 6. Not a normal operation