


The Side View of EUT

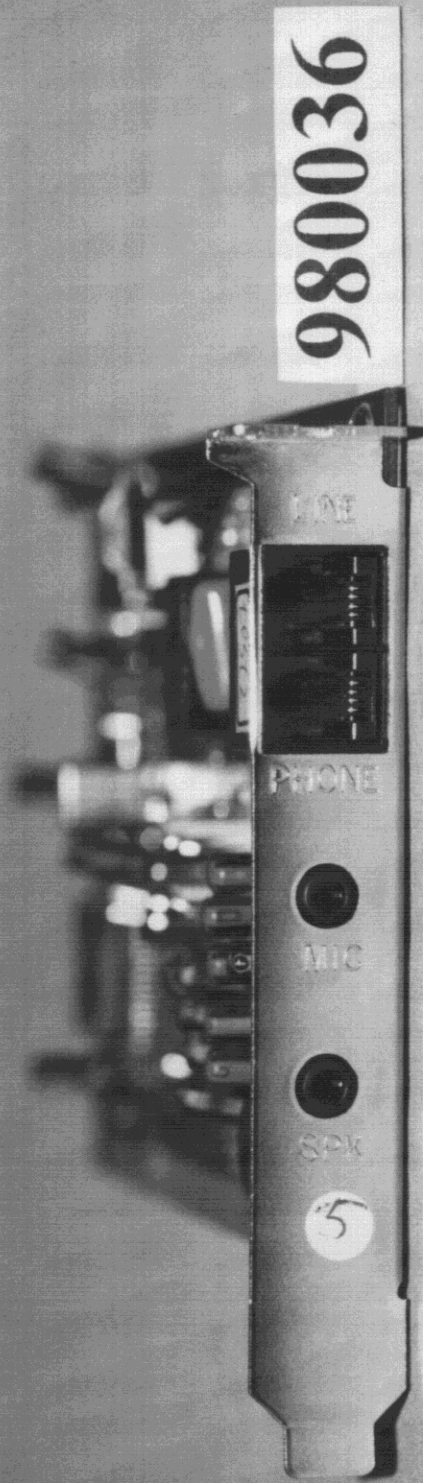

The Back View of EUT

980036

PnP Enable JP16 ON JP17 2,3 ON	
COM PORT Enable JP16 CFF JP17 1,2 ON	
COM PORT ADDRESS	IRQ SETTING
COM1 JP1 JP2	ON IRQ3 JP3 ON
COM2 JP1 JP2	ON IRQ4 JP4 ON
COM3 — JP2	ON IRQ5 JP5 ON
COM4 —	ON IRQ7 JP6 ON
	ON IRQ9 JP7 ON
	ON IRQ10 JP8 ON
	ON IRQ11 JP9 ON
	ON IRQ12 JP10 ON
	ON IRQ15 JP11 ON

FCC ID: FELMR56PVS

The Front View of EUT

