

Rugged Tablet PC

R11AH

User's Manual



Table of Contents

BEFORE YOU START	4
PACKAGE CONTENTS	4
PRODUCT OVERVIEW	6
<i>Front View</i>	6
<i>Back View</i>	7
<i>Right View</i>	8
<i>Left View</i>	8
<i>Bottom View</i>	9
STATUS INDICATORS	10
GETTING STARTED	11
INSTALLING THE BATTERY	11
<i>Charging the Battery</i>	11
<i>When to replace the Battery Pack</i>	12
<i>Removing the Battery</i>	12
CONNECTING THE POWER	13
<i>Connecting the AC Adapter</i>	13
<i>Using Battery Power</i>	13
STARTING YOUR TABLET PC	14
<i>Turning On Your Device</i>	14
<i>Turning Off Your Device</i>	14
OPERATING YOUR TABLET PC	15
USING THE QUICK MENU	15
<i>Quick Menu Overview</i>	15
<i>Configuring the SETUP Menu Settings</i>	18
USING THE CAMERA	23
<i>Opening Camera App (Win8 and Win10 only)</i>	23
<i>Taking Photos</i>	24
<i>Recording Videos</i>	25
<i>Adjusting Brightness</i>	26
<i>Setting Photo Timer</i>	27
<i>Configuring Camera Settings</i>	27
<i>Viewing Photos/Videos</i>	28
MAKING CONNECTIONS	29
INSTALLING THE MEMORY CARD	29
INSTALLING THE SIM CARD	30
CONNECTING THE MICROPHONE/HEADSET	30
CONNECTING USB DEVICES	31
CONNECTING TO WIRELESS CONNECTIONS	32

USING THE BIOS SETUP UTILITY	37
BIOS SETUP MENU	37
MAIN MENU	39
ADVANCED MENU	40
BOOT MENU	41
SECURITY MENU	42
SAVE & EXIT MENU	43
APPENDIX	44
COPYRIGHT	44
REGULATORY STATEMENT	44
<i>CE</i>	44
<i>Federal Communications Commission Statement</i>	44
<i>Declaration of Conformity</i>	45
<i>RF exposure warning</i>	45
<i>Canada, Industry Canada (IC) Notices</i>	45
<i>Battery Disposal</i>	46
<i>CLASS 1 LASER PRODUCT</i>	46
<i>WARNING EXPLOSION HAZARD</i>	47
SAFETY INSTRUCTIONS	48

Before You Start

Congratulations on your purchase of this tablet PC.

This rugged tablet PC is portable and provides users with maximum mobile computing experience in a wide range of working environments. Before you begin using your tablet PC, read this chapter to familiarize yourself with the main components installed in the system.

Package Contents

If any of following items is damaged, please contact your retailer.



Tablet PC



AC adapter



Power cord



*Digitizer Pen



Hand strap



*X-strap



*Vehicle Docking



*Office Docking



*Car adapter



*Shoulder strap



*Battery charger

 


NOTE

- The pictures are for reference only, actual items may slightly differ.
- *Optional items


Product Overview

Front View

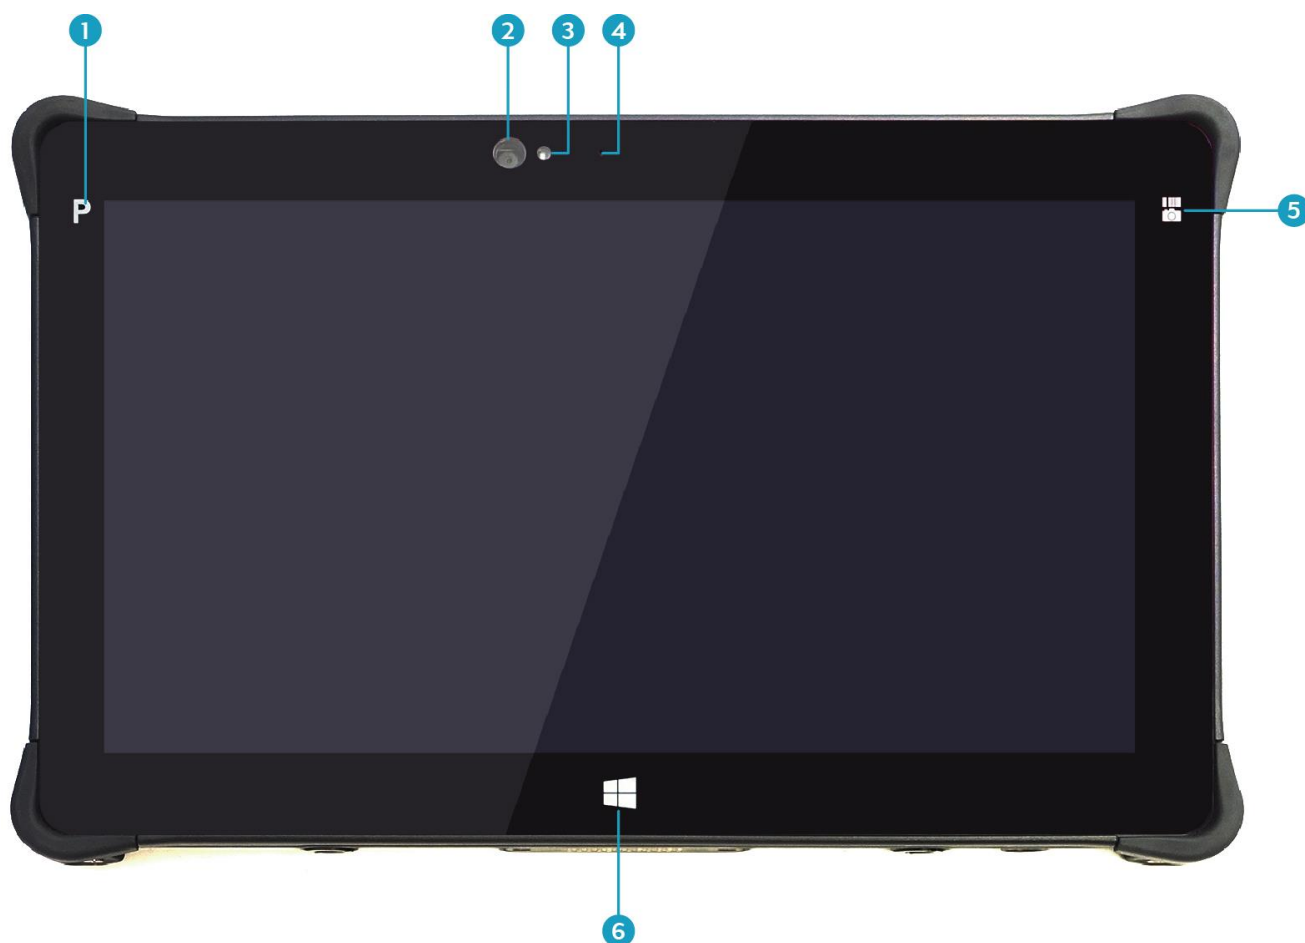

No.	Item	Description
1	Program button	Tap to enter the chosen program. (user definition)
2	Front camera	Use for video conference.
3	Ambient light sensor	Use to detect the current level of visible light in the surrounding environment.
4	Microphone	Record the surrounding sound.
5	Function button	The button functionality can be assigned via Quick Menu. <ul style="list-style-type: none">• Scanner button: Press to trigger the Barcode scan function if the barcode scanner is enabled.• Camera button: Press to take a picture.
6	Window button	Tap to return to the Start screen.

 Back View

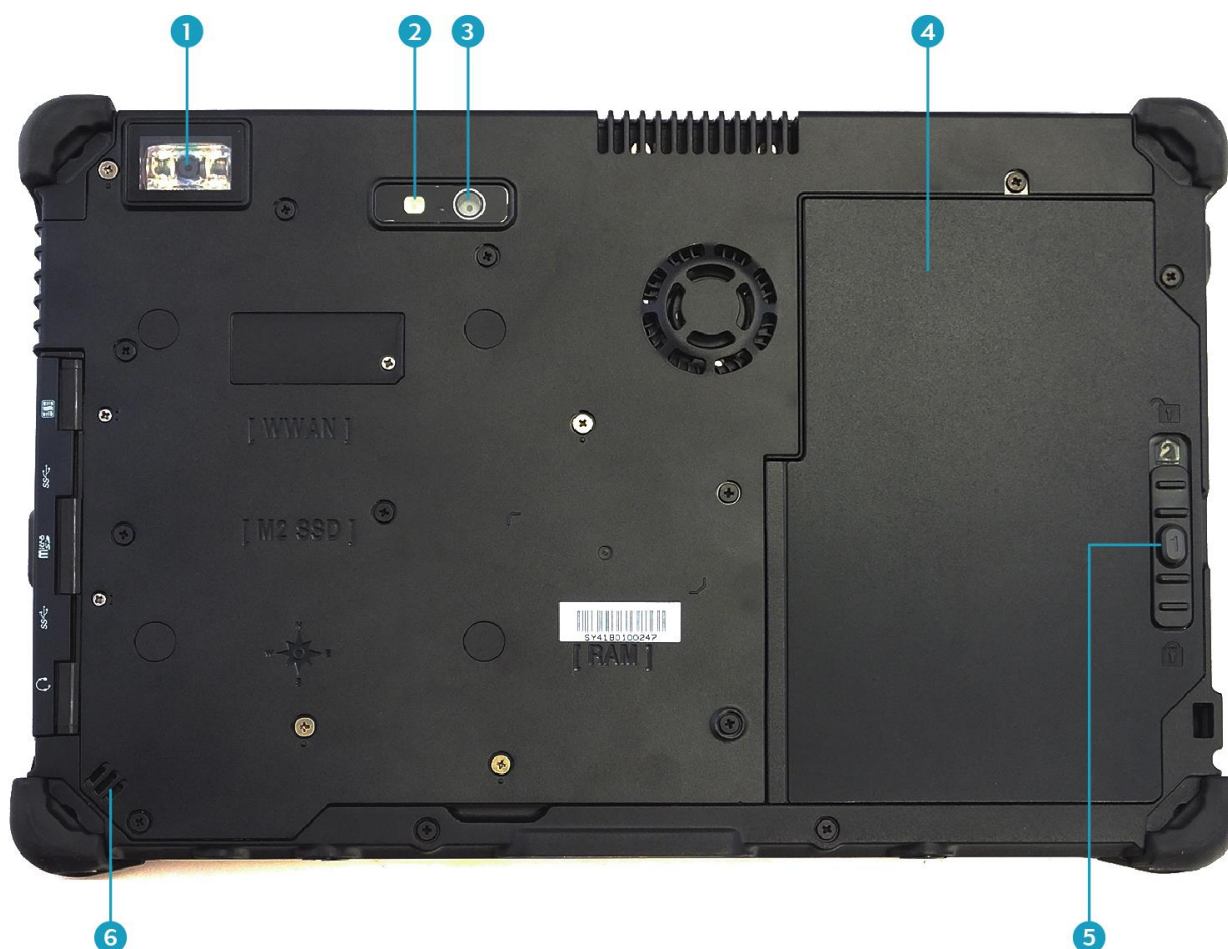

No.	Item	Description
1	Barcode scanner	Scan barcodes.
2	Camera LED flash	Provide additional lighting when taking pictures under low light environment.
3	Rear camera	Use to take pictures.
4	Battery compartment	Contain the battery.
5	Battery latch release button	Press and hold the button to slide the battery latch to the unlock position.
6	Speaker	Emit sound.

Right View



No.	Item	Description
1	Audio Combo jack	Connect a headphone or an external speakers or microphone.
2	USB 3.0 ports (x2)	Connect USB 3.0 peripheral devices.
3	Memory card slot	Use to insert memory cards to transfer pictures, music, and data between your Tablet PC and flash compatible devices. The card reader supports SD (Secure Digital), SDXC, SDHC, Mini-SD (with adapter), Micro-SD (with adapter).
4	SIM card slot	Use to insert a SIM card for WWAN, Gobi 3000, or LTE module connection.



Left View




No.	Item	Description
1	Power button	Press to turn your tablet PC on or off.
2	Volume buttons	Press to adjust the volume level.
3	Kensington lock slot	Connect a Kensington-compatible tablet PC security lock.



NOTE

 - When using the tablet PC without attaching an external keyboard, the three-finger salute (Ctrl+Alt+Del) function is defined by pressing the  and  buttons simultaneously. By pressing the two-button combination, it will switch to Windows Security screen, which lets you lock the device, switch to different user, sign out, change a password, enter Task Manager, or shutdown/reboot the device.

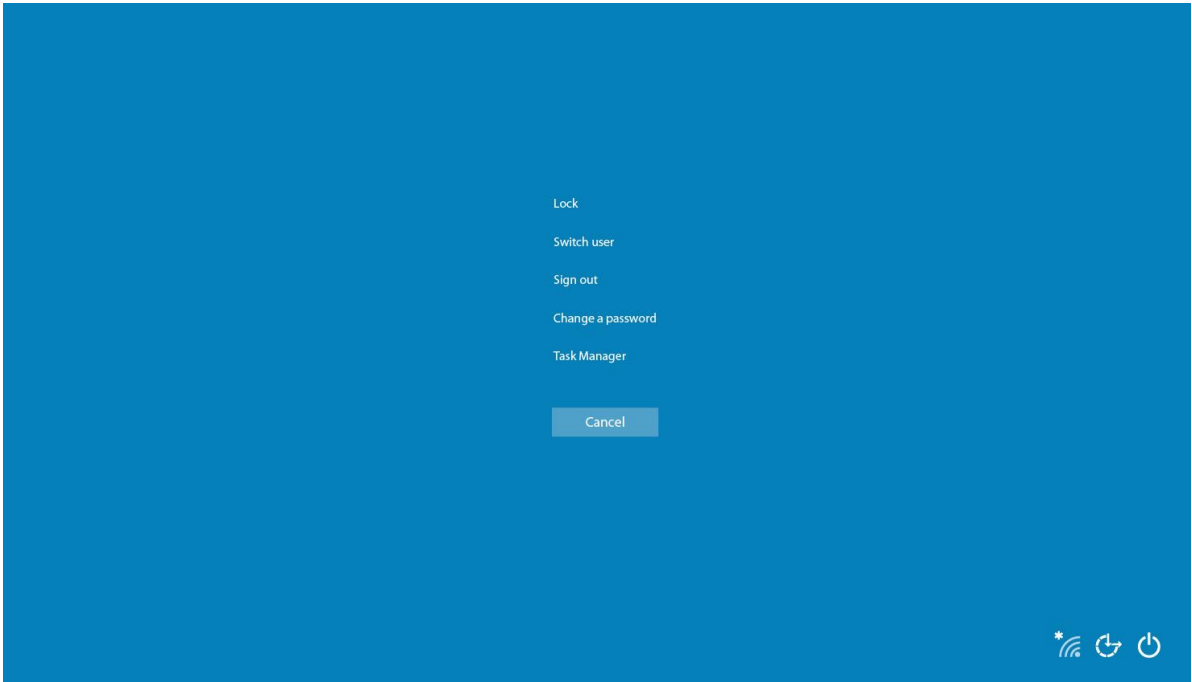

Bottom View






No.	Item	Description
1	Docking connector	Connect the tablet PC to a docking station.
2	DC-in jack	Connect the power adapter.

Status Indicators

The status indicators in the upper side of the tablet PC light up when a particular function of the tablet PC is active.



Icon	Item	Description
	Power	The LED always lights on (green) when the system is running. When the system is in sleep mode, the LED blinks.
	RF	Indicate the status of RF (WLAN, WWAN, GPS, or Bluetooth) communication. The LED always lights on (blue) when the function is enabled.
	Battery	Indicate the battery status: <ul style="list-style-type: none">• Green: when battery is fully charged (95% or above)• Orange: when battery is charging• Flashing orange: charging error• Red: when battery capacity is lower than 10%• Off: when discharged



NOTE

- On Windows 8.1 and 10 OS, you need to install the Quick Menu application in order to verify the RF signal status.

Getting Started

This chapter will help you get started using the device.

Installing the Battery

To install the battery, follow the steps below:

1. Align and insert the battery to the battery compartment.
2. Push completely until the battery locks into place.
3. Slide the battery latch to the lock position to secure the battery.



Charging the Battery

The Lithium-ion battery is not fully-charged upon purchase.

To charge the battery, follow the steps below:

1. Install the battery to your tablet PC. See procedures above.
2. Connect the AC adapter to the DC-in jack of your tablet PC.
3. Connect the AC adapter to the power cord.
4. Plug the power cord to an electrical outlet.

When to replace the Battery Pack

The battery performance gradually decreases over time and usage. We recommend you to replace your battery pack after 18 to 24 months of usage.

Removing the Battery

To remove the battery, follow the steps below:

1. Press and hold the battery latch release button to slide the battery latch to the unlock position.



2. Remove the battery out of the battery compartment.



Connecting the Power

Your tablet PC can be powered up using the AC adapter or the Lithium-ion battery.

Connecting the AC Adapter

The AC adapter powers up your tablet PC and charges the battery.



1. Connect the AC adapter to the DC-in jack of your tablet PC.
2. Connect the AC adapter to the power cord.
3. Plug the power cord to an electrical outlet.

Using Battery Power

1. Install a charged battery in the battery compartment.
2. Remove the AC adapter (if plugged). Your tablet PC will automatically use the battery power.




NOTE

- If your tablet PC is connected to an electrical outlet and the battery is installed, your tablet PC uses power from the electrical outlet.

Starting Your Tablet PC

Turning On Your Device

 
Press the  button until the Power LED lights up.

Turning Off Your Device

It is important to properly shut down your tablet PC to avoid the loss of unsaved data. To shut down your tablet PC, do the following:

Tap  > **Power** > **Shut down**.

Wait for your notebook to turn off power completely before removing the power source (if necessary).

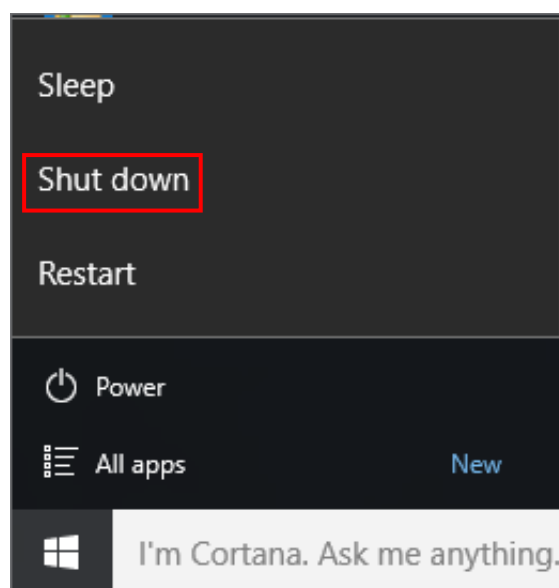


Operating Your Tablet PC

This chapter will guide you on how to use your Tablet PC.



 Using the Quick Menu

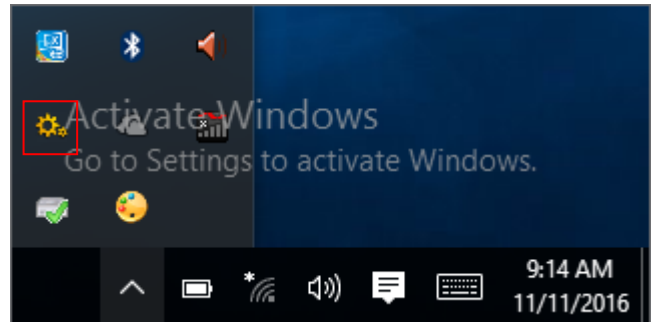






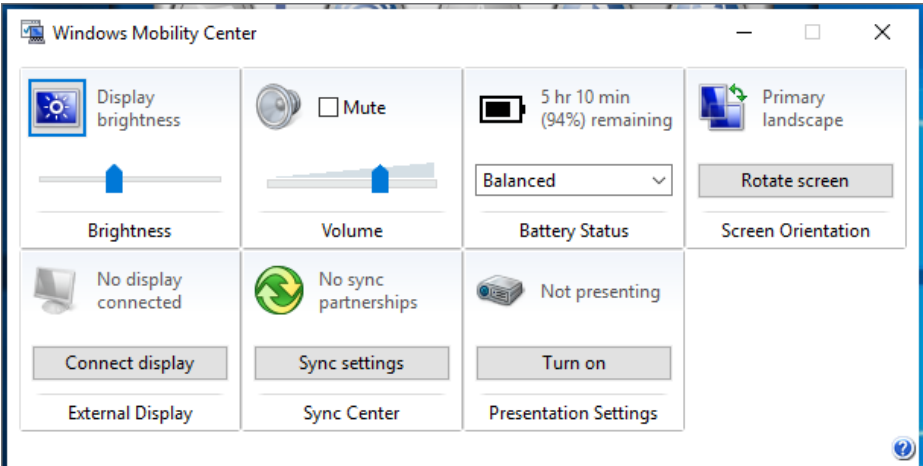 

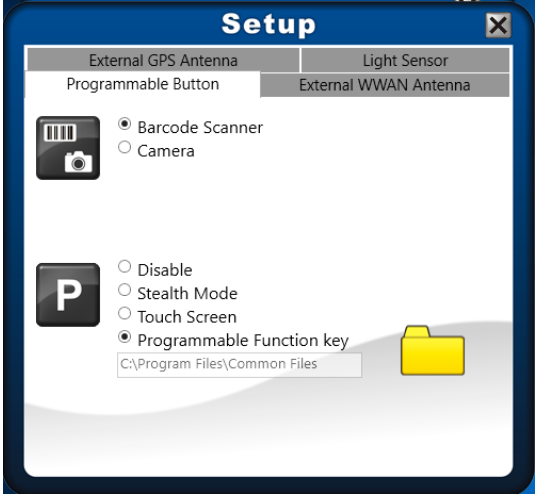 
To enter the Quick menu, tap the arrow on the task bar to display hidden icons. Then tap the Quick Menu icon (⚙️). You can also access the Quick menu in the *All apps* list.


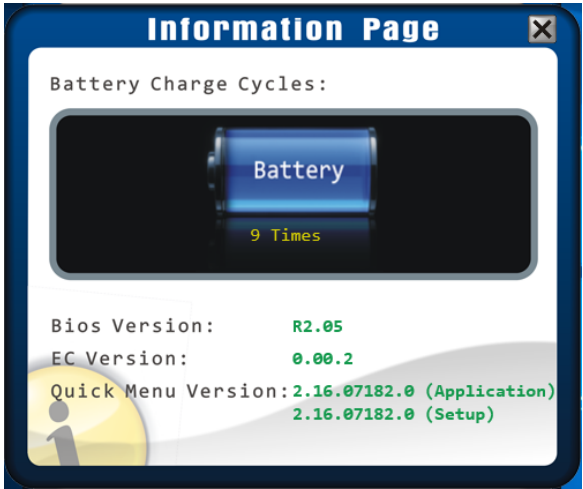 


Quick Menu Overview



Icon	Item	Description
	Airplane mode	Tap the icon to enable/disable airplane mode.  NOTE <ul style="list-style-type: none"> When the Airplane mode is enabled, the wireless network (WLAN and WWAN), Bluetooth, and GPS will be automatically disabled.

Icon	Item	Description
	WLAN	Tap the icon to enable/disable the Wi-Fi (WLAN) function.
	WWAN	Tap the icon to enable/disable the WWAN function.
	Bluetooth	Tap the icon to enable/disable the Bluetooth function.
	GPS	Tap the icon to enable/disable the GPS function. (Windows 8 and Windows 10 only)
	Barcode	Tap the icon to enable/disable the Barcode function.
	Auto-rotate	Tap the icon to enable/disable the Auto-Rotate screen function.
	Mobility center	Tap the icon to adjust brightness, screen orientation, volume, external display, battery status, sync, wireless network, and presentation settings. 
	Setup	Tap the respective tab to set hotkey, light sensor, external GPS antenna, and external WWAN antenna settings. For details, refer to "Configuring the SETUP Menu Settings". 

Icon	Item	Description
	Information	<p>Tap the icon to view the battery charge cycle, Bios version, EC version, and Quick Menu version.</p> 

 


NOTE

- If the icon is gray (i.e. ) , this indicates the current function is disabled.

Configuring the SETUP Menu Settings

 
In Quick Menu, you can set the following settings via Setup menu:

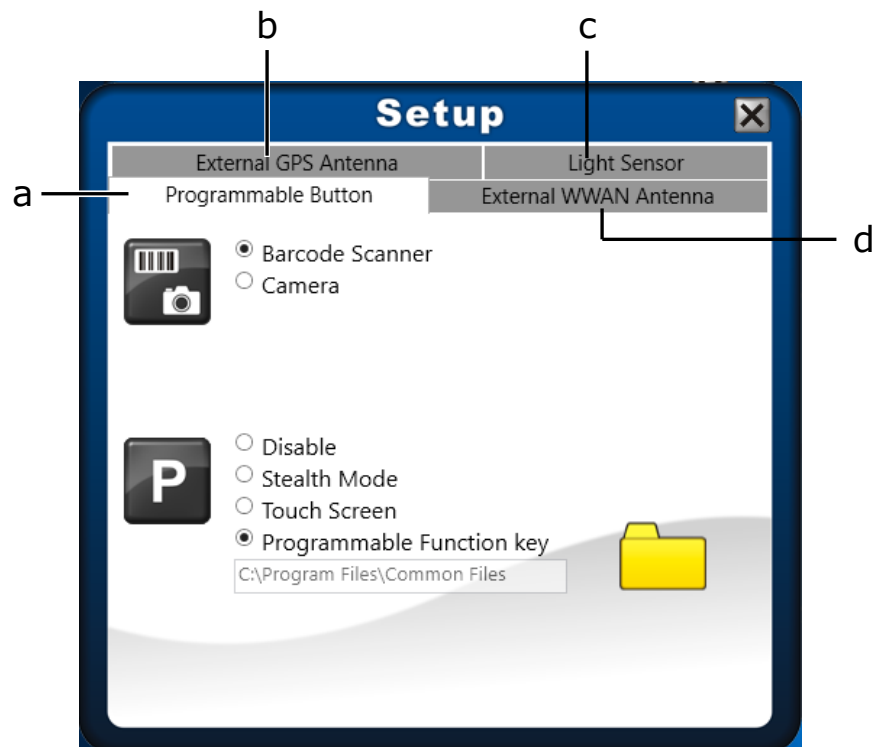


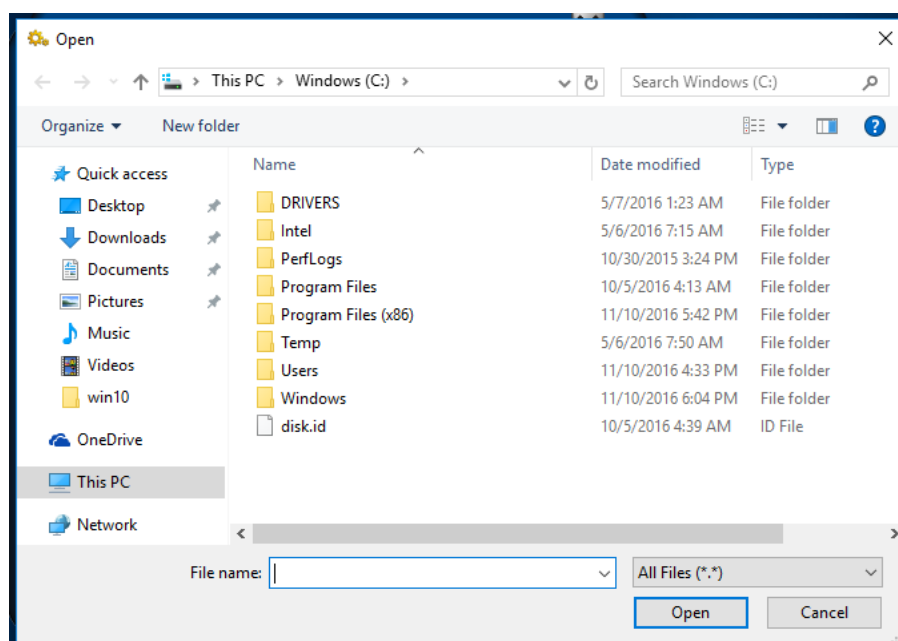 
- a. Programmable Button
- b. External GPS Antenna
- c. Light Sensor
- d. External WWAN Antenna

Configuring Hotkey

Tap the **Programmable Button** tab to configure the **Function** or **Program** button.

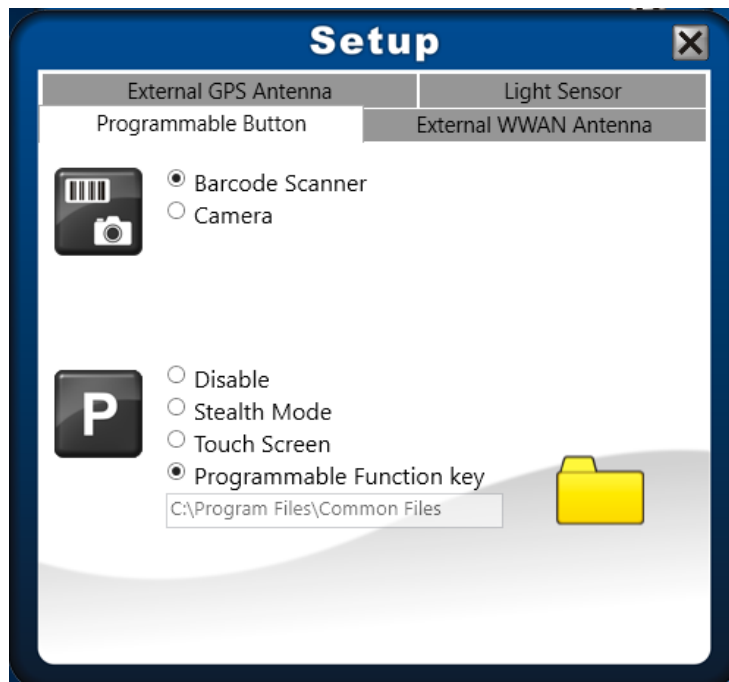 


- If the device is not installed with a barcode scanner, the **Function** button can be set as the shutter button when using the Camera.
- Under the **Program** button, select one of the following option to assign a function to the **Program** button:
 - a. **Stealth Mode**: Select this option to allow the system to enter/leave the Stealth mode by pressing the **Program** button.
 In Stealth mode, press the **Program** button to turn off the LCD backlight, LEDs (LED indicators and keypad backlight), speakers, camera flash, and RF devices (except GPS).
 - b. **Touch Screen**: Select this option to allow the system to enable/disable the Touch Screen function by pressing the **Program** button.
 - c. **Programmable Function key**: Select this option to assign an application to the **Program** button. Then do the following:
 - I. Tap the folder icon () to set up an application for the **Program** button.
 - II. Select the desired application and tap **Open**.



Configuring External WWAN Antenna Switching Mode


Tap the **External WWAN Antenna** tab to enable/disable the device to automatically switch to the external WWAN antenna when it is affixed on a docking station.

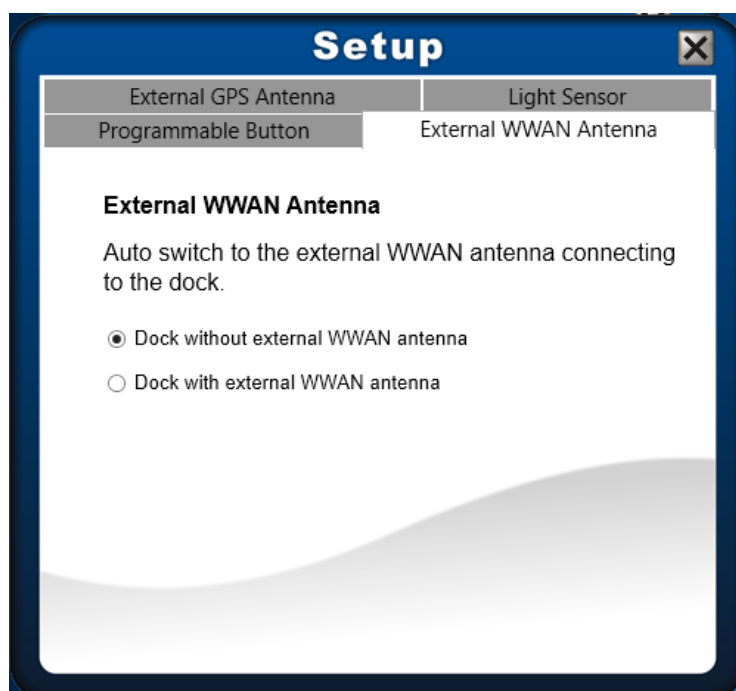

- **Dock without external WWAN antenna:** The device will NOT be automatically switched to the external WWAN antenna when docking.
- **Dock with external WWAN antenna:** The device will be automatically switched to the external WWAN antenna when docking.

Configuring Light Sensor Settings

 Tap the **Light Sensor** tab to enable/disable the automatic light sensor function, define the range of illumination settings, and adjust the brightness level.

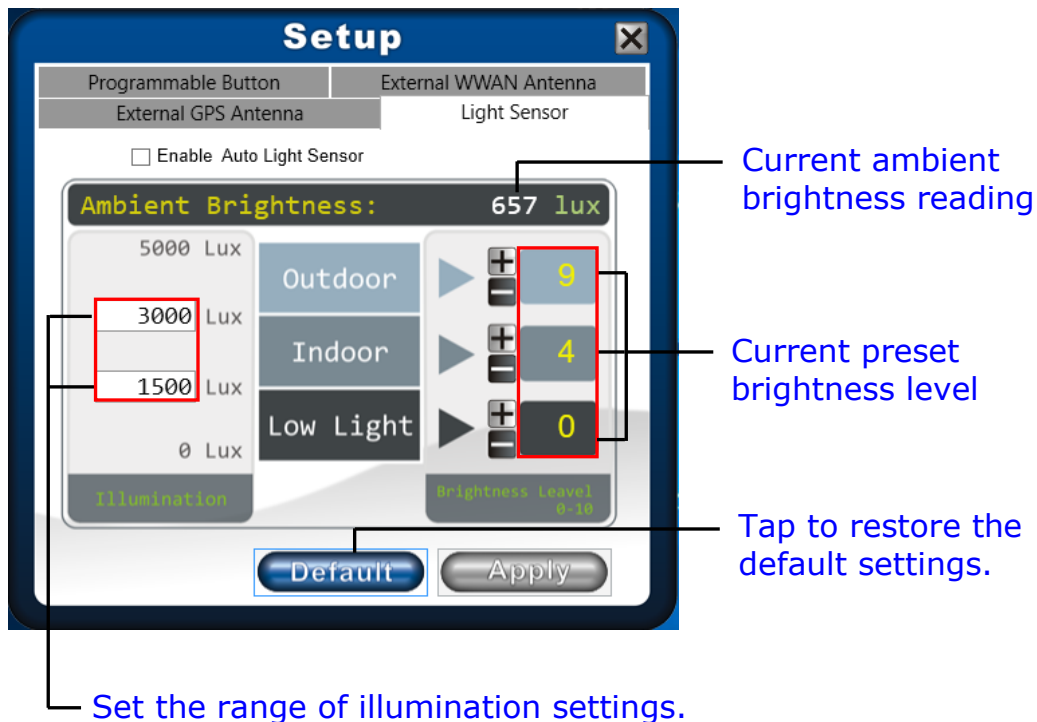

To setup the light sensor settings, do the following:

- To customize the illumination range according to the ambient lighting, enter the desired value in the first and second data box.

As an example in the above illustration:

 
- Outdoor (5000 ~ 3000 lux)
- Indoor (3000 ~ 1500 lux)
- Low Light (1500 ~ 0 lux).

- To adjust the brightness level according to the ambient light, tap or to adjust the setting (0~10).
- To save all preset settings, tap **Apply**.
- To enable the automatic light sensor function, tap the **Enable Auto Light Sensor** checkbox.

The system will automatically adjust the LCD brightness according to the preset settings.

Configuring External GPS Antenna Switching Mode

Tap the **External GPS Antenna** tab to enable/disable the device to automatically switch to the external GPS antenna when it is affixed on a docking station.

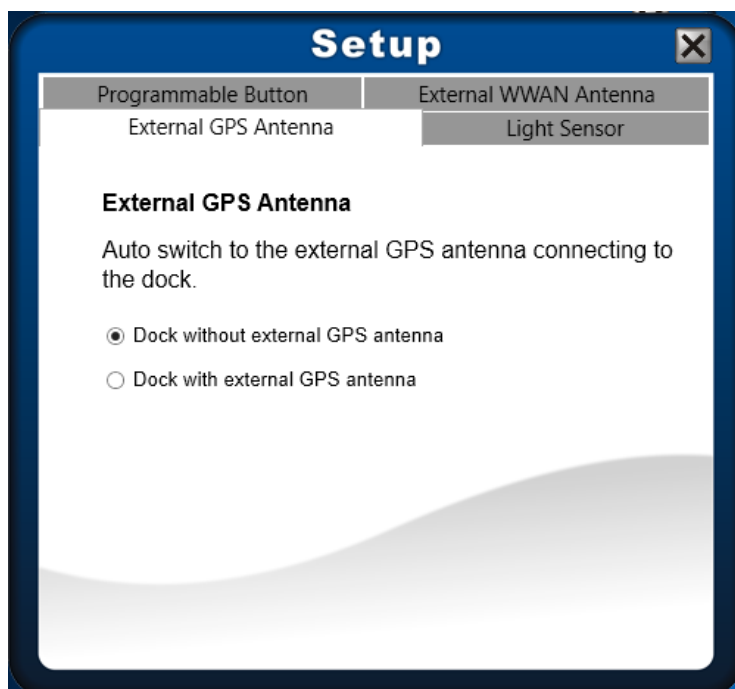

- **Dock without external GPS antenna:** The device will NOT be automatically switched to the external GPS antenna when docking
- **Dock with external GPS antenna:** The device will be automatically switched to the external GPS antenna when docking.

 
Using the Camera

Using the Camera application, you can use this tablet PC to take photos or videos.


Opening Camera App (Win8 and Win10 only)

To access the Camera application, do one the following:

- a. Tap  > **All apps** > **Camera**.

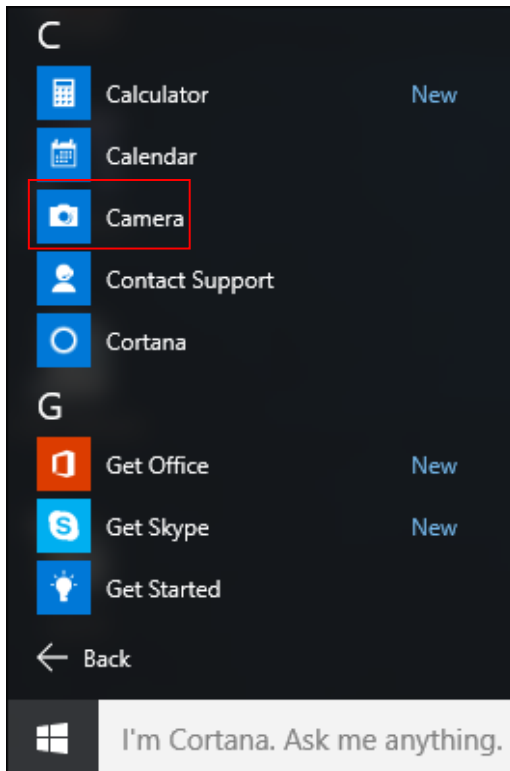


 - b. In Cortana search box, enter 'camera'. Then tap **Camera**.

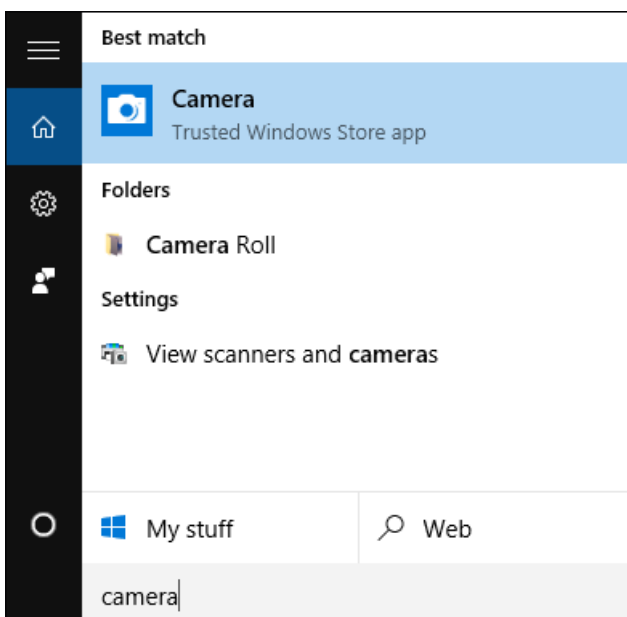

Taking Photos

 Tap  to capture a photo.

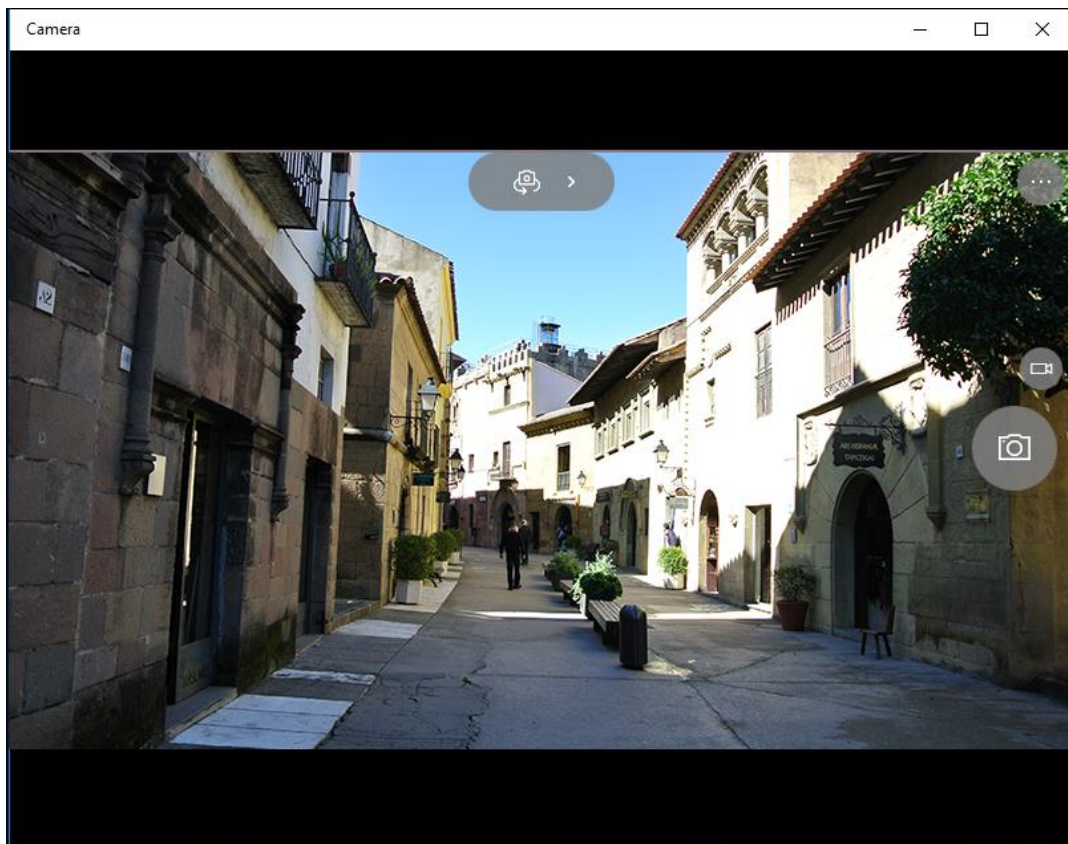




NOTE

- To switch between front and rear cameras, tap .

 Recording Videos

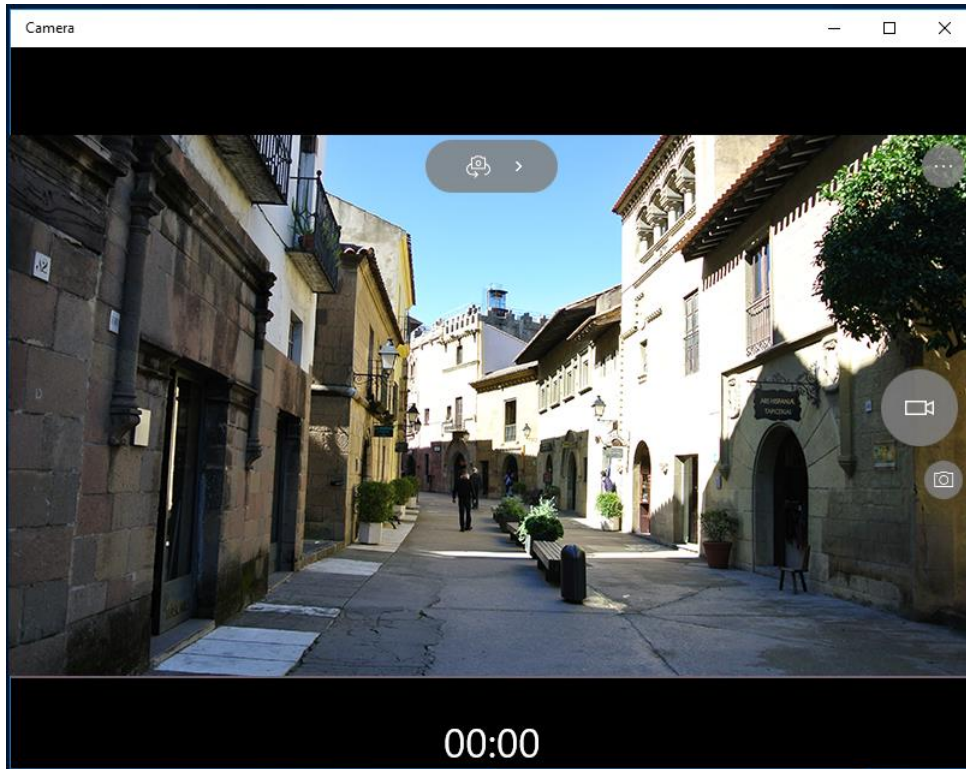
1. Tap  to switch to Video mode.



2. Press  to start recording a video. The recording time appears on the bottom on the screen.
3. To stop recording the video, tap .

Adjusting Brightness

 1. Tap ➤ to switch to Pro mode.
2. Tap ☯ to display the brightness control slider.
3. Do the following:
 - Tap and drag ☯ upwards to brighten your photo or video.

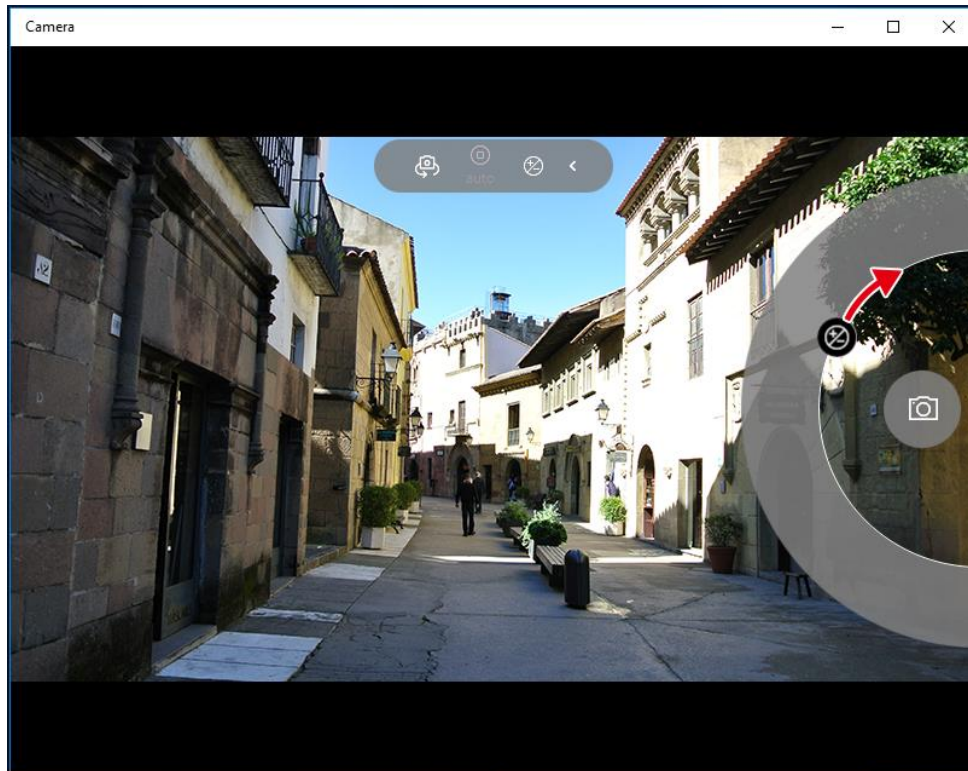

- Tap and drag ☯ downwards to darken your photo or video.

 
Setting Photo Timer

1. Tap **...** to enter the Configuration menu.
2. Tap **Photo timer** to enter the Photo timer submenu.
3. Select the desired time delay.




NOTE

- Check the "Continue taking photos every X seconds until I press the camera button again" checkbox to allow the Camera app to continuously take photo at the chosen time delay.
4. When the settings are complete, tap **✓** to apply them.

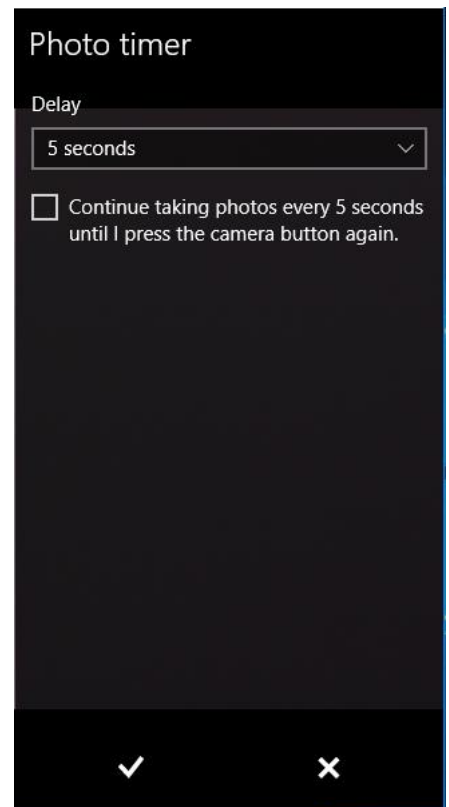

Configuring Camera Settings

 1. Tap **...** to enter the Configuration menu.
2. Tap **Settings** to enter the Settings submenu.

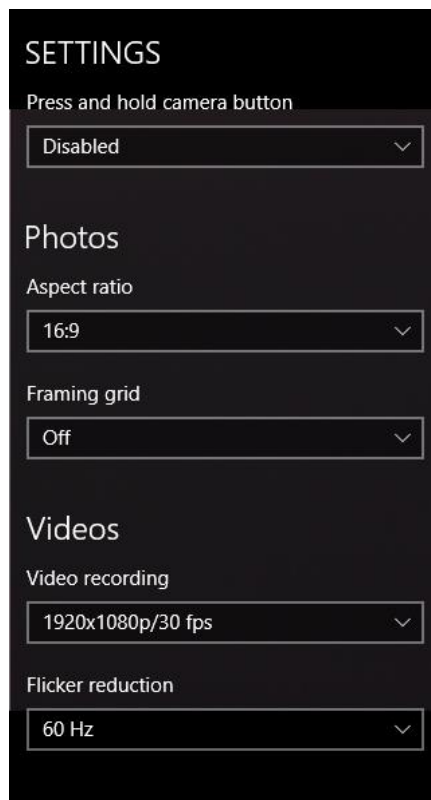


3. Select the desired menu option and setting.

Menu Option	Description
Press and hold camera button	Set the action when you tap and hold the Camera button. <ul style="list-style-type: none">• Video – Tap and hold the Camera button to create a video.• Photo burst – Tap and hold the Camera button to take photos continuously.• Disabled – Disable the function.
Aspect ratio	Select the aspect ratio of the photos.
Framing grid	Show or hide the framing grid lines.
Video recording	Select the video resolution.
Flicker reduction	Select 50 Hz or 60 Hz to reduce the flickering that may occur when recording video under fluorescent light.
Related settings	Select the related settings that can only be configured in Settings app.

Viewing Photos/Videos

 After taking a photo or recording a video, tap the thumbnail (in the upper-left corner) to view the most recent photo or video taken.

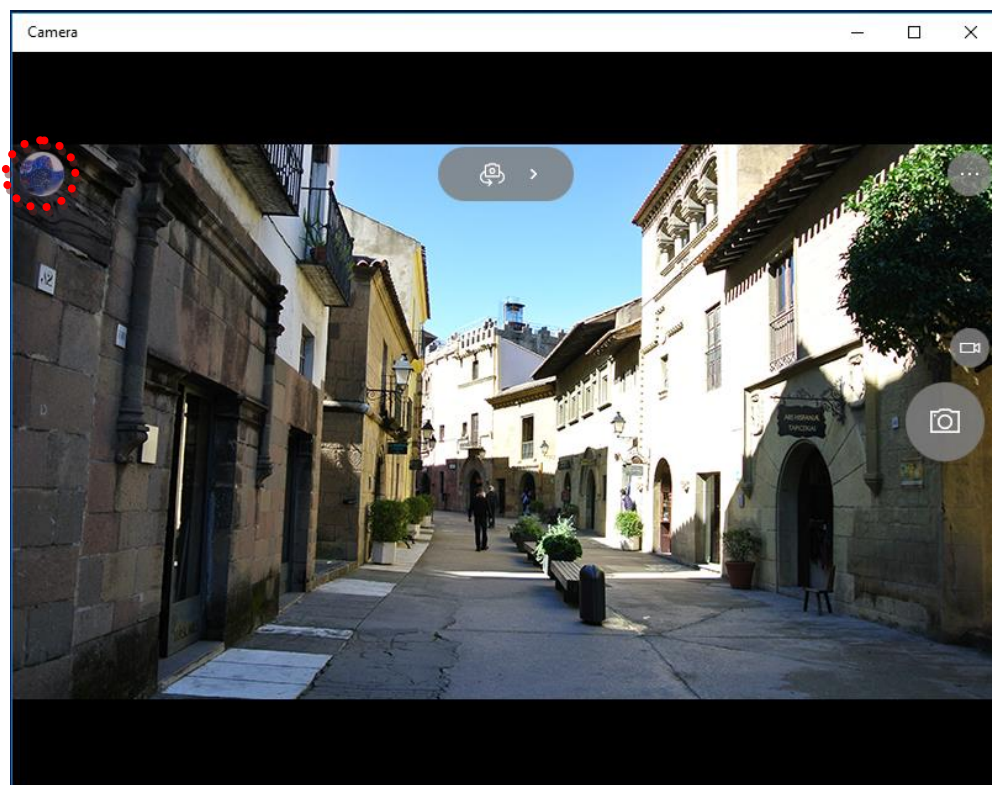

Swipe right to see other photos or videos in your collection.

Making Connections

This chapter will guide you on installing peripheral devices to maximize the use of your tablet PC.

Installing the Memory Card

Your Tablet PC supports different types of memory cards to provide faster data transfer.

Supported types: SDHC, SDXC

To insert a memory card:

1. Push down and pull to open the I/O port cover.
2. Push the memory card into the memory card slot until it clicks into place.



Installing the SIM Card

You can use a SIM card for wireless internet access.



NOTE

- Check the availability of service and plan rates of data connection with your network service provider.

To insert a SIM card:

1. Push down and pull to open the I/O port cover.
2. Push a valid SIM card into the SIM card slot until it clicks into place.



Connecting the Microphone/Headset

Your tablet PC is equipped with audio combo jack that enables you to use the headset or microphone.

- ❖ To connect to a headset, open the I/O port cover and plug the stereo headphone cable into the audio combo jack of your device.



- ❖ To connect to a microphone, open the I/O port cover and plug the microphone cable into the audio combo of your device.



NOTE

- The headset and microphone are not included in the package. They are sold separately.

Connecting USB Devices

You can connect your tablet PC to other USB devices, such as a mouse, keyboard, digital camera, printer, or an external hard disk drive.



1. Push down and pull to open the I/O port cover.
2. Connect one end of the USB cable to the USB port of your device.
3. Connect the other end of the cable to the USB device (if necessary).



NOTE

- The USB cable is not included in the package. It is sold separately or it may come with your USB device.

Connecting to Wireless Connections

 
Your tablet PC can connect and communicate with other Bluetooth-enabled devices.

Connecting to a Bluetooth Device

Your tablet PC can connect and communicate with other Bluetooth-enabled devices.

To add a device, follow the steps below:

1. Open the Quick menu.
2. Tap the Bluetooth icon (📶) to turn on the Bluetooth function.

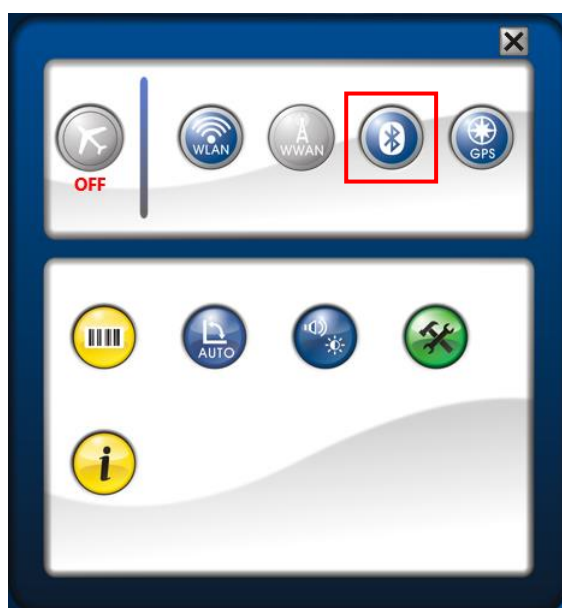


3. Tap the arrow icon (⤴) on the system tray to display hidden icons.
4. Tap the Bluetooth icon (📶).
5. Tap **Show Bluetooth Devices**.

A list of discovered Bluetooth-enabled devices appears on the screen.




NOTE

 
- If the device that you want to add does not appear on the screen, please check if the device is turned on and discoverable.

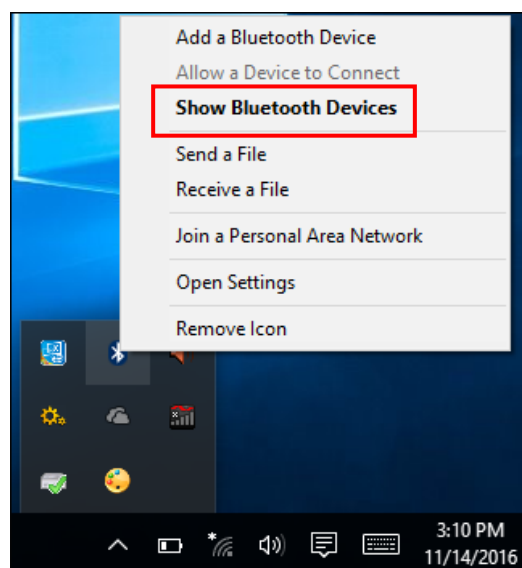

 6. Select the device you want to connect, then tap **Pair** to start pairing.

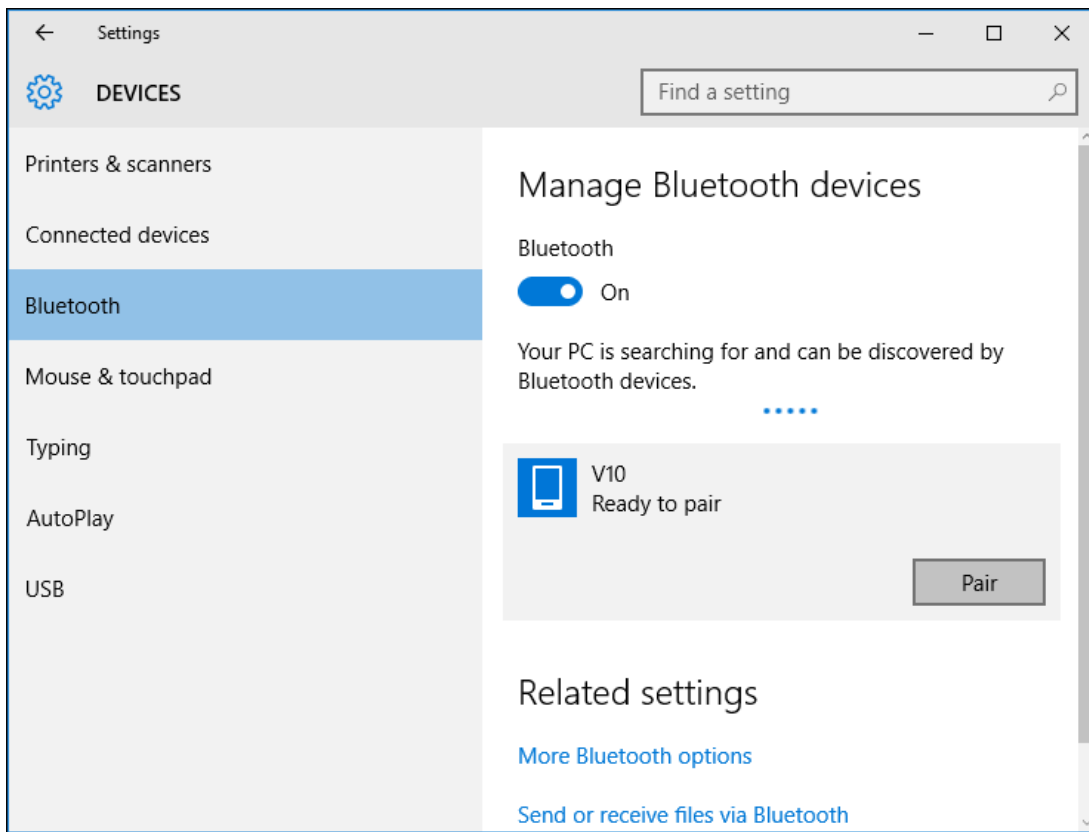

 7. Verify the pairing code on the screen of your device and pairing device match. If the passcodes match, tap **Yes** to complete the pairing connection.

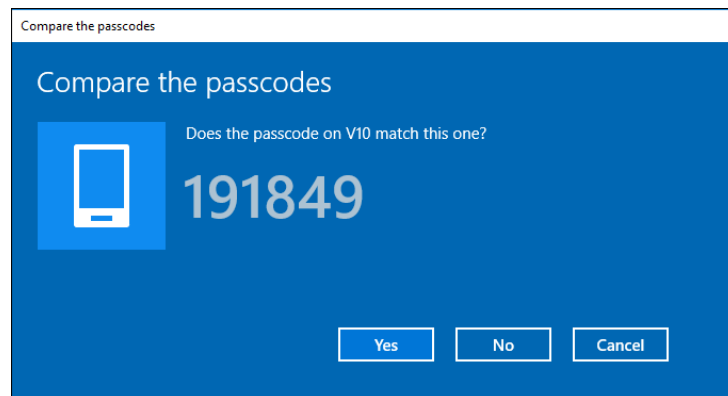


NOTE

 
- Most Bluetooth-enabled devices need to be paired with your tablet PC. The PIN you enter on the tablet PC must be the same PIN to be entered on the other Bluetooth device.
- Once a partnership has been created, connecting to that device again will no longer require entering the PIN.
- To disconnect from the Bluetooth-enabled device, select the device in the Bluetooth menu and tap **Remove device**.


Connecting to a Wireless Local Area Network


Your tablet PC comes with a WLAN module. A wireless network can be added either when the network is detected or by manually entering the settings information.

To connect, follow the steps below:

1. Open the Quick menu.
2. Tap the WLAN icon () to turn on the wireless network function.

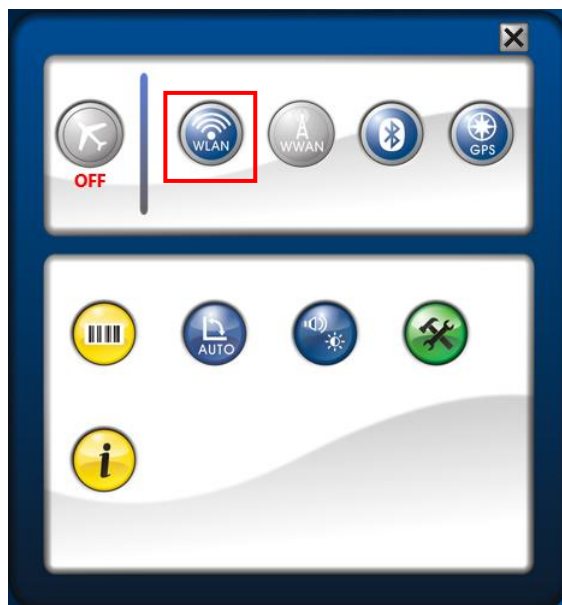

 3. Tap the wireless network icon () on the system tray.
4. Available wireless network connections are displayed. Tap the desired wireless network.

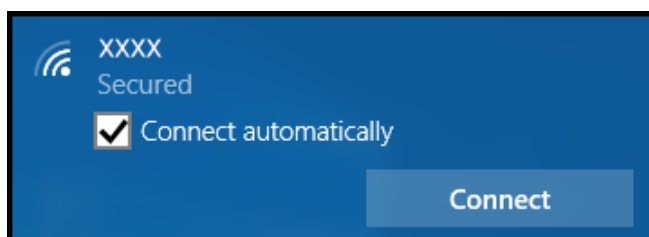


5. Tap **Connect**.
Some networks require a network security key or a password.



TIP

Check **Connect automatically** box to automatically connect to this network when it is available.

 6. Enter the network security key.

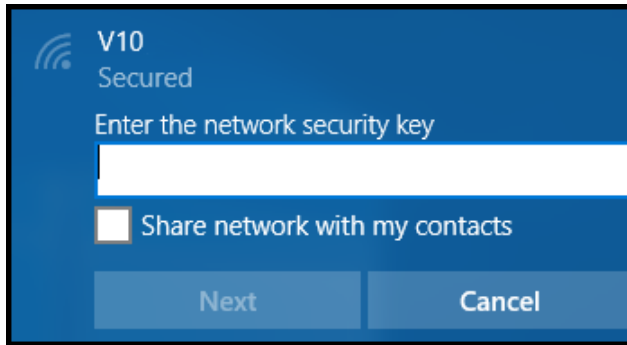

7. Tap **Next**. After the connection is established, you can see the wireless icon (📶) in the Notification area.




NOTE

- Wi-Fi access requires service from a wireless service provider. Contact your service provider for more information.
- Actual wireless connectivity will depend on system configuration. Please contact your dealer for more information.
- To disconnect from the wireless network, select the network in the wireless in the wireless network list and tap **Disconnect**.



Connecting to a Wireless Wide Area Network (WWAN)

With **WWAN** function, it allows your tablet PC to connect to the Internet using mobile or cellular data networks.

To enable the function, follow the steps below:

1. Insert a valid SIM card into the SIM card slot.
2. Open the Quick menu.
3. Tap the WWAN icon () to turn on the WWAN function.



4. Launch **Skylight** application.
 - On Windows desktop, tap "Skylight" ().
 - Tap  > **Skylight**.
5. Tap **Connect** to enable the Internet connection via mobile data network.



6. To disconnect the connection, tap **Disconnect**.



NOTE

- Turn off the notebook before you insert the SIM card.



Using the BIOS Setup Utility

Your tablet PC has a BIOS setup utility which allows you to configure important system settings, including settings for various optional functions of the tablet PC. This chapter explains how to use the BIOS setup utility.

BIOS Setup Menu

The BIOS Setup Utility allows you to configure your Tablet PC basic settings. When you turn your tablet PC on, the system reads this information to initialize the hardware so that it can operate correctly. Use the BIOS setup utility to change your tablet start-up configuration. For example, you can change the security and power management routines of your system.

Starting the BIOS Setup Utility

You can only enter the BIOS setup utility as the tablet PC is booting, that is between the time you turn on the tablet PC and before the Windows interface appears.

If your tablet PC is already on, shut down your tablet PC completely (power off) and restart it and then press the **Delete** button to enter the setup utility.



NOTE

- You have to connect your device with an external keyboard first before starting the BIOS Setup Utility.



Navigating and Entering Information in BIOS


Use the following keys to move between fields and to enter information:

Keyboard	Description
← →	Selects screen.
↓ ↑	Moves up/down to select items.
Enter / Double-click	Confirms the selection and enters the selected menu screen.
+ / -	Changes an option for the selected items.
F1	Displays the Help screen.
F2	Invokes the previous values.
F3	Loads optimized default values.
F4	Saves the changes and exits Setup.
Esc / Right-click	Exits any section. If you wish to exit the BIOS utility without saving changes or go to the main menu, then press this key.

Users are allowed to enter new values to replace the default settings in certain fields, and the rest of the fields are specified by system default parameters and cannot be modified by users. Reverse the attribute of the main options and press the **Enter** button to enter into the submenu. Press the **Esc** button to return to the previous configuration page.

Main Menu

 The Main menu displays the system overview information about the device, including the system date and time.

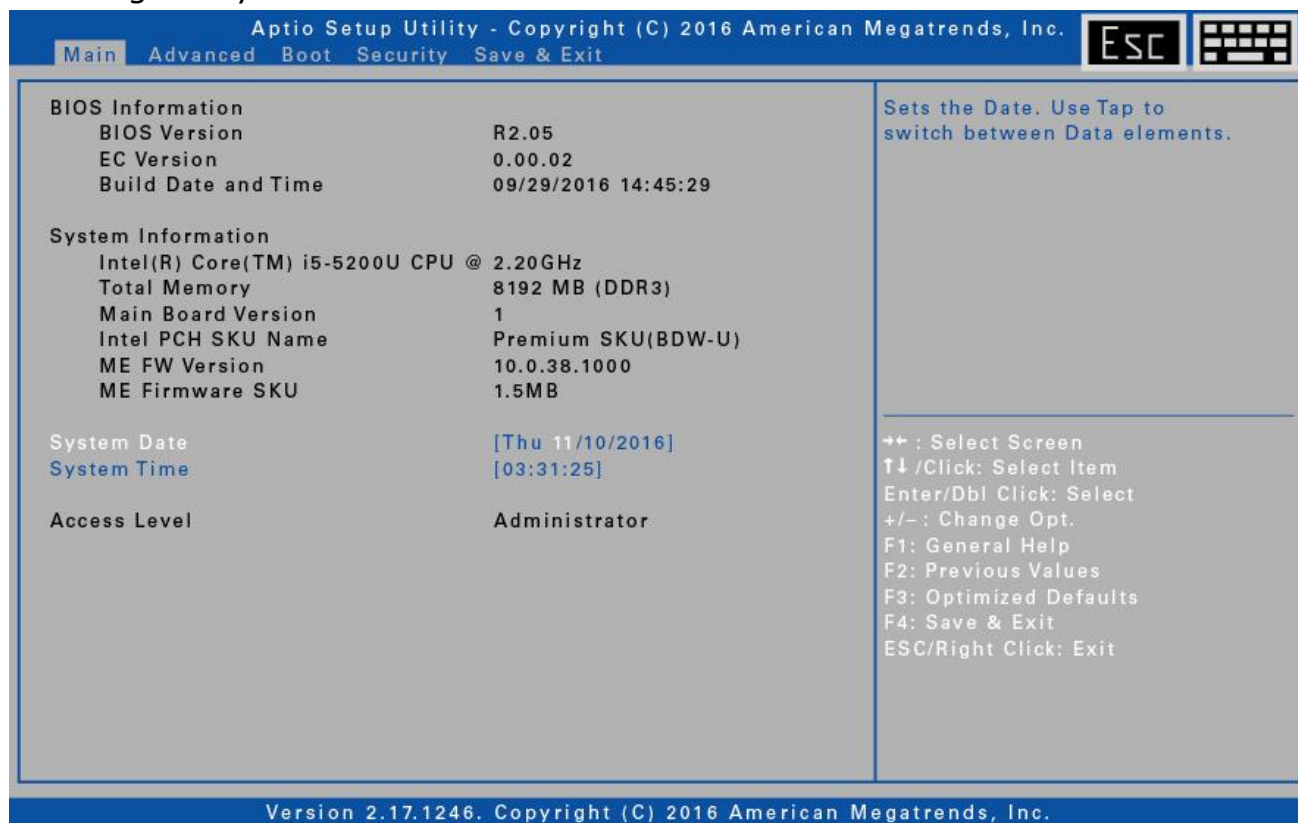

Item	Description
BIOS Information	Display the BIOS version detected during boot up.
System Information	Display the CPU type and speed, total memory, mainboard version, Intel PCH SKU name, ME FW version, and ME Firmware SKU.
System Date	Set the system date.
System Time	Set the system time.
Access Level	Display the access level user.

Advanced Menu


The Advanced menu allows you to configure specific system settings.



Item	Description
Wake on LAN/WLAN	Enable/disable the system to remotely wake on the device from Sleep state (S4/S5). Wake on WLAN only supports S4.
Wake on power from dock	Enable/disable the system to wake on the device with the power from the docking station.
BARCODE	Enable/disable the barcode function.
Switch to external WWAN antenna	Display the status of auto switch function to external WWAN antenna when docking.
Switch to external GPS antenna	Display the status of auto switch function to external GPS antenna when docking.
Radio Devices Configuration	Enable/disable radio devices.
FAN Calibration	Enable you to do fan calibration.
Battery Calibration	Enable you to do battery calibration.
Trusted Computing	Configure Trusted Computing settings.

Boot Menu

 
The Boot menu allows you to configure the boot settings and boot sequence.

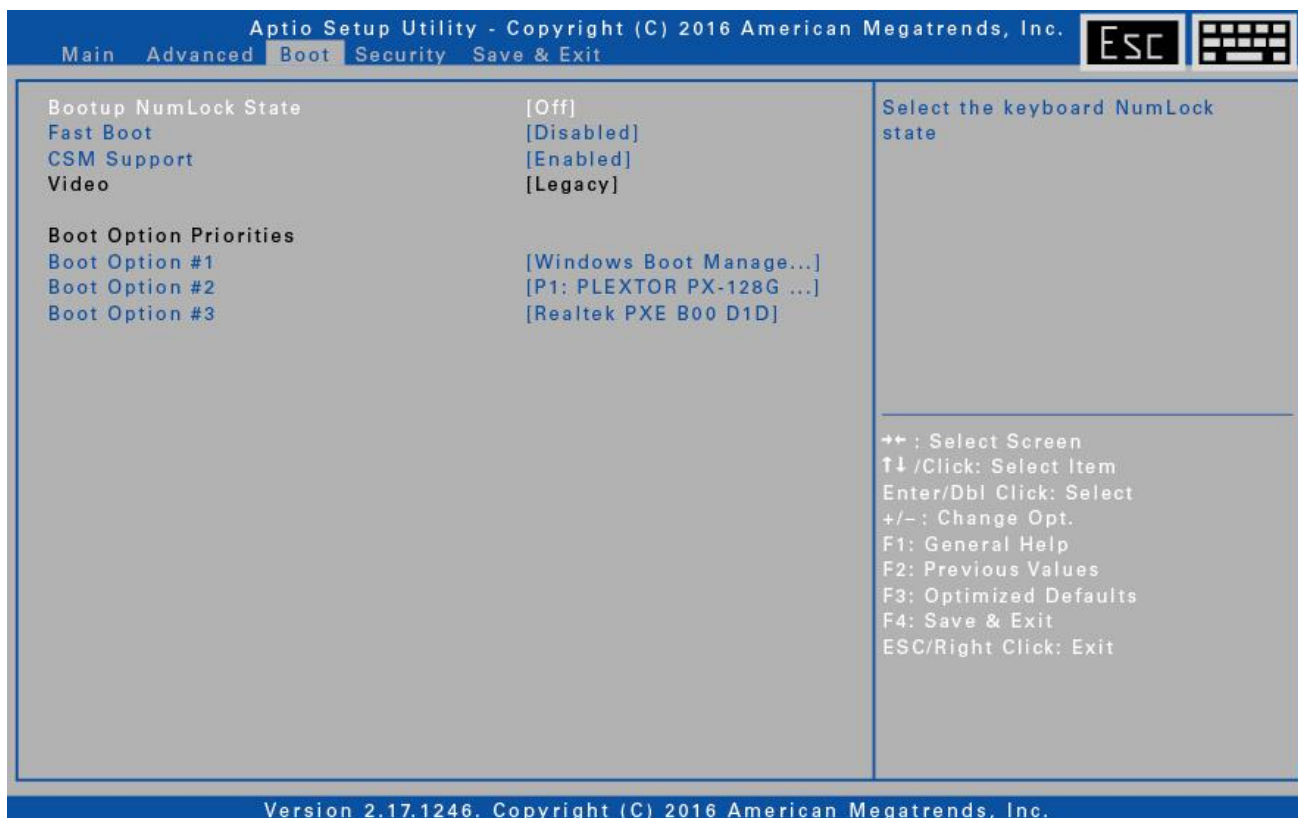

Item	Description
Bootup NumLock State	Select the keyboard NumLock state.
Fast Boot	Enable/disable boot with initialization of a minimal set of devices required to launch active boot option. It has no effect for BBS boot options.
CSM Support	Enable/disable the system to launch an older OS.
Video	Control the execution of the selected Video OpROM type.
Boot Option Priorities	Set the system boot order.

Security Menu

 
The Security menu allows you to set or change the Administrator and User passwords.

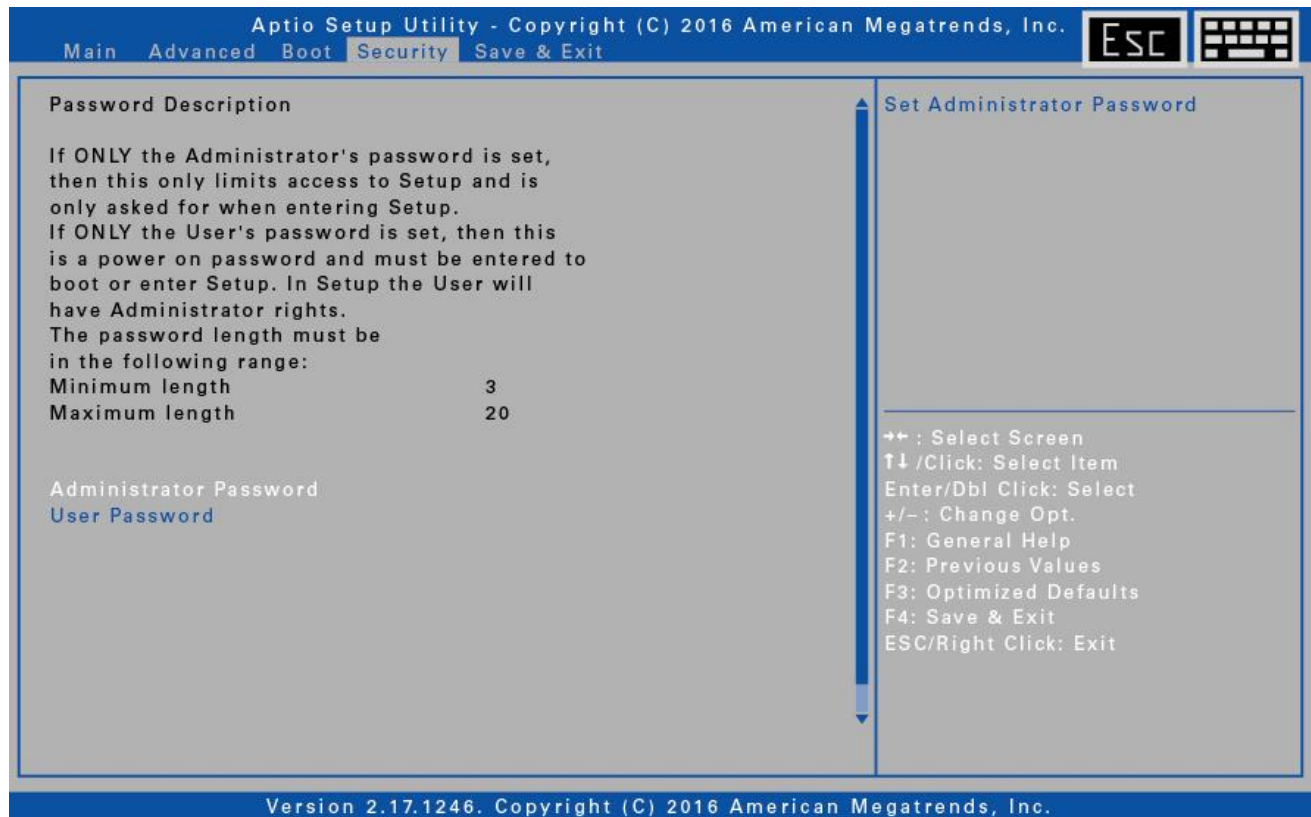

Item	Description
Administrator Password	Create or change the Administrator password.
User Password	Create or change the User password.

Save & Exit Menu

 The Save & Exit menu allows you to save/discard the changes and restore the default values for all setup options before leaving the BIOS Setup Menu.

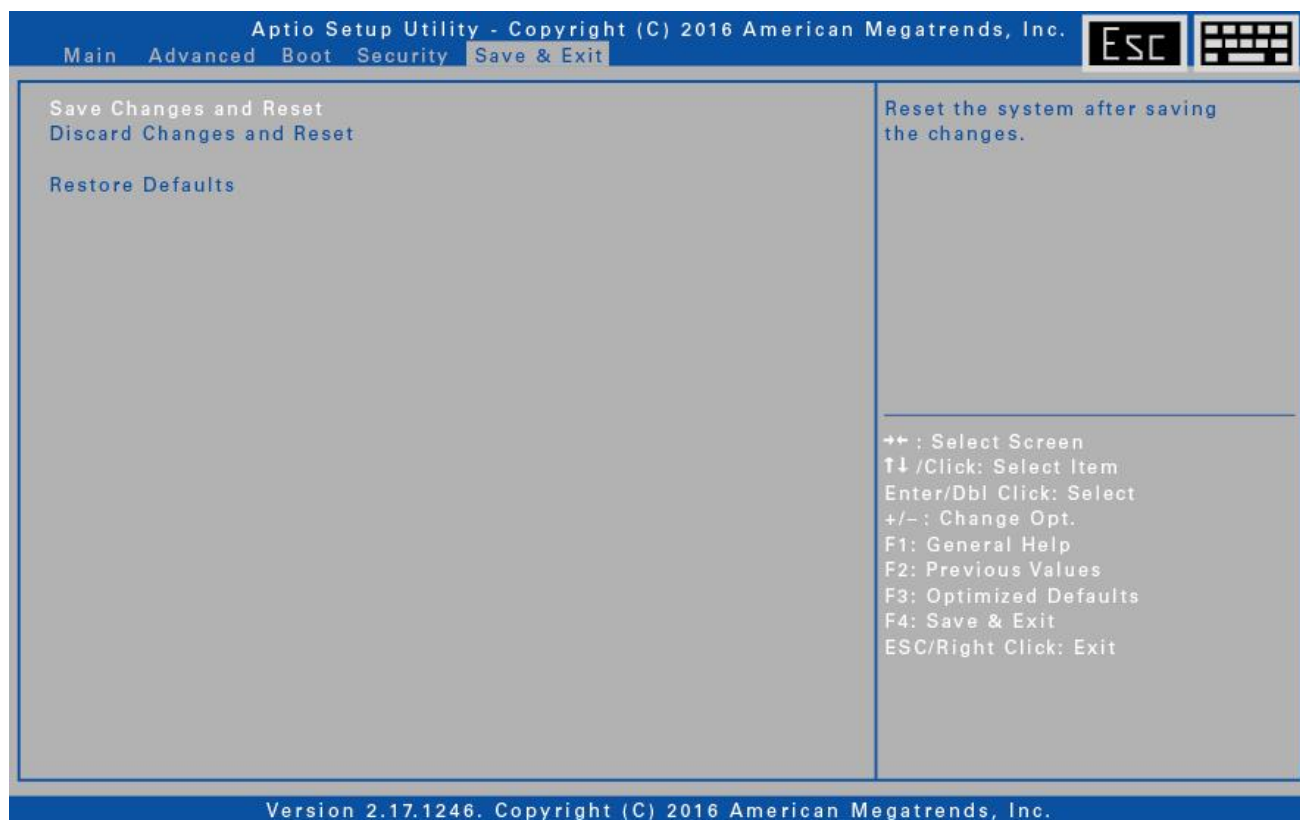

Item	Description
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Reset	Reset the system setup without saving any changes.
Restore Defaults	Restore the default values for all the setup options.

Appendix

Copyright

Copyright© 2016. All rights reserved.

No part of this user manual may be transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of the manufacturer. Information is subject to change without prior notice.

Regulatory Statement

CE



Declaration of Conformity (DoC)

DURABOOK declares that this product is in compliance with the essential requirements and other relevant provisions of Eu Council Directives.

Federal Communications Commission

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and shielded AC power cable must be employed with this equipment to insure compliance with the pertinent RF emission limits

governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

SAR Value: 0.317W/kg

This device is operation in 5.15 – 5.25GHz frequency range, then restricted in indoor use only, Outdoor operations in the 5150~5250MHz is prohibit.

This device is slave equipment, the device is not radar detection and not ad-hoc operation in the DFS band.

Canada, Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has been evaluated for and shown compliant with the IC Specific Absorption Rate ("SAR") limits when installed in specific host products operated in portable exposure conditions.

Canada, avis d'Industry Canada (IC)

Appendix

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.

Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a été évalué et démontré conforme aux limites SAR (Specific Absorption Rate – Taux d'absorption spécifique) d'IC lorsqu'il est installé dans des produits hôtes particuliers qui fonctionnent dans des conditions d'exposition à des appareils portables.

Battery Disposal

THIS PRODUCT CONTAINS A LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. IT MUST BE DISPOSED OF PROPERLY. CONTACT LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION ON RECYCLING AND DISPOSAL PLANS IN YOUR AREA.

CLASS 1 LASER PRODUCT

LASERSCHUTZKLASSE 1 PRODUKT TO EN60825

CAUTION THIS APPLIANCE CONTAINS A LASER SYSTEM AND IS
(ATTENTION): CLASSIFIED AS A "CLASS 1 LASER PRODUCT." TO USE THIS MODEL PROPERLY, READ THE INSTRUCTION MANUAL CAREFULLY AND KEEP THIS MANUAL FOR FUTURE REFERENCE. IN CASE OF ANY TROUBLE WITH THIS MODEL, PLEASE CONTACT YOUR NEAREST "AUTHORIZED SERVICE STATION." TO PREVENT DIRECT EXPOSURE TO THE LASER BEAM, DO NOT TRY TO OPEN THIS ENCLOSURE.

ANNEX IV

Symbol for the marking of electrical and electronic equipment

The symbol indicating separate collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown below. The symbol must be printed visibly, legibly and indelibly.

**CAUTION FOR ADAPTER**

THE TABLET PC IS FOR USE WITH DEDICATED AC ADAPTER.

BATTERY SAFETY

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.

REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

CAUTION FOR RJ-45

The RJ-45 jack is not used for telephone line connection.

WARNING EXPLOSION HAZARD**Class I, Division 2, Groups A, B, C, D, T Code T5**

Model R11XXXXXX, Rugged Tablet PC,

Battery Powered (Battery P/N R11AH or R11AH2XXXXXX rechargeable lithium-ion battery pack), Ambient Temperature Range: 0°C to +40°C.

Note: The "X" in the model designations may be any alphanumeric character or blank denoting minor mechanical options, system configuration options and/or safety extra low voltage secondary circuit options.

Conditions of Safe Use:

- Connection to or from this device, which enters or leaves the system enclosure, must be completely restricted in Class I, Division 2 Hazardous Locations.
- Rugged Tablet PC is to be charged by the supplied charging adaptor, type FSP065-RAB, manufactured by FSP Group, in Non-Hazardous Location only.
- Suitable for use in Class I, Division 2 Groups A, B, C and D hazardous locations or non-hazardous locations only;
- "WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS

MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.”

- AVERTISSEMENT - RISQUE D'EXPLOSION – LA SUBSTITUTION D'UN COMPOSANT PEUT RENDRE CE MATÉRIEL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION 2.
- “WARNING: TO PREVENT IGNITION OF A HAZARDOUS ATMOSPHERE, BATTERIES MUST ONLY BE CHARGED IN AN AREA KNOWN TO BE NON-HAZARDOUS.”
- “AVERTISSEMENT- RISQUE D'EXPLOSION- AFIN D'ÉVITER TOUT RISQUE D'EXPLOSION, S'ASSURER QUE L'EMPLACEMENT EST DESIGNÉ NON DANGEREUX AVANT DE CHANGER LA BATTERIE.”
- “WARNING - EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT WHILE CIRCUIT IS LIVE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.”
- “AVERTISSEMENT - RISQUE D'EXPLOSION. NE PAS BRANCHER OU DÉBRANCHER TANT QUE LE CIRCUIT EST SOUS TENSION, À MOINS QU'IL NE S'AGISSE D'UN EMPLACEMENT NON DANGEREUX.”

Safety Instructions

These safety instructions should always be observed to ensure safe operation when handling the device.

- Do not place this device on an unstable table or surface. The device may fall, causing serious damage to its housing and components.
- Do not cover the device, or block the air ventilation holes of the device with any other objects.
- Do not use any sharp object to tap on the display screen.
- Do not expose the device to direct sunlight and dusty environments.
- Keep the device away from excessive heat and humidity.
- Keep liquids away from the device.
- Keep the device away from any magnetic emitting devices as this may affect the quality of the wireless signal reception.
- When using an AC adapter:
 - ✓ Place this device in a location that is close enough to an electrical outlet to accommodate the length of the power cord.
 - ✓ Operate this device only with the type of power source indicated on the device marking label.

- ✓ Disconnect the AC adapter from the electrical outlet if the device is not being used for an extended period of time.
- When cleaning the device,
 - ✓ Be sure to turn off the device properly and unplug the AC adapter before cleaning.
 - ✓ Wipe the device with a clean, dry cloth.
 - ✓ Do not use abrasive cleaners to clean the device.
- Do not attempt to disassemble or repair this device. Doing so will void the warranty.