

**RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM**

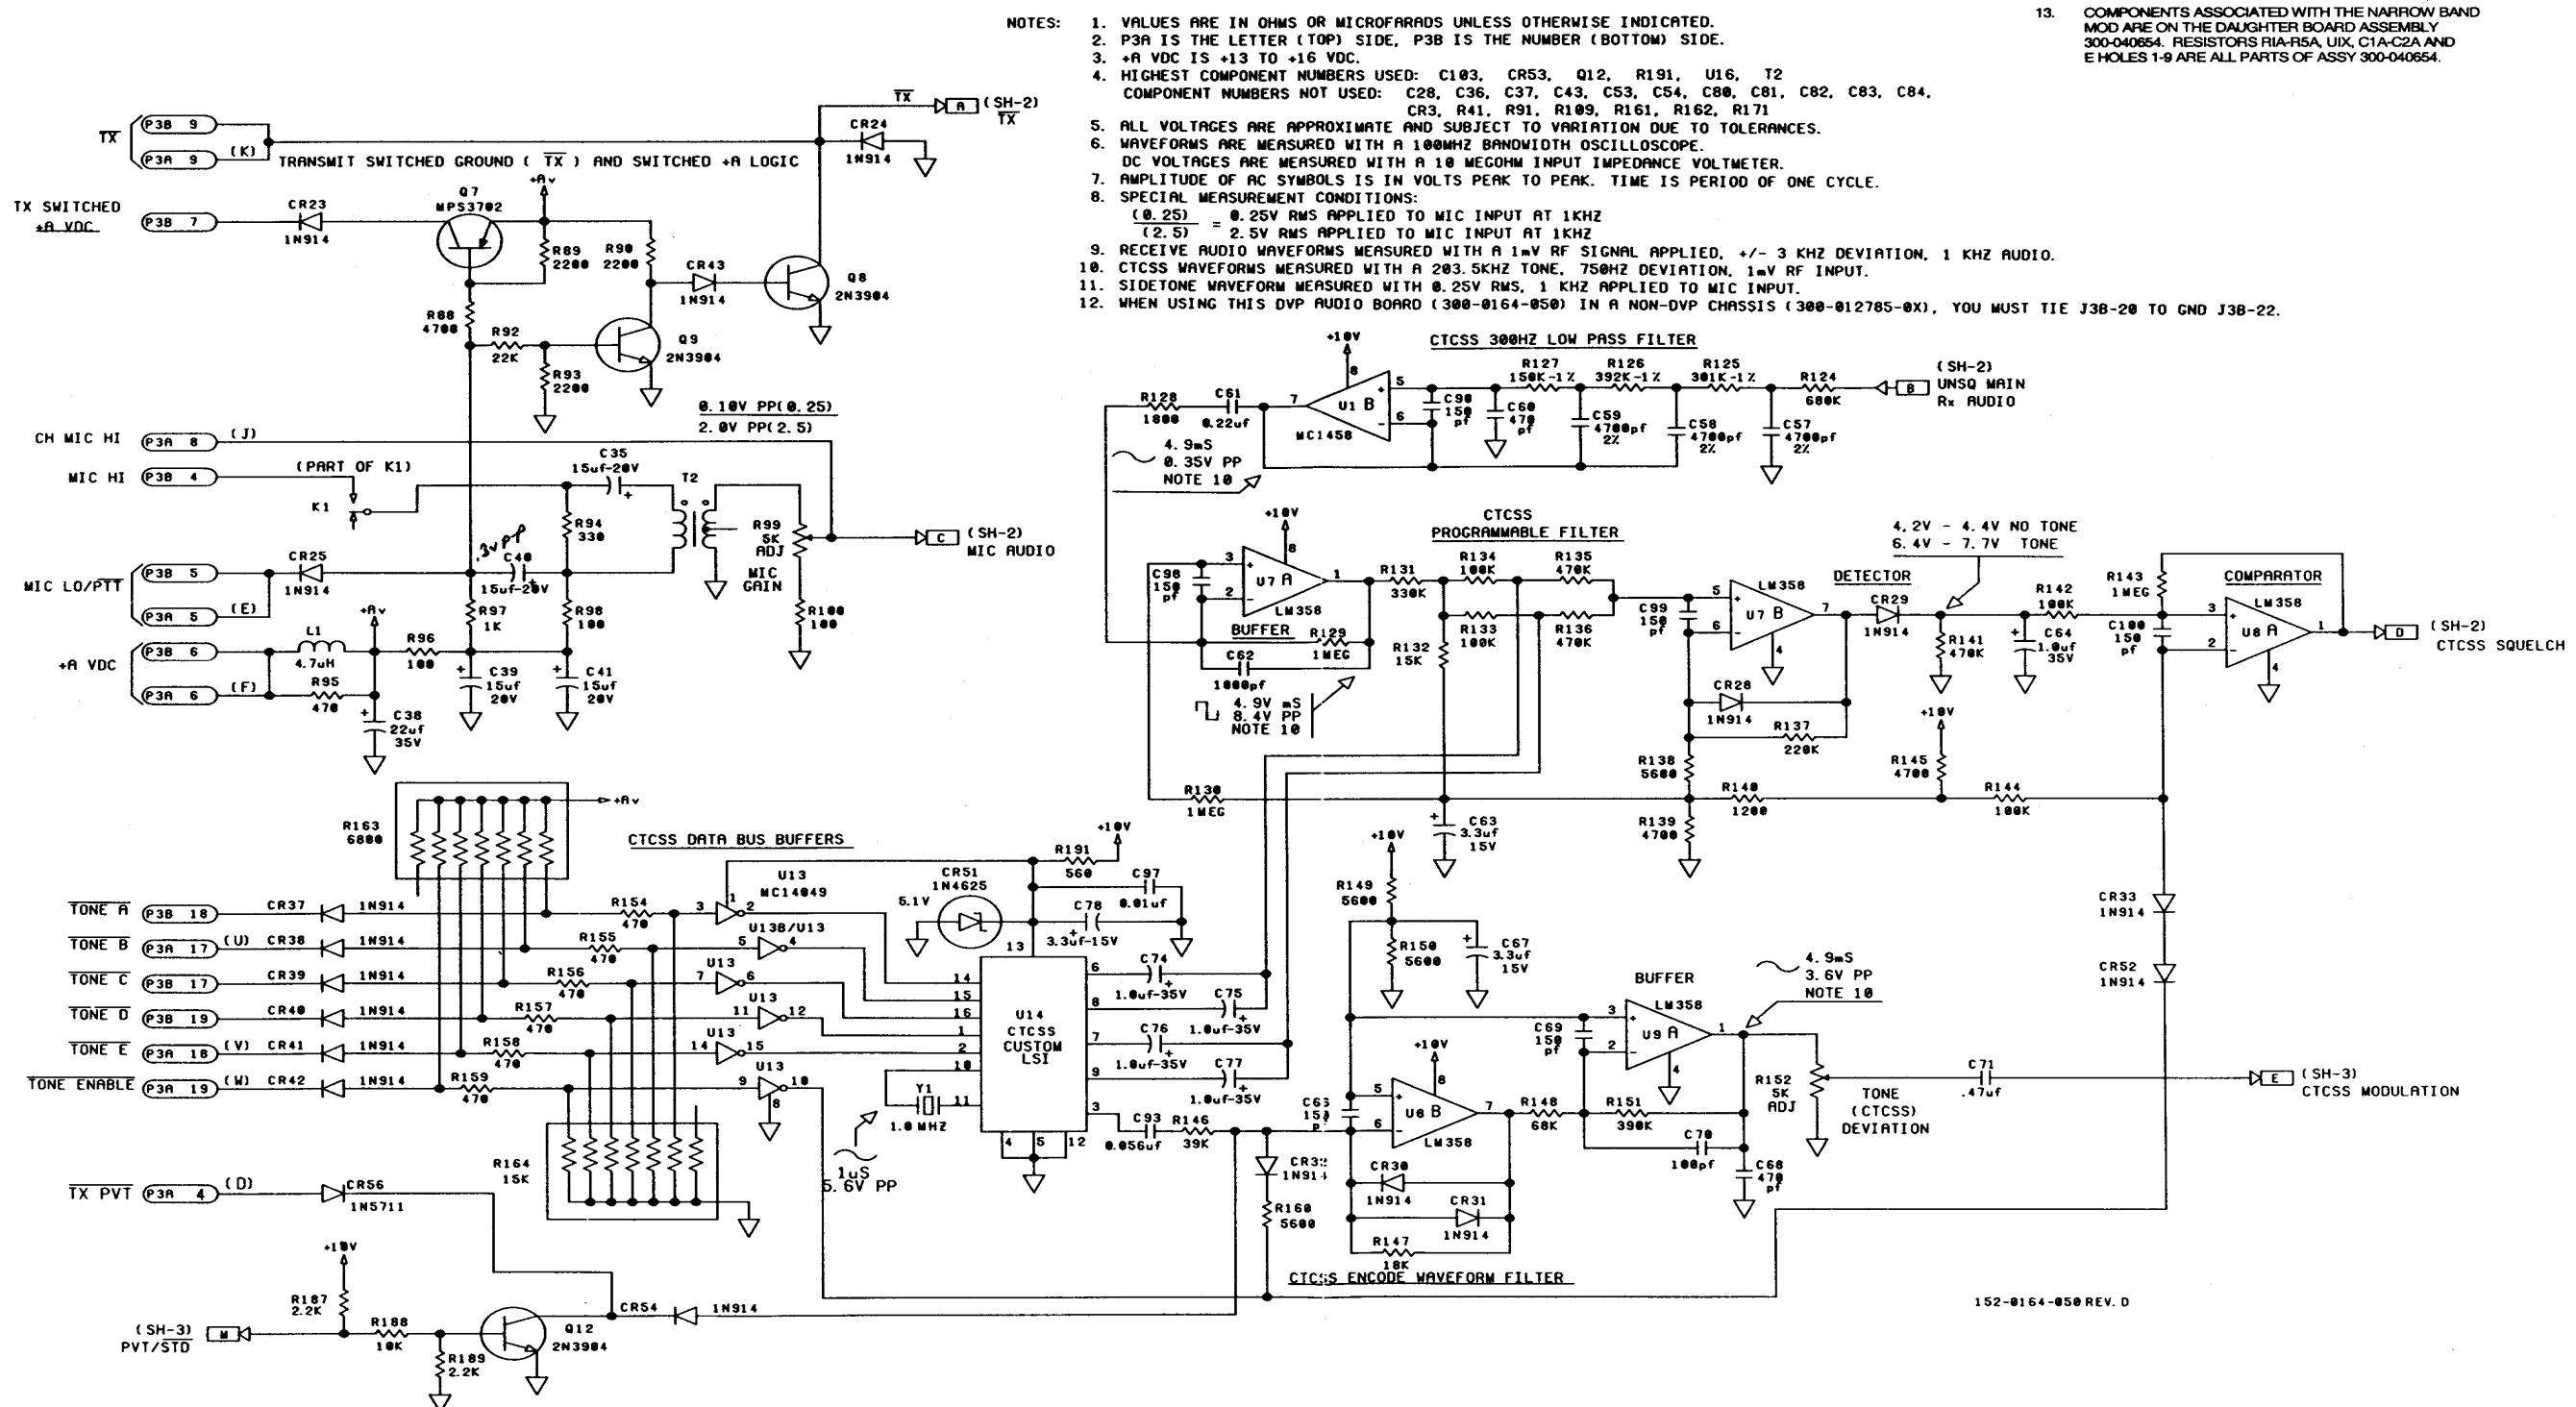


Figure 4-1. RT-138F Narrow-Band Audio Board Schematic Diagram

**RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM**

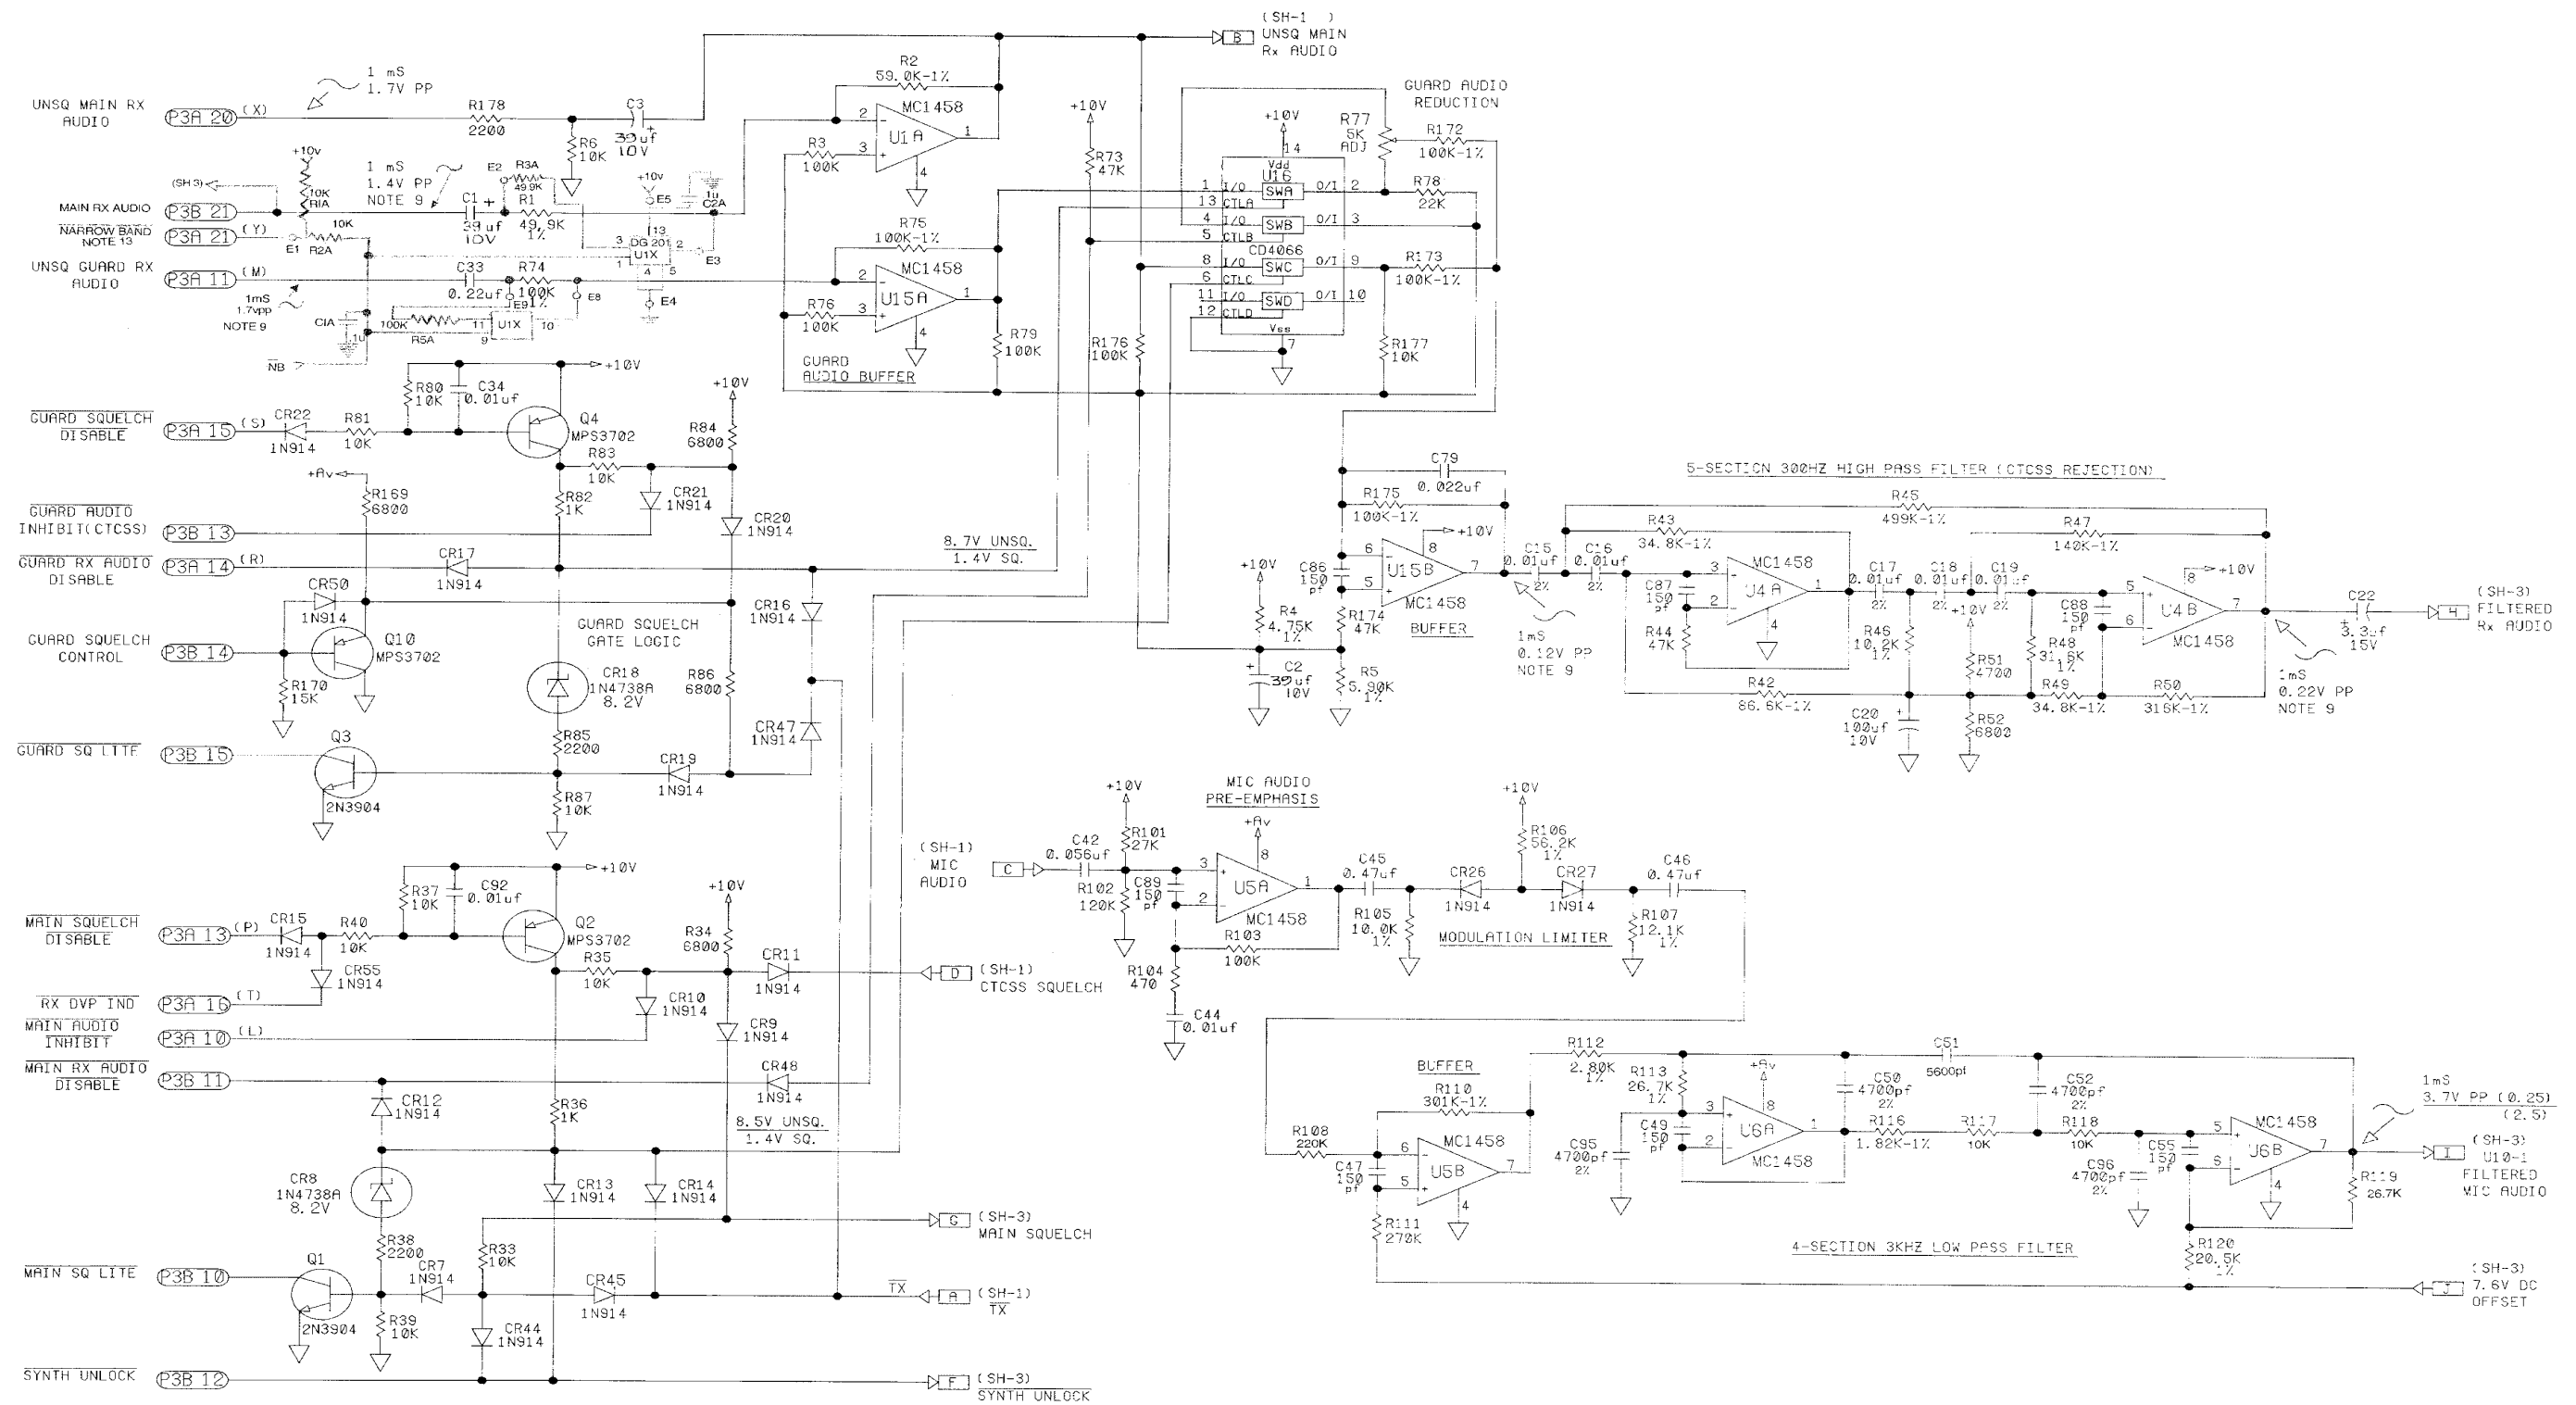


Figure 4-1 RT-138F Narrow Band Audio Board Schematic Diagram



RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM

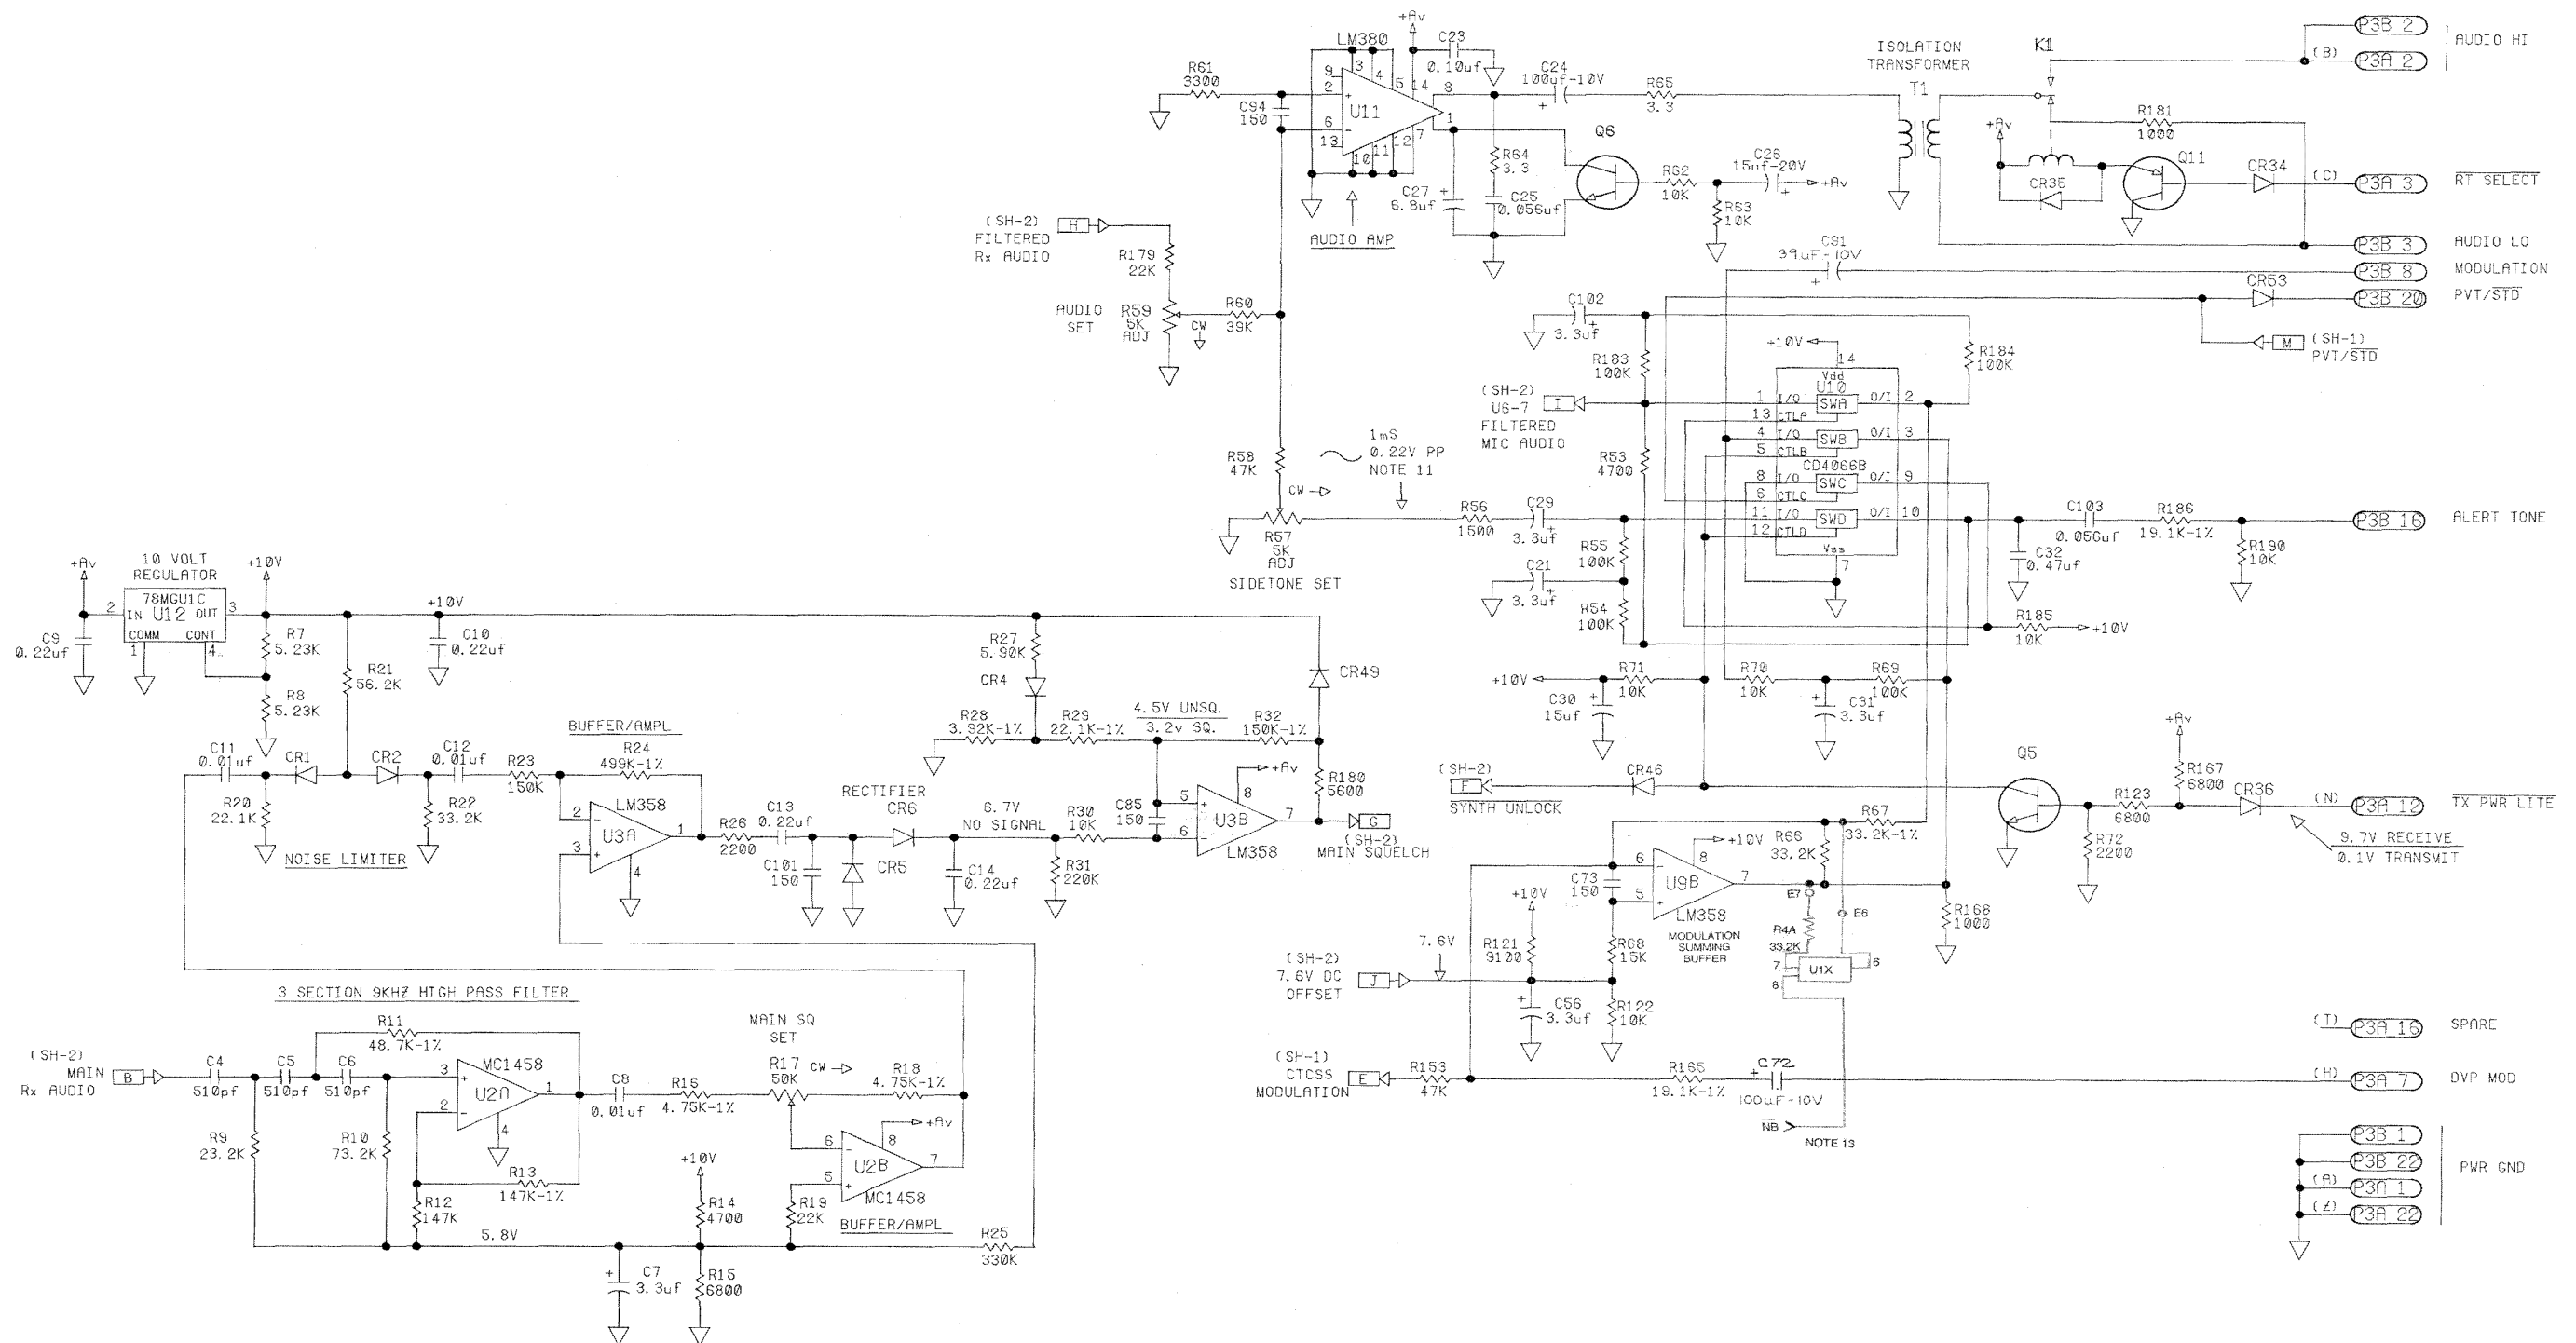


Figure 4-1 RT-138F Narrow-Band Audio Board Schematic Diagram

**RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM**

RT-138F NARROW BAND CONVERSION MAINTENANCE MANUAL ADDENDUM

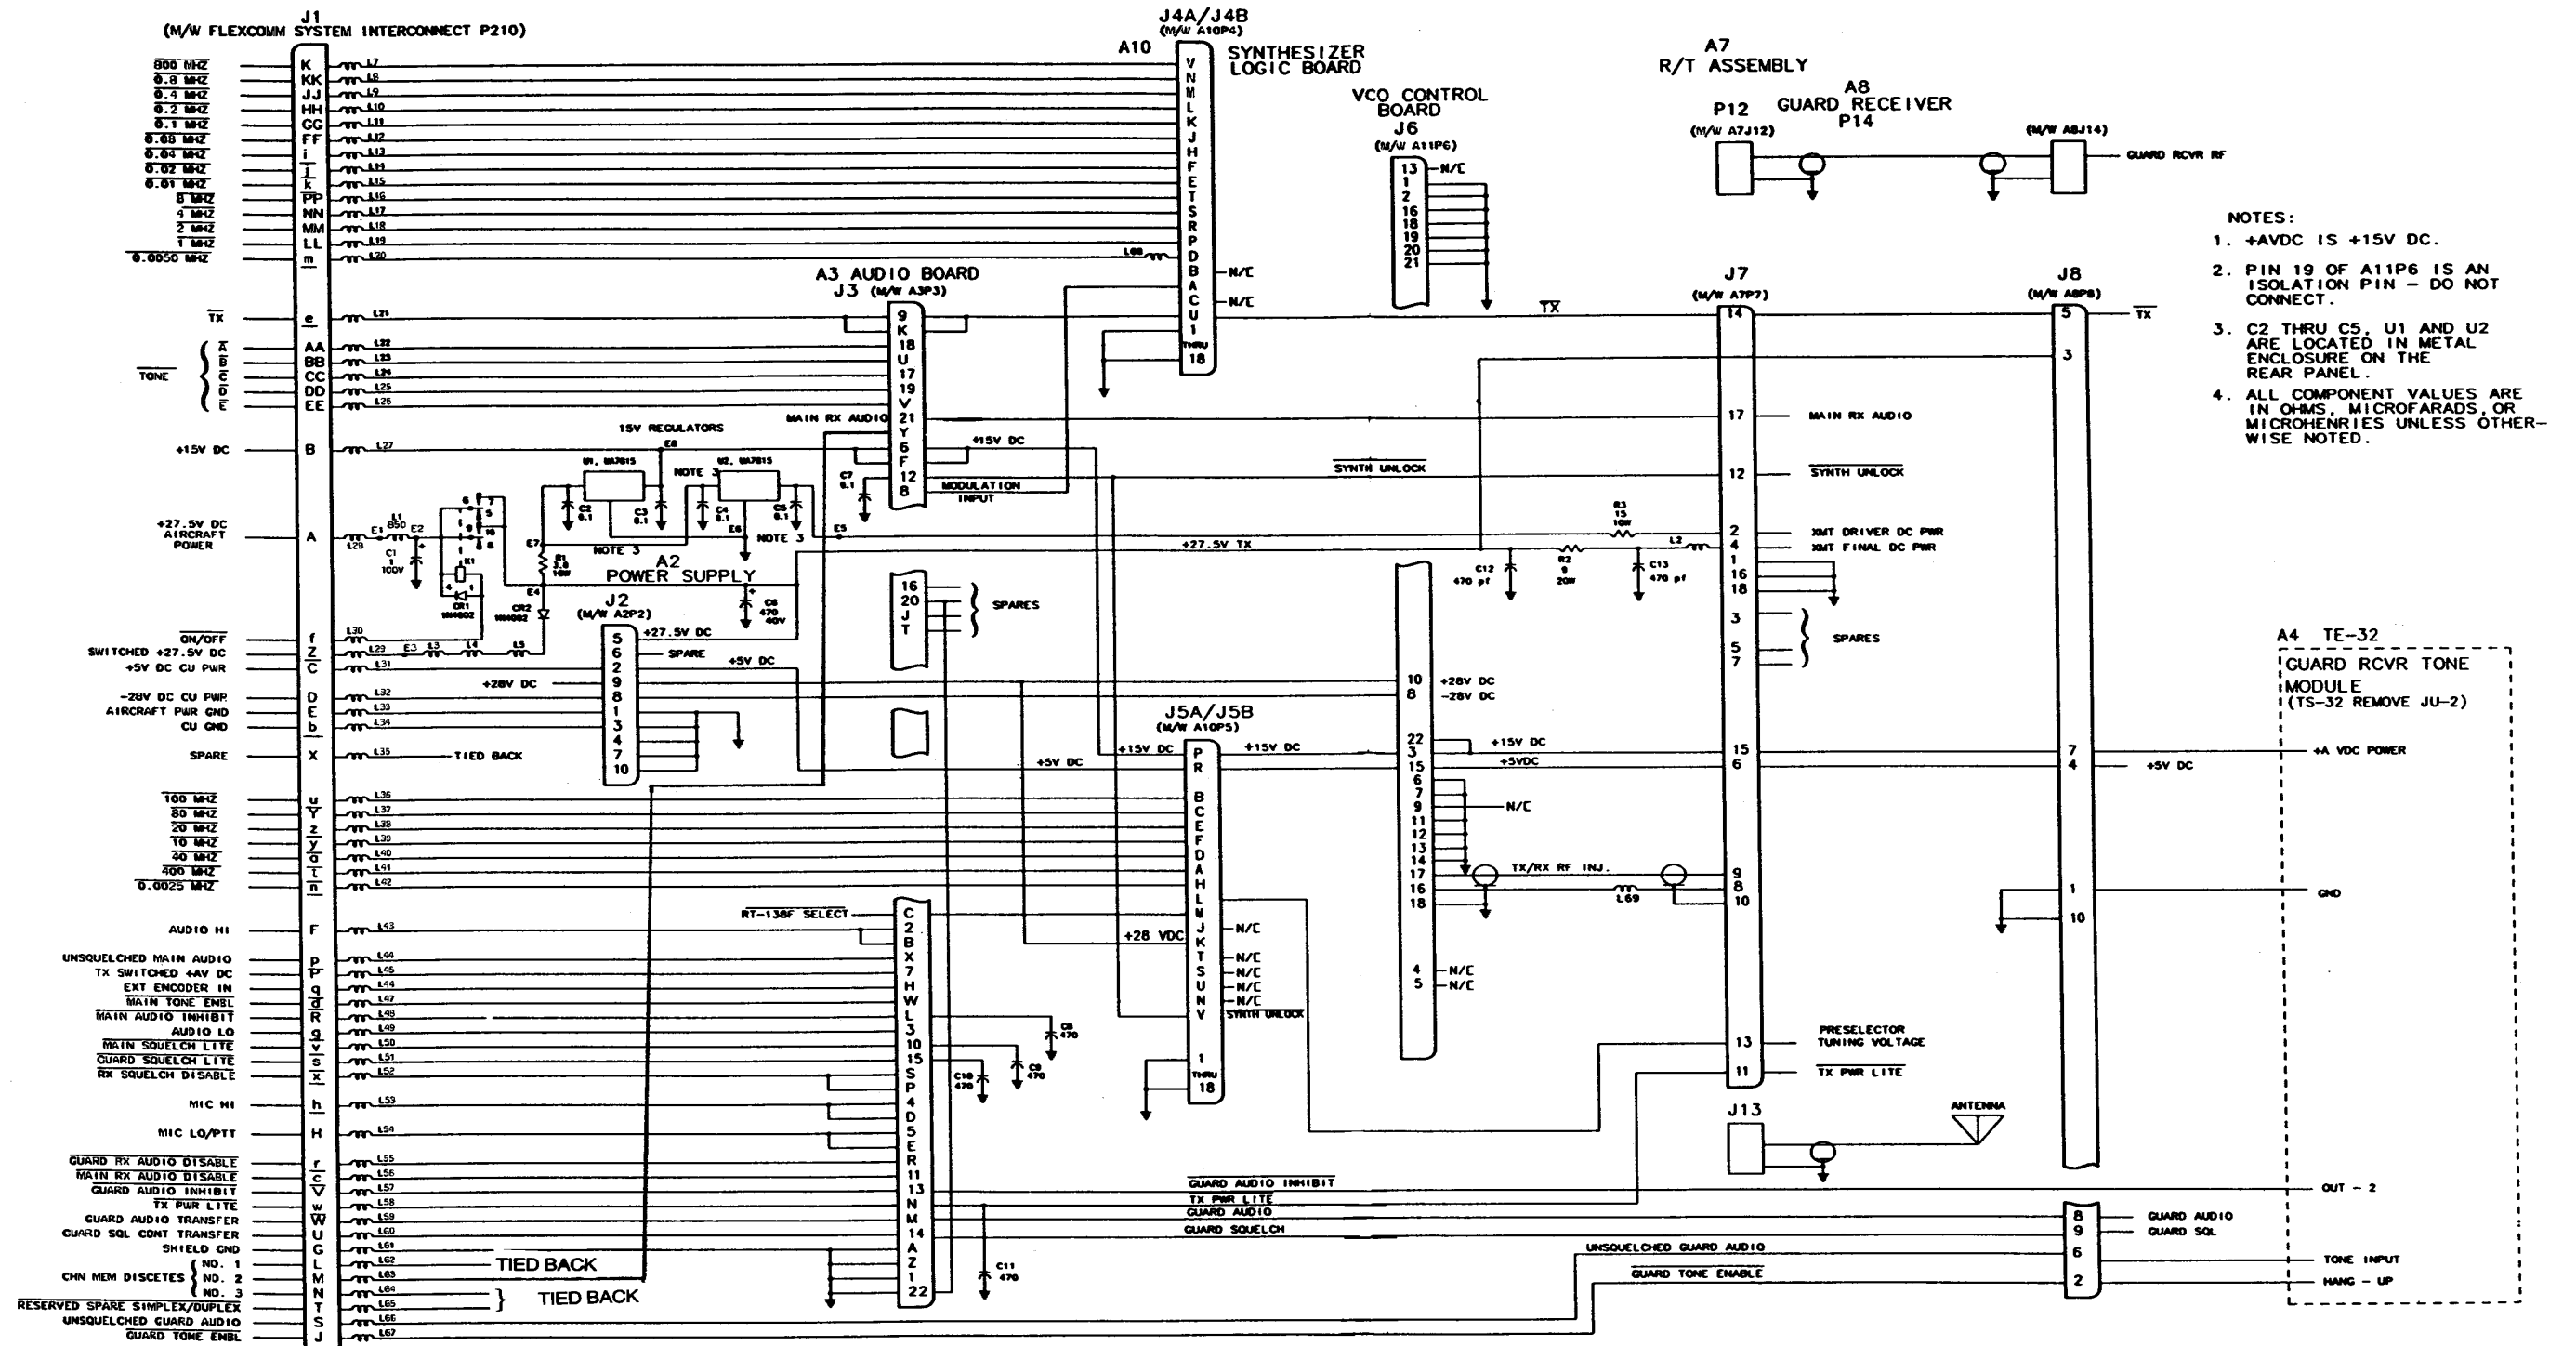


Figure 4-2. RT-138F Narrow-Band Chassis Schematic Diagram (Page 1 of 2)

-OX SHOWN

**RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM**

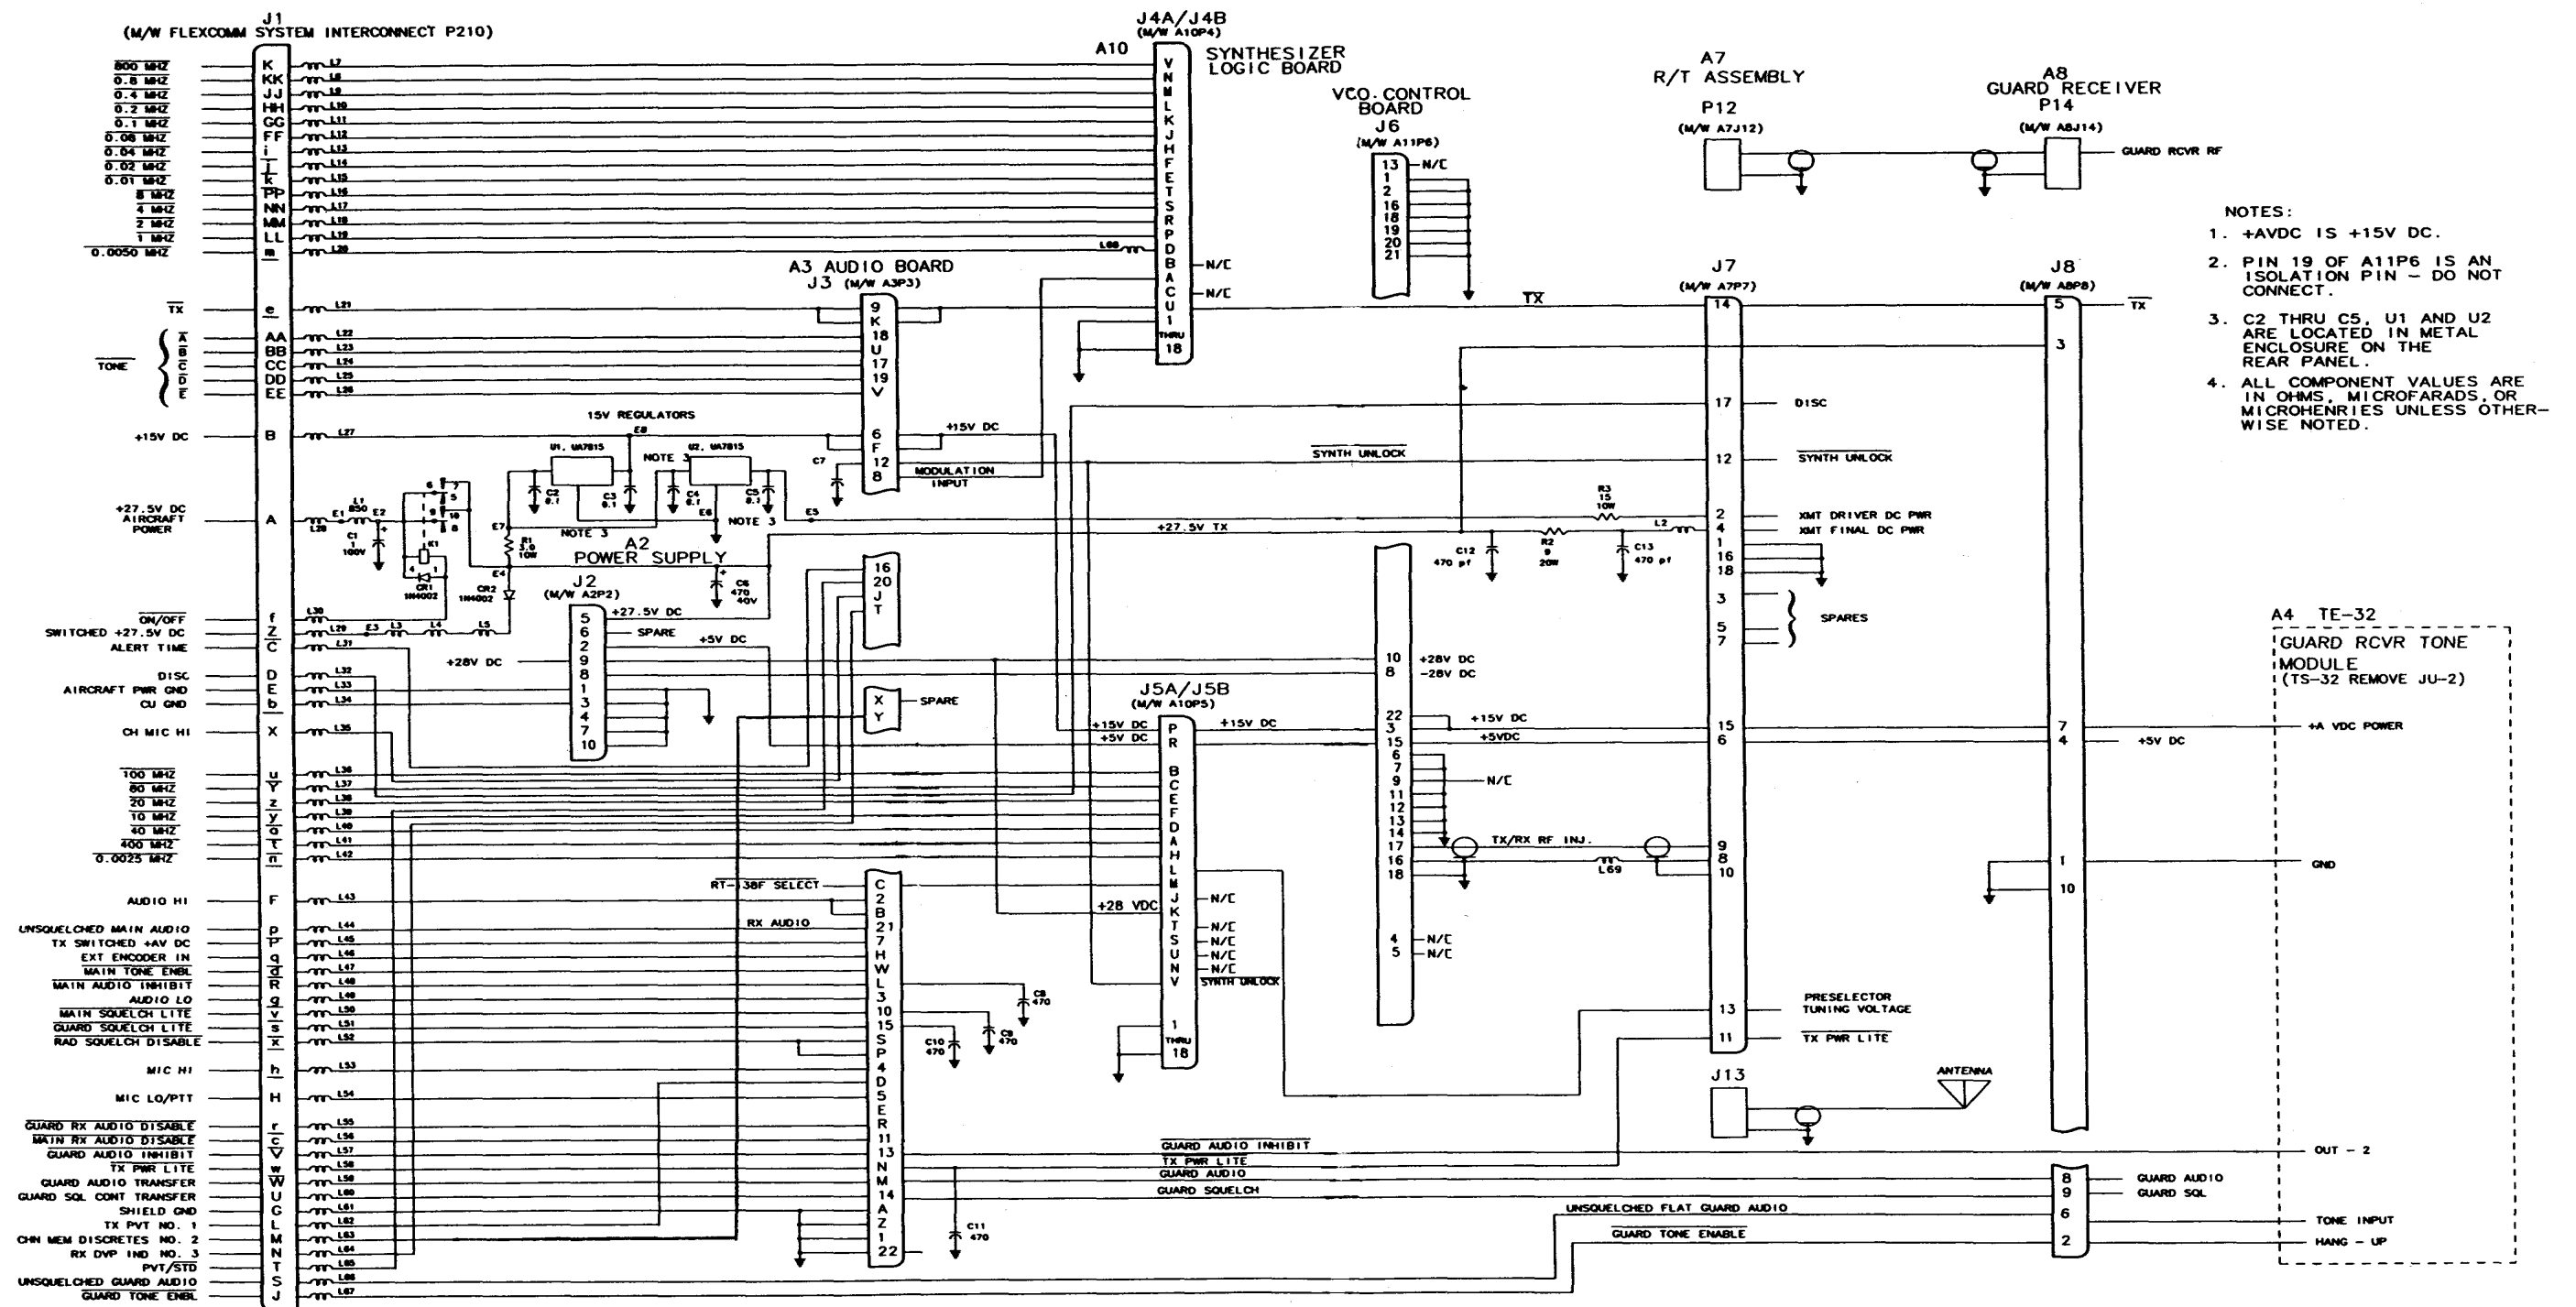


Figure 4-2 RT-138F Narrow Band Chassis Schematic Diagram (Page 2 of 2)

-5X SHOWN

RT-138F NARROW BAND CONVERSION
MAINTENANCE MANUAL ADDENDUM

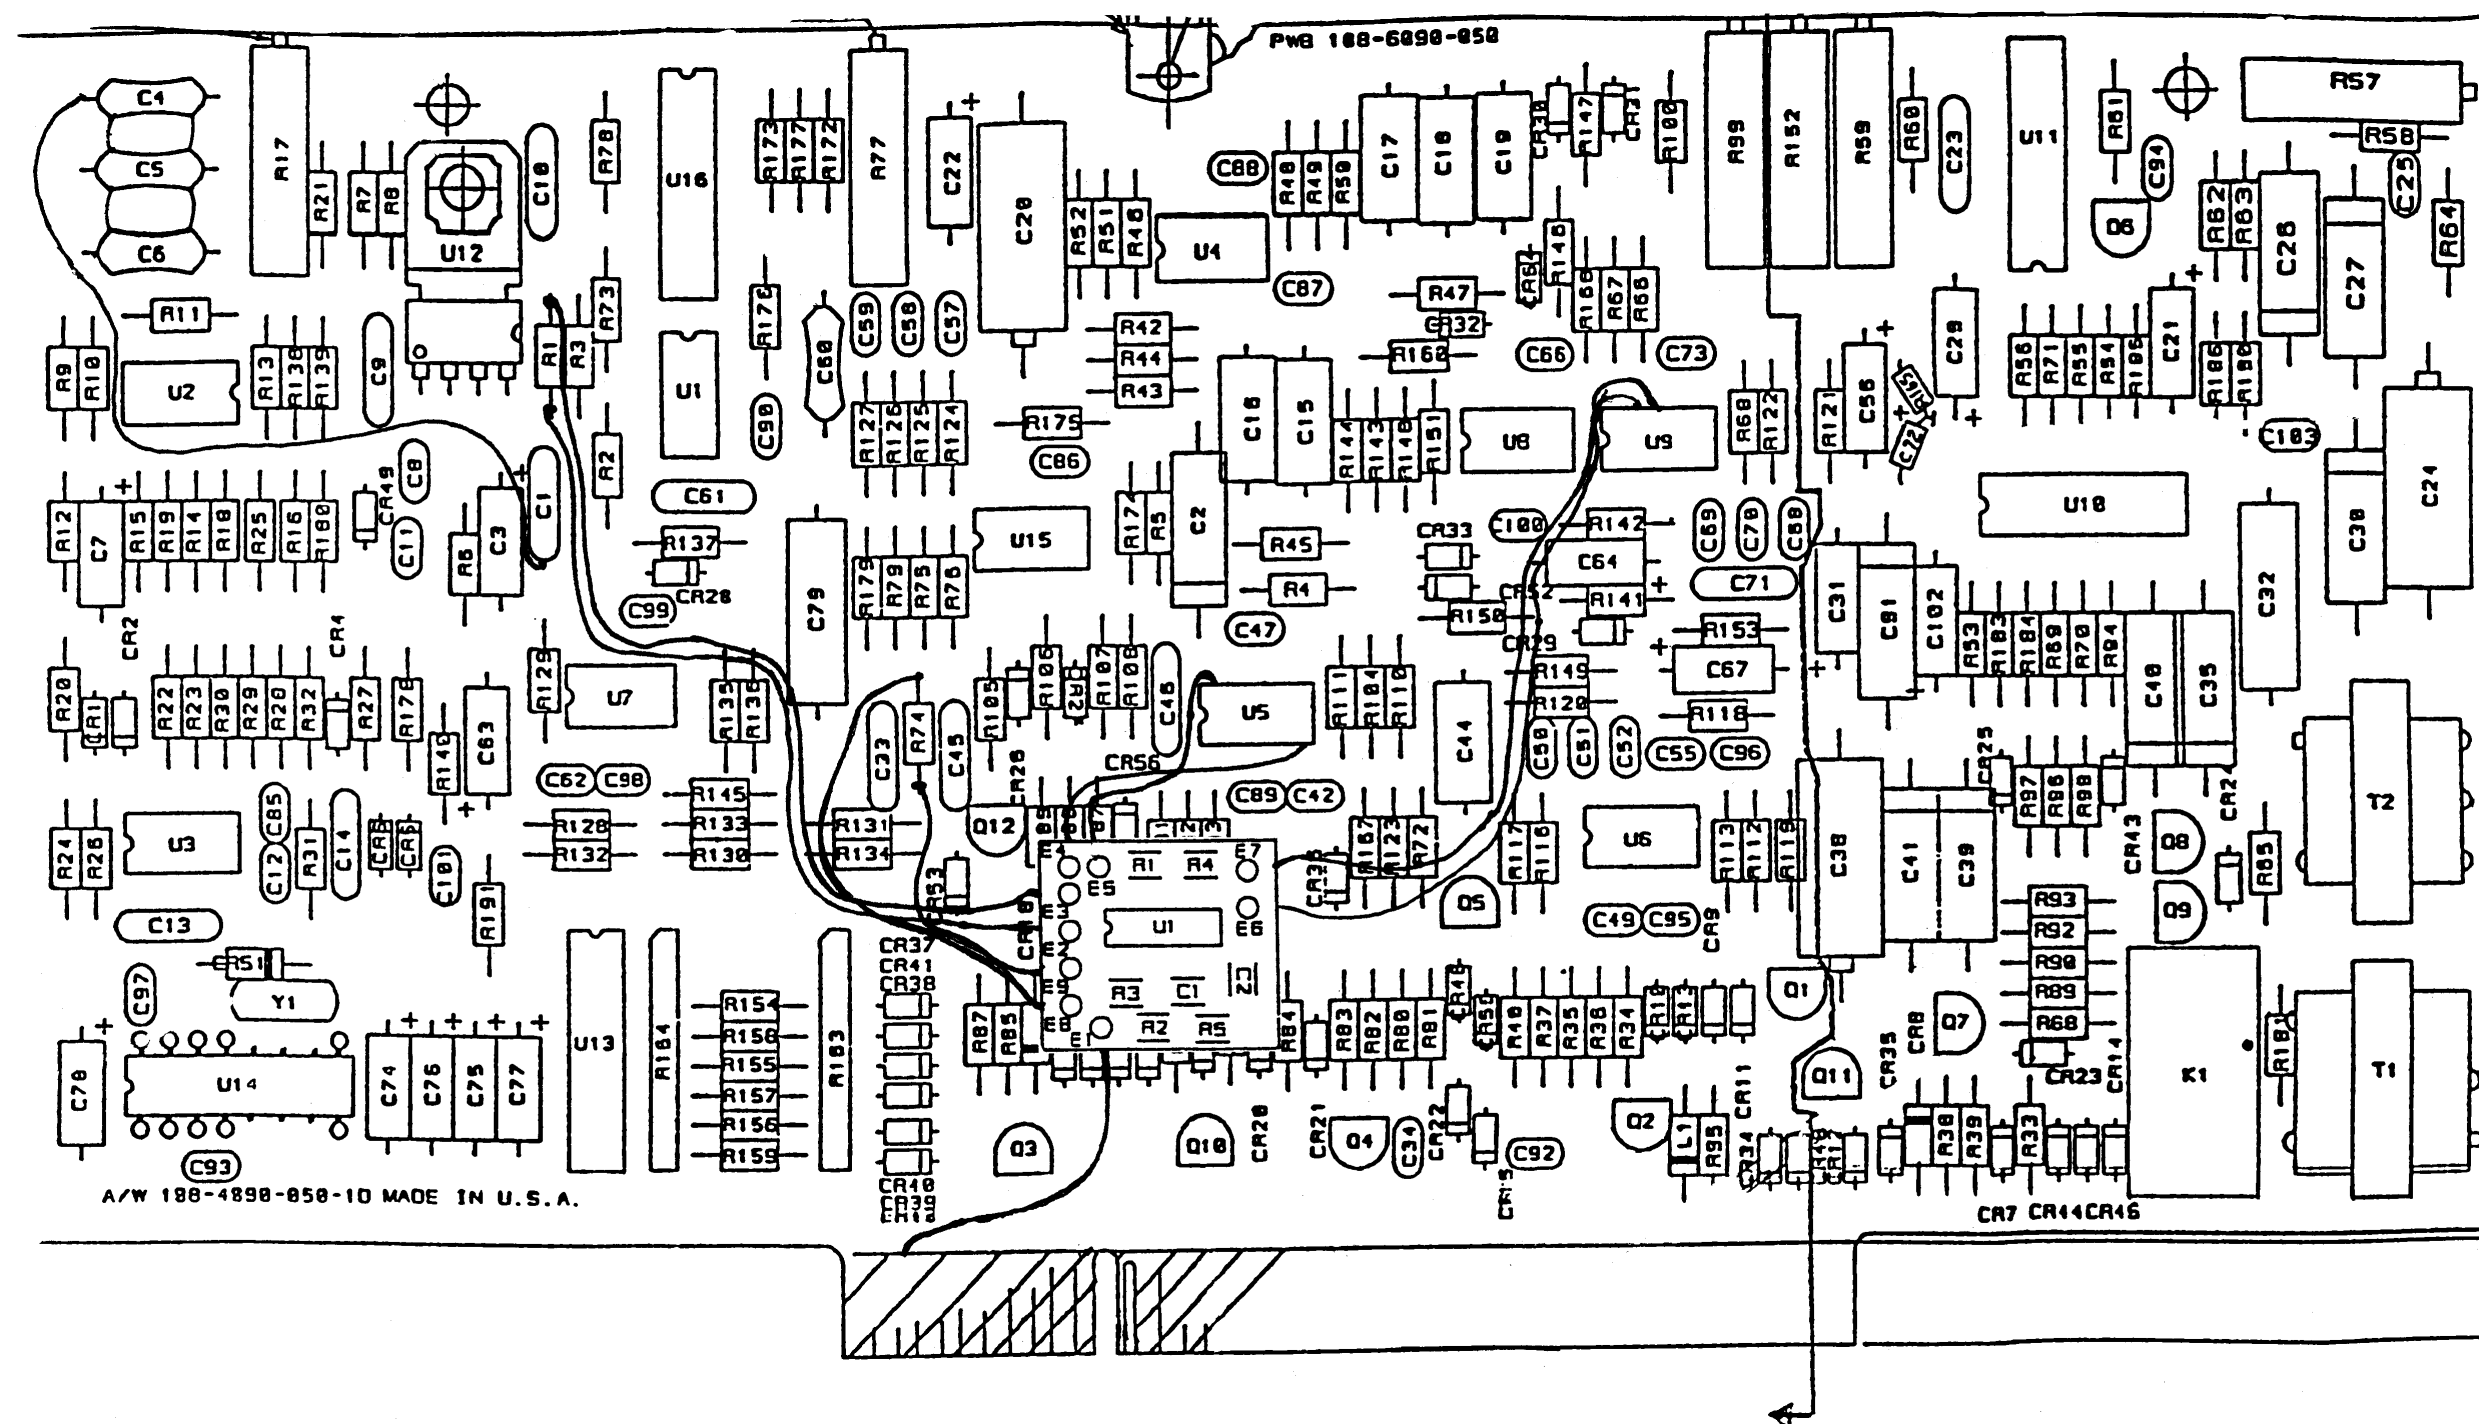


Figure 4-3 RT-138F Narrow Band Audio Board Assembly