 


GENIUS GRAPHIC TABLET QUICK INSTALLATION GUIDE

CAUTION: INSERT THE DRIVER CD INTO YOUR COMPUTER FIRST AND THEN FOLLOW THE INSTRUCTIONS TO COMPLETE YOUR SETUP PROCESS.

INTRODUCTION

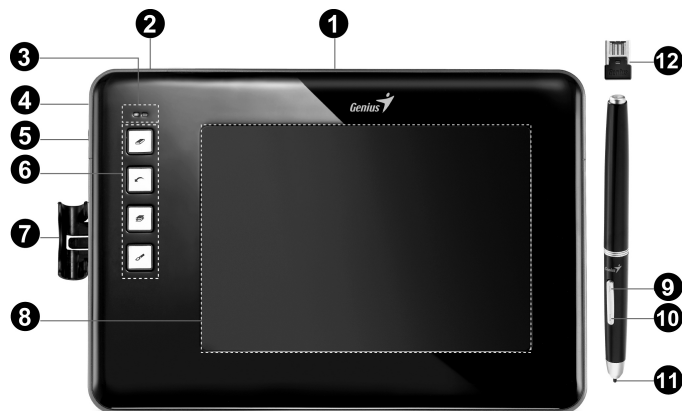

1. Dongle & battery slot
2. USB port (for charging only)
3. LED indicator
4. Power switch
5. Resume button
6. Express keys
7. Pen clip and slot
8. Working area
9. Button 2
10. Button 1
11. Pen tip
12. Dongle

DRIVER INSTALLATION

Windows:

1. Insert the driver disc into your computer's CD-ROM drive. When prompted, select "Driver Setup", and press OK to install driver.

Note: In most systems, the Setup Wizard will start automatically. If Automatic Setup does not begin, start the Setup program manually by selecting "Start/Run", type "E:\setup", where "E:" represents the location of the CD-ROM drive, then press "Enter".

Note: In certain cases, Windows might ask for your permission because it cannot recognize the driver you are downloading. If this occurs, select "Continue Anyway" and continue to install.

Macintosh:

1. Insert the driver disc into your computer's CD-ROM drive.
2. Check to see if the "Genius Tablet" is shown on the screen. Double click the icon then follow the instructions.
3. Enter your administrator name and password to process the next step till it's finished.

Note: For more information, refer to the MAC user manual on the driver disc.

 
CAUTION: ONCE THE INSTALLATION HAS BEEN COMPLETED, REBOOT YOUR MACINTOSH BEFORE PLUGGING THE DEVICE INTO YOUR COMPUTER.

HARDWARE INSTALLATION

CAUTION: MAKE SURE THAT YOU HAVE INSTALLED THE DRIVER SOFTWARE (SEE ABOVE) INTO YOUR COMPUTER BEFORE INSTALLING THE HARDWARE.

1. Put the batteries into the back of tablet, insert two batteries on each side of the battery slot first, then put the last battery in the middle.
2. Plug the tablet dongle into your computer's USB port (located on the computer, display, or keyboard). The tablet's LED light will indicate the operational status, and your computer screen will display a "found new hardware" message.

Note : Do not mix or use different types of batteries at the same time such as Li-Ion, Alkaline, etc; and remember do not put the batteries in the wrong direction.

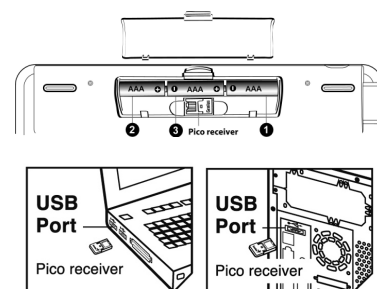


VERIFYING THE INSTALLATION

To ensure that everything has been installed properly, follow the procedures below. Check the User's manual on the CD-ROM for more information.

VERIFYING HARDWARE AND DRIVER FUNCTIONS

The LED light on the tablet is the main indicator for hardware operation. The light normally stays off, and will light up in various situations. Watch the status of the tablet LED light as you go through these steps. None of the steps, except the last two, require the tablet driver to be installed.

1. As soon as the tablet detects the presence of the digital pen or the pressure of express keys, the LED light will come on briefly, and will normally stay off.
2. When the working area detects the presence of the pen, the LED light will stay on. This happens when the pen tip is directly above the working area of the tablet and is low enough.
3. When you press the pen tip against the tablet anywhere in the working area, the light will also come on.
4. If the tablet driver has been properly installed, a small tablet icon () will appear in system the Task Bar area, normally at the lower right corner of the screen.
5. With the tablet driver properly installed, moving the pen tip over the working area will cause the cursor on the screen to move accordingly.

EXPRESS KEY FUNCTION



Eraser




Undo



New Layer



Brush

 
These keys are programmable. Go to the Tablet Menu () to set up (check the electronic manual for more information).

TO CHARGE THE RECHARGEABLE BATTERIES INSIDE THE TABLET

CAUTION: DO NOT CHARGE YOUR WIRELESS TABLET IF YOU ARE NOT USING RECHARGEABLE BATTERIES, IT MAY CAUSE FIRE, EXPLOSION OR BURST.

1. Test your wireless stylus pen in the tablet working area, if it doesn't work, please change the batteries with new ones or charging your rechargeable batteries of the wireless tablet by plugging the micro USB cable into your PC.
2. When the green LED of the wireless tablet LED is blinking when the pen tip is hovering or within the working area above the wireless tablet, the wireless tablet will be out of power within 30 minutes.
3. To charge the rechargeable batteries of the wireless tablet, plug the micro USB cable into your PC.
4. During charging the red LED of wireless tablet LED is blinking, it will stay on when the batteries are fully charged. You may remove the micro USB cable from your PC and the wireless tablet.


Note : Do not mix or use different types of batteries at the same time such as Li-Ion, Alkaline, etc; and remember do not put the batteries in the wrong direction.

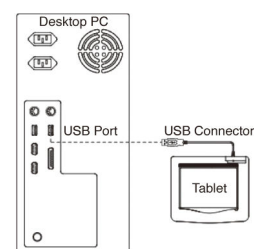

TO CHANGE THE PEN TIP

1. Place the Pen tip into the tip remover.
2. Simply pull the Pen tip out, and then insert a new tip.

 Note: Pliers (not included in package) may also be used to remove the pen tip.

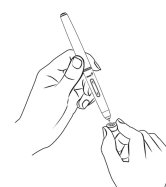

NOTES ON BATTERY USAGE

When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time you can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The battery may feel warm when using the wireless device for an extended period of time or using the flash continuously. This is normal and not a malfunction.
- The wireless device may feel warm when being used continuously or for an extended period of time. This is normal and not a malfunction.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Never use manganese batteries.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.