


FCC Label Location

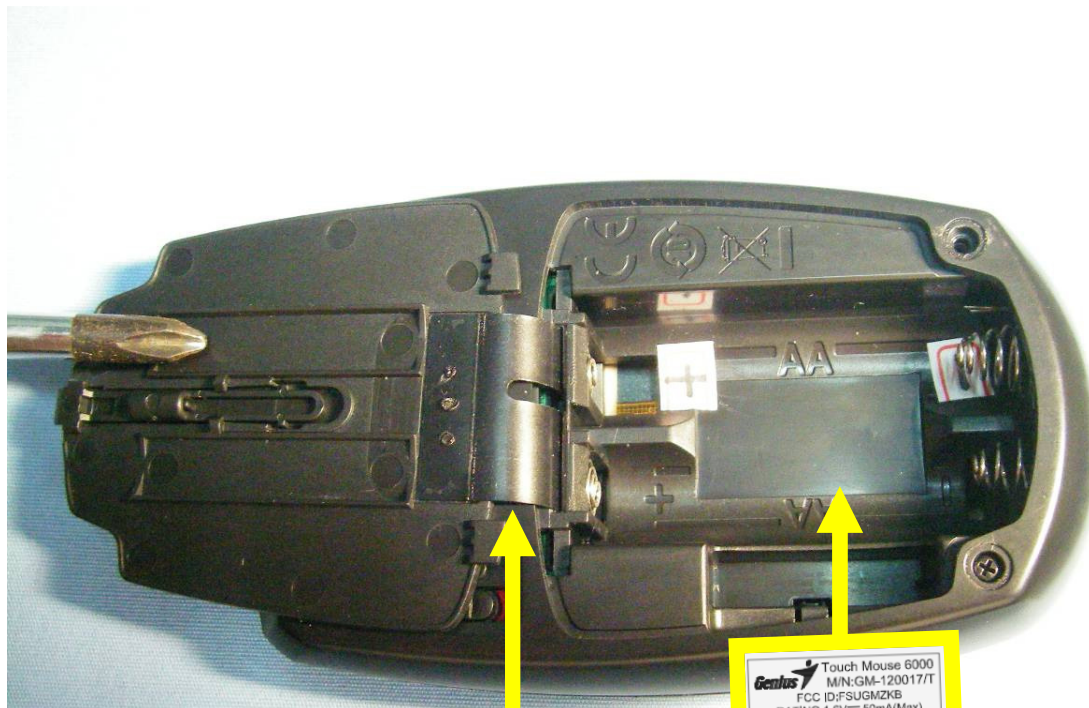

Option 1:

Label attached to the outside battery cover, which is permanently attached to the equipment enclosure and not detachable.

Option 2:

Label attached to the bottom of battery compartment.