

# AC123 REMOTE CONTROLLER

## Symbol on LCD Screen

| Symbol | Name of Symbol             | Significance   |
|--------|----------------------------|--|
|        | Antenna                    | The remote controller is being communicated with other device.   |
|        | Not Applicable             | The setting made by the remote controller generates conflict.  |
|        | Battery Indicator          | full  half to full  Low  |
|        | Day of Week                | Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday   |
|        | Real Time                  | Time indication, AM means morning, PM means afternoon  |
|        | Preferred Mode             | When the preferred mode is set or the preset preferred mode is chosen, an indication of  will be shown. <b>16</b> means the preferred mode is being set or 16 <sup>th</sup> is being executed. |
|        | Program Mode               | When the program mode is being set, an indication of  will be shown. <b>16</b> means 16 <sup>th</sup> is being set.  |
|        | Auto Mode                  | In auto mode, time-to-operate can be   |
|        | Learning Mode              | In learning mode.  |
|        | Open/close status          | <b>open</b> , <b>close</b>   |
|        | Curtain status             | An indication of curtain device is applied.  |
|        | Incandescent dimmer status | Full brightness,  Half brightness,  Darkness   |
|        | Arm status                 | fully arm, <b>part-arm 1</b> , <b>part-arm 2</b> ,  disarm   |
|        | Group code                 | Devices to be controlled (If used for BH product, it refers to unit code)  |
|        | Channel                    | Used for house code of BH series product   |
|        | Delete                     | Upon deletion is taken   |

## Keypad Button

| Symbol | Name of Symbol      | Significance  |
|--------|---------------------|---|
|        | Preferred button    | Used for setting or executing preferred mode  |
|        | Auto button         | Used for entering or leaving the auto mode  |
|        | Program button      | Used for programming mode   |
|        | Learning button     | Used for entering learning mode   |
|        | On button           | To operate together with  or  or * (all) button, let the memorized individual or all devices to be activated; for time setting, it is regarded as UP. |
|        | Off button          | To operate together with  or  or * (all) button, let the memorized Individual or all devices to be off; for time setting, it is regarded as DOWN.     |
|        | Leftward            | Towards the left  |
|        | Rightward           | Towards the right   |
|        | OK button           | Used for confirmation while setting or saving   |
|        | Single Digit button |   |
|        | Tens Digit button   |   |
|        | * button            | All   |
|        | Present time button | Keep pressing 3 seconds will enter present time setting   |
|        | Setting BH button   | Keep pressing 3 seconds will enter the setting for house code of BH series  |

**SPECIFICATIONS:**

|                     |                                   |
|---------------------|-----------------------------------|
| Frequency range     | 315 MHz or 433 MHz                |
| Battery             | 1.5V AAA type x 4                 |
| Communication Range | 70 meters min. (in an open space) |



**Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**CAUTION  
RISK OF EXPLOSION IF BATTERY IS REPLACED  
BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING  
TO THE INSTRUCTIONS**