 


vtech®

Parent's Guide

 
Kidi★Star *DJ MIXER*™

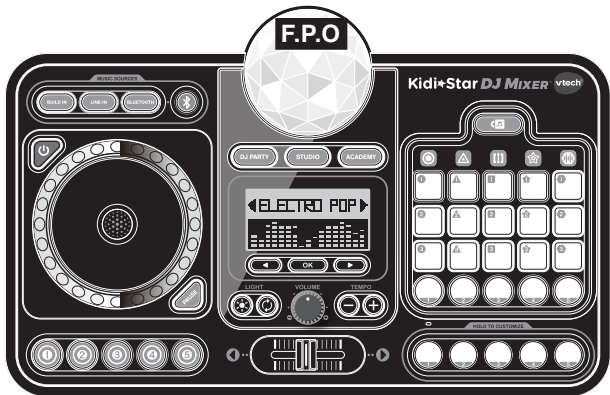

91-004004-000 US CA

INTRODUCTION

Thank you for purchasing the **VTech® Kidi DJ Mixer**.
VTech® Kidi DJ Mixer features easy music creation in different styles.

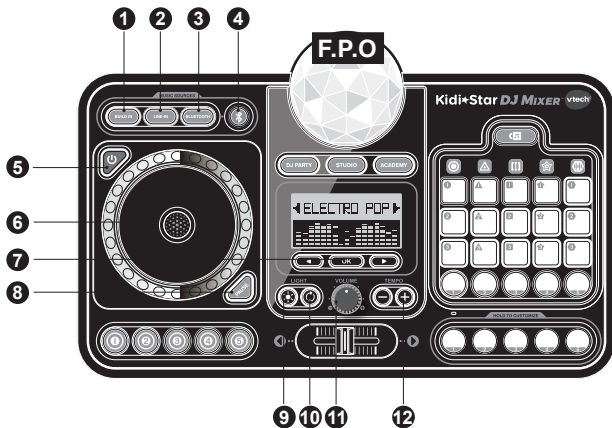

- | | | |
|--|--------------------------|--|
| 1 Build-in voice button | 2 Line-in button | 3 Bluetooth button |
| 4 Bluetooth Connect Button | 5 Power Button | 6 Turntable |
| 7 Selection Buttons (Left, Right, OK) | 8 Pause Button | 9 Party Light On / Off selector |
| 10 Party Light pattern selector | 11 Volume Control | 12 Tempo Buttons |

INCLUDED IN THIS PACKAGE

- One Kidi DJ Studio
- One parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

WARNING

The tie are not part of this toy. The tie should be removed and discarded for your child's safety.

Unlock the packaging locks:

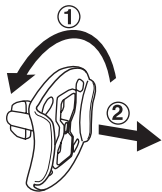


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

This product is in Try-me mode in the packaging. Press and hold the Customize sound effect button 5 for a few seconds to proceed with normal play. If the unit powers down during the play, please install a new set of batteries.

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

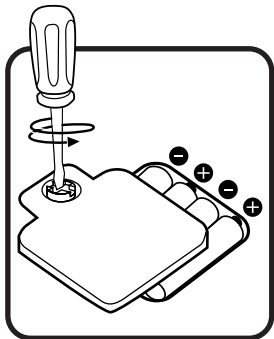

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

BATTERY NOTICE

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

MISE EN GARDE

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. POWER BUTTON

Press the **Power Button** to power on the unit. Press the button again to power off the unit.

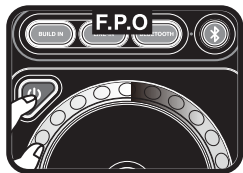

2. LINE-IN JACK

Connect external player



3. EXTERNAL SPEAKER JACK

Connect external speaker or headphone



4. AC ADAPTER

Connect AC adapter power



5. AUTOMATIC SHUT-OFF

To preserve battery life, the KidiGo™ Fast Break Hoop will automatically turn off after 10 minutes without input. The unit can be turned on again by pressing the Power Button.

GAMES

DJ Party

Launch pad buttons

Use the Launch pad buttons to choose different instruments sounds to play. Each column allows one button to be playing. The selected option is lit up.

Preset sound effect buttons

Press the Preset sound effect buttons to add build-in sound effects.

Style button

Press Style button to change the music for the Launch pad buttons and Build-in sound effect buttons

Customize SFX buttons

Hold to record your own short sound effect. It lights up to indicate recording in progress. Release the button when finished recording. Press and release immediately to play the recorded sound effect.

Turntable

Turn the Turntable to add scratch disc sound on your music.

Scratch button

Press Scratch button to choose the sound effect for the Turntable

Build-in button

Press Build-in button to add human voice track onto the music. Press again to mute it.

Line-in button

Press Line-in button to play the line-in device sound.

Bluetooth connect button and Bluetooth button

Press Bluetooth connect button to connect a Bluetooth device. After the device is connected, press Bluetooth music button to play the Bluetooth external source sound

Crossfader

Use the crossfader to adjust the volume balance between Build-in / Line-in / Bluetooth sound and the Launch pad.

Tempo control

Use the Tempo control buttons to adjust. the tempo of the Launch pad music.

Pause button

Press Pause button anytime to stop all sound. Press again to resume the sound.

Disco light control

Use the Disco light On / Off selector to switch on or switch off the disco light.

Use the Disco light Turn / Stop selector to turn or stop the disco light.

Volume control

Use the volume control to adjust the master volume.

Studio

In the main menu, choose to record or playback a track by Left, Right and OK button.

Record

Select the track you would like to record. After the countdown, recording starts.

The unit can record the Turntable, Build-in button, Launch pad, preset sound effects, customize sound effect, crossfader behaviour and tempo change status.

When finish, press OK button to save your recording.

Note: If you have customize the customize sound effect later on, the customize sound effect in the recorded track will change too.

Playback

Choose the track you would like to playback by Left, Right and OK button.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Interrupt the power supply by removing the batteries.
2. Let the unit stand for a few minutes, then replace the batteries.
3. The unit should now be ready to use again.
4. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Radiation Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5473
Product name: KidiStar™ DJ Mixer
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

***www.vtechkids.com
www.vtechkids.ca***

Read our complete warranty policy online at
***www.vtechkids.com/warranty
www.vtechkids.ca/warranty***

