

vtech[®]

Parent's Guide

MY FIRST
KidiSmartwatch



91-004127-000 (US)

INTRODUCTION

Thank you for purchasing My First Kidi Smartwatch by VTech®! This is a smart watch with a wearable interactive pet accompany with kids. Play games, learning emotions and tell time with customizable clock faces. Unit to unit connection games and music player bring more fun.

Product Layout and Buttons



Pet/Home Button

From Clock Mode

- Press this button to go to Pet Mode
- Hold down this button for 2 seconds to turn the screen off.

From the Home Menu

- Press this button to go to Pet Mode

In other activities:

- Press this button to return to the previous screen.

Clock Button

Press this button to display time.

Smart Wake Up

Double tap the screen to wake up the watch and see the current time. For best results, we recommend tapping the screen with the pad of your finger and not your finger nail.

Micro-USB Port

Connect to your computer with the included Micro-USB Cable to charge the watch

INCLUDED IN THIS PACKAGE



- One My First Kidi Smartwatch
- One micro-USB cable
- One parent's guide



WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

This toy is only to be connected to equipment bearing either of the following symbols:  or 

Le jouet doit uniquement être connecté à des équipements portant l'un des symboles suivants  ou .

The battery in this product must not be disposed of with household waste. This battery is recyclable. Please follow your local recycling regulations. Battery is not replaceable.

La batterie de ce produit ne doit pas être jetée avec les ordures ménagères. Cette batterie est recyclable. Veuillez suivre les règles en vigueur concernant le recyclage des produits.

The LCD label covering the LCD screen of the product is packing material, please remove this label before use.

PRODUCT SPECIFICATION

Display	1.44" color touch screen
Supported Languages	Multilingual
Micro-USB	Micro-USB 2.0 cable (included) for battery recharge
Battery	Li-ion Polymer Rechargeable Battery
Optimum Operating and Charging Temperature	32°F - 104°F (0°C - 40°C)

WARNING:

Prolonged wear of any watch can cause skin irritation for some people. Clean the watch band regularly by wiping it with a damp towel. Be careful not to get the watch wet, as this could damage the unit. Do not use soaps or household cleaners, as they can get trapped under the band and irritate the skin. Always dry the band before putting it back on. Irritation can also occur if the band is too tight or too loose. If redness, swelling, itchiness, or any other irritation occurs, remove the watch and consult a physician.

GETTING STARTED

Master Power Switch

Master Power Switch

When you use **My First Kidi Smartwatch** for the first time, you will need to slide the Master Power Switch (located on the underside of the watch) to the ON position. You may need a small tool such as a paper clip to move the switch to the on position. Then, fully charge the watch before first use. A full charge will take about 3 hours.

When the Master Power Switch is set to the OFF position, the unit will not function and the battery will not charge. Only move the switch to the OFF position when the watch will not be used for an extended period of time.

Note: It is not necessary to switch off the watch in daily use. Once the master power switch is off, the watch will stop functioning and after it is turned on again, the time and date has to be reset.



BATTERY RECHARGING

Note: Adult operation required.

To charge **My First Kidi Smartwatch**, the watch needs to be connected to a computer with the included **Micro-USB Cable**. To do so correctly, please follow these steps:

- Make sure that the **Master Power Switch** is set to the **ON** position before charging.
- Pull up the rubber cover of the **Micro-USB Port** on the side of the watch.
- Insert the **Micro-USB Cable** (small end) into the **Micro-USB Port** on the watch.
- Insert the large end of the **Micro-USB Cable** into a USB port on your computer..
- Once the connection is successful, you will see a battery recharging symbol appear on the watch screen.
- Check the charging progress regularly throughout recharging.
- When the battery is fully charged, a message will display on the screen for a while before the screen automatically turns off. You may then disconnect your fully charged watch from the computer.

Note: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the charging current, the remaining charge in the battery prior to recharging, and the ambient temperature. The optimum ambient temperature is 32°F - 104°F (0°C to 40°C).

BATTERY LIFE

The time the battery lasts between charges depends on play. Like other electronic devices, more frequent usage will drain the battery more quickly. Some activities are more demanding on the battery, such as taking photos and videos. The remaining battery capacity will appear in the top right corner of the screen. When the battery level is low, it is recommended to recharge the battery before further use. When the battery level is too low, the watch will not turn on until it is charged.

Battery Time for Reference

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2-3 days
Heavy Usage	1 day

Note: The above battery time assumptions are based on the screen display set to turn off when not in use.

Battery Maintenance

Charge the battery regularly to keep it operating at optimum performance, even when the watch isn't regularly in use. For example, charge the watch at least once every six months. Move the **Master Power Switch** to the **ON** position before recharging the battery. Move the **Master Power Switch** to the **OFF** position if the watch will not be in use for an extended period of time.

Charging Warning:

Only charge this device using the included micro USB cable connected to a computer. Do not charge using a third party adapter. Before use, inspect the cord to confirm that it is in good condition and that there are no breaks or exposed wires. Ensure there are no particles or liquid (water, juice, etc.) in either of the connectors before plugging in either end of the cable. The device should be completely dry with no debris in the cable connectors when charging. Plug in the cable securely, in the correct orientation. If the device is on when plugged in, a dialog box may open on your computer to allow you to access the device's drive. Never leave the device unattended while charging. Do not charge your device on soft surfaces, as they can trap heat around the device. Typical charging time is approximately 3 hours if the battery is fully depleted. Disconnect the device when it is fully charged. Do not leave the device charging for more than 4 hours.

SPLASH PROOF FOR EVERYDAY PLAY



- Do not put under running water.
- Do not submerge in water, not suitable for showering, bathing or swimming.
- Keep the rubber cover over the Micro-USB Port closed tightly while it is not in use in order to prevent any water getting in the watch.

TO BEGIN USING MY FIRST KIDI SMARTWATCH

Make sure the Master Power Switch is set to the ON position and that the battery is fully charged before using the watch.


To wake the watch, either press the Pet/Home Button, Clock Button, or double-tap the screen.

When turning on the watch for the first time, the language selection screen will display first. Then set the date and time. Swipe up or down over the month, day, year, hours and minutes to set the current date and time. Tap the check icon when you're done.

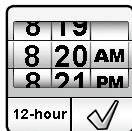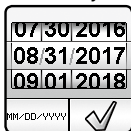

After the system setting, It will go to the Pet initialization. Tap the screen to select a name & profile for your pet.

It will go to Pet Mode as default after you finish all settings.

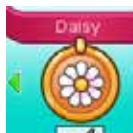

AUTOMATIC SCREEN OFF

To preserve battery life, the screen will automatically shut off after a short period of time when in Clock Mode.

Note: The auto screen off time can be adjusted in Settings / Advanced / Auto Screen Off. Please refer to the Settings section in this guide. From other activities, the watch screen will return to Clock Mode automatically if there is no input for 1 minute. When it is in Connection Mode, it will auto-exit after 3 minutes of inactivity. When in Music Play Mode, the auto-exit time is approximately 20 minutes

ACTIVITIES

Clock Display

When the screen is off, press the Clock Button to show the clock screen

- Tap the center of the screen to switch the clock face between analog and digital displays.
- Swipe left or right to see more clock faces.
- Swipe the screen up or down to pop up the menu with time talker icon, volume icon & light icon.
- Tap the time telling icon to hear the current time.
- Tap the volume icon to turn on/off the volume.
- Tap the light icon to turn on/off the light and change the light color

Press the Pet/Home Button to go to Pet Mode or Home menu.

Note: Hold the Pet/Home Button for approximately 1-2 seconds to turn off



Home Menu

When the screen is off, press the Home Button to show the pet. When in Pet Mode, Press Pet/Home button to display the Home Menu and choose an activity. Swipe left or right to scroll through the menu pages and tap an icon to enter the activity.



- | | |
|-----------------------|-----------------------|
| 1. Feeding Time | 9. Time Master |
| 2. Talk a Walk | 10. Feeling Time |
| 3. Bath Time | 11. Balloon Breathing |
| 4. Potty Time | 12. Music Player |
| 5. Training | 13. Alarm |
| 6. Silly Talk | 14. Timer |
| 7. Games | 15. Reminders |
| 8. 2 watch Connection | 16. Settings |

Care & Maintenance

1. Keep the rubber cover over the **Micro-USB Port** closed tightly when not in use in order to prevent dust or water from getting in.
2. Keep the watch clean by wiping it with a slightly damp cloth.
3. Keep the watch out of direct sunlight and away from direct heat sources.
4. Do not drop the watch on a hard surface, expose it to moisture, or immerse it in water.
5. Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:
 - Blowing on the lens.
 - Gently wiping the lens with a dry cloth.

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns.

While **My First Kidi Smartwatch** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor. Please note that focusing on at close range and handling a **My First Kidi Smartwatch** as a game controller for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

EPILEPSY WARNING

A small percentage of users may experience epileptic seizures when viewing flashing lights or patterns.

Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing. Turn off the light if you do not feel comfortable.

TROUBLESHOOTING

Check this section if you experience difficulty operating **My First Kidi Smartwatch**.

Problem	Correction
The watch has stopped working	<ol style="list-style-type: none">1. Turn the Master Power Switch OFF for 30 seconds.2. Turn the Master Power Switch ON again and then press the Home Button to turn the watch on. It should now work properly.3. If the watch doesn't work, recharge the battery and repeat steps 1 and 2. (Refer to the battery recharging section for details)
Screen is not working correctly	<ol style="list-style-type: none">1. Turn the Master Power Switch OFF for 30 seconds.2. Turn the Master Power Switch ON again and then press the Home Button to turn the watch on. The screen should now function normally.
Image taken is not clear	<ol style="list-style-type: none">1. Make sure the lighting conditions of the shooting environment are good.2. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in Care and Maintenance.
Cannot connect the watch to a computer	<ol style="list-style-type: none">1. Check the connections on the cable between the watch and the computer and review the Connecting to a Computer section of this guide.2. Turn the Master Power Switch OFF for 30 seconds. Turn the Master Power Switch ON and reconnect the watch and computer.
Cannot view videos or photos loaded from a computer	<p>Check if the files are in the correct directories on the My First Kidi Smartwatch. Photos should be put in the DOWNLOAD\PHOTO folder, and videos should be put in the DOWNLOAD\VIDEO folder on My First Kidi Smartwatch when it is connected to a computer. My First Kidi Smartwatch only supports the formats below:</p> <ul style="list-style-type: none">• Photos in Standard Baseline JPEG• Video in AVI (motion JPEG) created by My First Kidi Smartwatch

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:




- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTECH®
Model: 5528
Product name: My First Kidi Smartwatch
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

To access this compliance statement from the product software:

1. From the Main Menu, choose the Settings icon .
2. Go to the Advanced screen  and tap Set.
3. Choose FCC Compliance Statement  to see the statement.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil

est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2022 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-004127-000 (US)