 


vtech[®]

 
Instruction Manual

Kidi★Star™ **DRUM PAD**

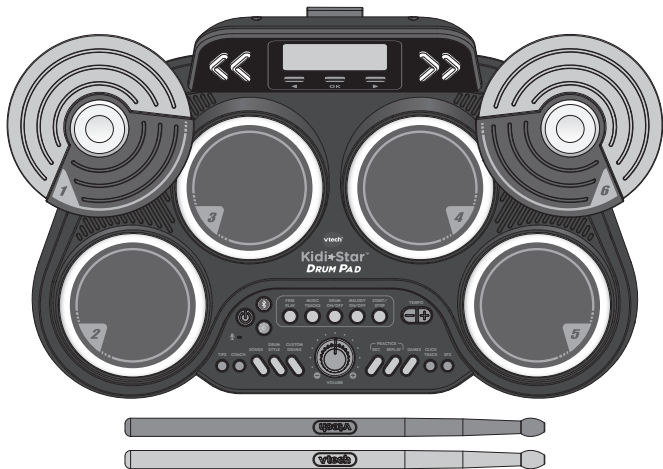

INTRODUCTION

Thank you for purchasing the **VTech® Kidi Star™ Drum Pad**! Play along the included 30 tracks or your own music player via the Bluetooth or line-in. Having fun to play with three fun drum games. Play the drum with more than 20 sets drum styles, you can even record your own drum sounds! Practice the drum beats and fill-ins in Coach mode and know more about drum via Drum tips! Record and play back your drum solo for the fans!

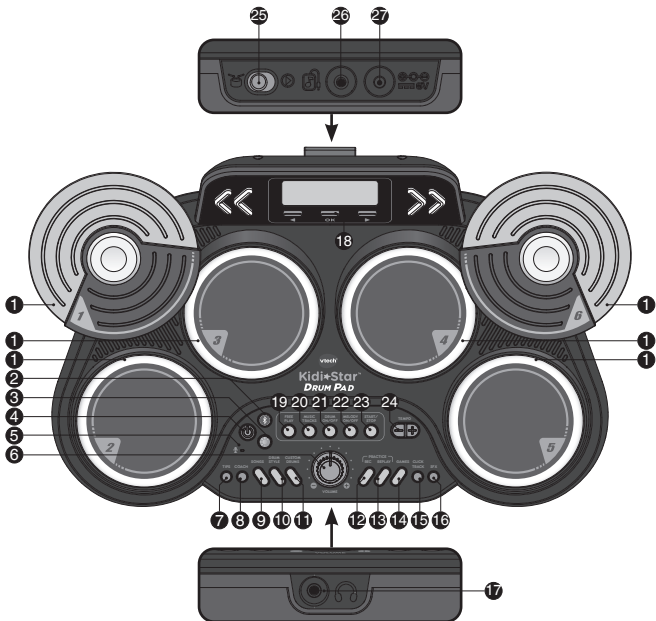

1	6 Drum Pads	10	Drum Style Button	19	Free Play Button
2	Bluetooth Button	11	Custom Drums Button	20	Music Tracks Button
3	Light Setting Button	12	Drum Recording Button	21	Drum On/Off Button
4	Power Button	13	Drum Replay Button	22	Melody On/Off Button
5	Microphone	14	Game Button	23	Start/Stop Button
6	Volume Control	15	Click Track Button	24	Tempo Buttons
7	Tips Button	16	SFX Button	25	Normal Play/Demo Switch
8	Coach Button	17	Audio-Out Jack	26	Line-in Jack
9	Songs Button	18	Selection Buttons _(Left, Right, OK)	27	AC Adapter Jack

INCLUDED IN THE PACKAGE

- **Kidi Star™ Drum Pad**
- Two Drum Sticks
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

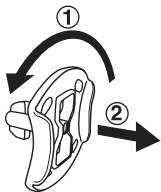

Unlock the Packaging Locks



- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.

GETTING STARTED

 
 
How to Exit Try-Me Mode

If the **Kidi Star™ Drum Pad** is in try-me mode in the packaging, slide the **Normal Play / Demo Switch** to the **Normal Play**  position which is located at the back of the unit from **Demo**  to exit try-me mode.

Notes: The batteries included in the unit are for demo purposes only and are not long life batteries. Please replace them with a whole new set of batteries for the best performance.

Turn Outwards The Drum Pads

Turn outwards the **Drum Pad 1** and **Drum Pad 6** to become wider to play!

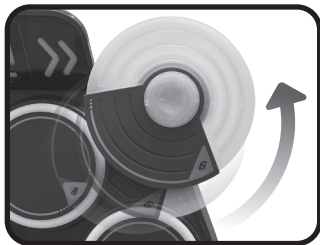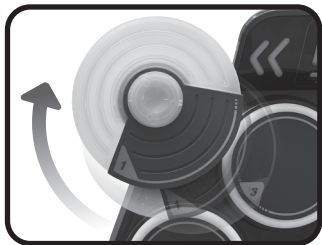

⚠ WARNING:

 
Adult assembly required for battery installation.
Keep batteries out of reach of children.

⚠ ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

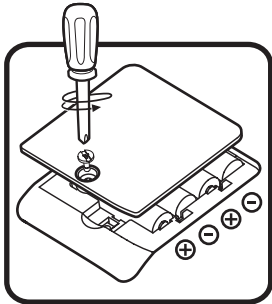

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

 


Safety information when using power supply for toys




VTech recommends a power supply (AC/DC adaptor) of the below specification:

Power rating: 6V/(800mA or above) DC output with 3.5mm(OD)/1.35mm(ID) plug (center positive).

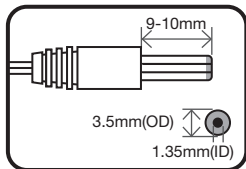- This toy should only be used with a power supply suitable for use with toys.
- The power supply is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged in toy with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be scrapped.
- Power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.





POWER ADAPTER CONNECTION

 
- Make sure your **Kidi Star™ Drum Pad** is turned off.
- Remove the batteries before connected the **AC adapter**.
- Locate the **AC Adapter Jack**  on the side of the unit.
- Connect an AC adapter (not included) to the **AC Adapter Jack** .
- Plug the adapter into a power outlet.
- Press the **Power Button**  to turn the system **On**.

Note: When the toy is not going to be used for an extended period of time, unplug the adapter.

PRODUCT FEATURES

1. Normal Play / Demo Switch

Slide the **Normal Play / Demo Switch** to the **Normal Play**  position from **Demo**  to exit try-me mode.

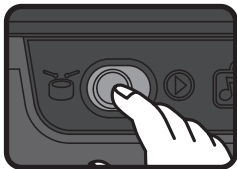


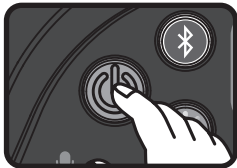 
2. Turntable Drum Pads

The number 1 and number 6 pads are the two cymbal drum pads. Turn outwards to become wider and inwards to narrower.



3. Power Button

Press the **Power Button**  to turn on the unit. Press the button again to turn off the unit.



4. **Microphone**

Use the **Microphone** to record your own drum sounds and jam with the music.

5. **Audio-Out Jack (Headphone Jack)**

Use an audio cable (not included) to connect the unit and the headphones for silent play or connect the unit to an external speaker or other audio devices.

6. **Line-In Jack**

Connect an external music player to the **Line-In Jack** using a 3.5mm cable (cable and music player are not included).

7. **AC Adapter**

Connect the unit to AC power (adapter is not included).

8. **Automatic Shut Off**

To preserve battery life, the unit will automatically power off after several minutes without input. The unit can be turned on again by pressing the **Power Button**.

If the unit repeatedly shut off or has abnormal responses, please insert new batteries and try again.

ACTIVITIES

1. **Free play**



Hit the drum pads to play your own drum pattern! Press the **Click Track Button** to play the click sound in order to help keeping a steady tempo for the drum play.



2. Music Tracks

Play along with the included 30 tracks by pressing the **Music Tracks Button**. Press the **Drum On/Off** or **Melody On/Off Buttons** to add or remove the drumbeats and melodies. Using the **Start/Stop Button** to stop and start the melody again. Speed up or slow down the melody by pressing the **Tempo Button**.



3. Coach 1 2 3 4 5 6

Press the **Coach Button** to practise drum beats, fills and rudiments in pattern. Follow the demo to learn different drumbeats.

4. Tips

Keep pressing the **Tips Button** to get to know the fun fact about drum.



5. Songs

Press the **Songs Button** to hear 6 included songs.

The tempo, drum on/off and the melody on/off buttons are not in this mode.



6. Drum Style

Selected different drum style sets for the drum sound by pressing the **Drum Style Button**. Press **Left** or **Right Button** or keep pressing the **Drum Style Button** to choose the drum style. Keep pressing the **Drum Style Button** during the music to change to next Drum style.

7. Custom Drums

Press the **Custom Drums Button** to assign the drum sounds and record your own drum sounds. Use **Left** or **Right Button** to choose Custom Drum Sounds or Drum Sound Recorder. Select to use the drum sets in Drum style after the sounds had been set.



- **Select the Drum Sounds**

Hit the pads to select the drum pad and press the **OK Button** to confirm. Then, it will enter the drum sound selection page. In the sound selection page, use the **Left** and **Right Button** to change the sound and press **OK Button** to confirm.



- **Record the Drum Sound**

Hit the pads to select the drum pad and press the **OK Button** to confirm. Then, it will enter the drum sound record page. In the sound record page, use the **OK Button** to record the drum sound. Choose the playback icon to replay the sound. Choose to record again by select the re-record icon or choose Tick icon to confirm the recording.

DRUM RECORD

8. Drum practice Recording

To be a good drummer, record your drum practice by pressing the **Recording Button**. It can record the drum sounds in Free Play Mode, Music Track and Songs. It will automatically stop recording if enter other page or after few seconds.

Press the **Replay Button** to replay the recording to see how much you can improve every day.

9. Games

Press the **Game Button** to play three drum games.



• Beat Challenge

The music bars will fall from the top toward the bottom. Hit the corresponding pads when the music bar reaches the bottom line. Let's see how many combo you get!



• Chase the Light

The pads will light up with different color. Hit the pads with the corresponding color to chase the light!



• Voice Jam

Press the **OK Button** to record your voices. It will jam your voice with the music to become an art pieces.

10. Click Track

Practice makes perfect. Play the click track to keep a steady tempo for the drum play by pressing the **Click Track Button** in Free Play mode.

11. Audience SFX

Press the **SFX Button** to play different cool sound effects.

12. Light Setting

Press the **Light Setting Button** to select different light setting.



• Drum Pad Color Change

There are 4 drum pad color sets and 1 custom pad color; in custom pad color, press **Left** and **Right Buttons** or hit the pads to select the drum pad. Then, it will enter the pad color selection page. In the pad color selection page, use the **Left** and **Right Button** to change the pad color and press **OK Button** to confirm.



• Neon light On/Off



• Pad LED On/Off




• LCD Backlit On/Off



• Pad luminosity

 


13. Bluetooth

Press the **Bluetooth Button**  to connect to a nearby device via Bluetooth connection. When the drum pad is pairing, the Bluetooth light will flash. When the drum pad is successfully connected with a device, the Bluetooth light will remain on. Please be noted that the recording function is not available when the Bluetooth is connecting.

Bluetooth Connection

1. Press the **Bluetooth Button** then the **Bluetooth Button** will light up and flash.
2. Enter the Bluetooth interface of your device and begin searching for Bluetooth devices.
3. Select “VTech 5726 Drums” when you see it displayed on your devices.
4. Enter the PIN number from the drum pad on the device.
5. When the Bluetooth connected. The **Bluetooth Button** light will remain on.
6. To exit Bluetooth mode, press the **Bluetooth Button** again.
7. The drum pad will automatically search and connect to the last Bluetooth device that it was connected to before. You do not need to enter the PIN number again.



14. Line in

Connect an external music device with a 3.5mm cable. The Bluetooth will be disconnected when the line-in is connected. Please be noted that the recording function is not available when the line-in is connecting.

DRUM STYLE

1	Vintage	15	Reggae
2	Rock Drums	16	Tabla
3	R&B	17	Hand Percussion
4	Pop	18	Disco
5	EDM	19	Silly animals
6	Latin 1	20	Pots & Pans
7	Latin 2	21	Silly sounds 1
8	Marching Band	22	Silly sounds 2
9	Big Drums	23	Silly sounds 3
10	Traditional African	24	Silly sounds 4
11	Snaps & Claps	25	Silly sounds 5
12	Metal	26	Silly sounds 6
13	Jazz 1	27	Custom drum sounds
14	Jazz 2	28	Drum sound recorder

SONG LYRICS

SONG 1: THE PERFECT GROOVE

I'm looking for the perfect groove
To make my day
Looking for the perfect beat
To sit right down and play

Looking for the perfect groove
Don't need to be hasty
Gonna take my time
And find the one that's really tasty

Gotta be a beat that
Makes me feel so good
Following the rhythm
Like I know I would

It's gotta be a beat
That fits my mood
The kind of beat
With a funky groove

The beat is bumping
The music is pumping
The bass is thumping
Just the way we like it

The beat is bumping
The music is pumping
The bass is thumping
Just the way we like it

Looking for the perfect groove
To make my day
Looking for the perfect beat
To sit down and play

Looking for the perfect groove
To make my day
I'm searching for that perfect beat
To sit right down and play

SONG 2 : YOU DO YOU

You look into the mirror
Who do you see
An individual
With unique abilities

Like a ray of sunshine
Breaking through the clouds
Like a snowflake falling
Softly to the ground

Every thought, every movement
Is part of who you are
Follow the beat of your heart
It's gonna take you far

You do you
Do the things you gotta do
You do you
Be who you are

You do you
Be the best that you can
You do you
Be a shining star

Shining star

SONG 3: DANCE TO THE BEAT

The lights are flashing
On the dance floor
The drums are banging
In my head

The party's starting
And the beat is dropping
I'm thinking about
what you said

Go with the flow
Follow the rhythm
Let the groove become
Part of you

Go with the flow
Be in the moment
Listen to the music
And you move, when you

Dance to the beat
The drums are hitting
Move your feet

Dance to the beat
Shake your body
Feel the heat

Dance to the beat
The drums are hitting
Move your feet

Dance to the beat
It's time to party
Got friends to meet.

Dance to the beat

SONG 4: EVERYDAY'S A GOOD DAY

Every day's a good day
No matter where you are
You can look up and down
And all around, but you never
Have to look too far

Open up your front door
And take a big step outside
Look to the left
Look to the right
Now you know everything's
Gonna be alright

Every day's a good day
Come rain or come shine
Follow your heart
Follow your dreams
Things are never as bad as they seem

Every day's a good day
Come rain or come shine
Walk in the light
Leave the dark behind
Do the things you love
And love the things you find

SONG 5: ROCK IT TO THE STARS

Standing in the light
In the center of the stage
Rocking to the beat
Every night and day

Can you feel it?
Can you feel it?

Reaching out a hand and
Grabbing the beat
Pulling it closer
The rhythm is sweet

Can you feel it?
Can you feel it?

Looking to the sky
I'm wondering why
I can't hop into a rocket
And take off and fly

Up and up we go
Higher and I know, we're gonna

Rock it to the stars
Take a trip to Jupiter, Saturn, and
Mars, gonna
Rock it to the stars, got
Light years to go and we're
Gonna go far

Rock it to the stars
Moving to the beat of
Time and space, we're gonna
Rock it to the stars
Gonna fly around the sun
Put a smile on my face

Rock it
To the stars
Rock it
To the stars

Rock it!

SONG 6: THAT'S THE WAY TO PLAY

The music is rocking
Time to add the beat
Gotta set the groove
And make it complete

Let's have some fun
And play along
To keep the rhythm
Of our song

Pound it out
On the 2 and the 4
The backbeat's driving
The kick on the floor

Lay down the beat
Strong and steady
Come on and pick up your sticks
Are you ready?

1, 2, 3, 4
Keep it going
5, 6, 7, 8
The groove is flowing
1, 2, 3, 4
What do you say
5, 6, 7, 8
That's the way to play, hey

1, 2, 3, 4
Keep it going
5, 6, 7, 8
The groove is flowing
1, 2, 3, 4
What do you say
5, 6, 7, 8
That's the way to play, hey

That's the way to play

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If there is a pairing problem with your Bluetooth® device, please follow these steps:

1. On your Bluetooth® enabled device, please go to Bluetooth® settings. If “**VTech 5726 Drums**” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable Bluetooth® or restart your device.
3. Turn the unit off and on and repeat the pairing process.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Bluetooth® Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

Radiation Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 7.8 inches between the radiator and your body.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5726
Product Name: Kidi Star™ Drum Pad
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

