


Photo # 1 Pen-Tablet Front View



Photo # 2 Pen-Tablet Rear View




Photo # 3 Pen-Tablet Unit Partially Disassembled

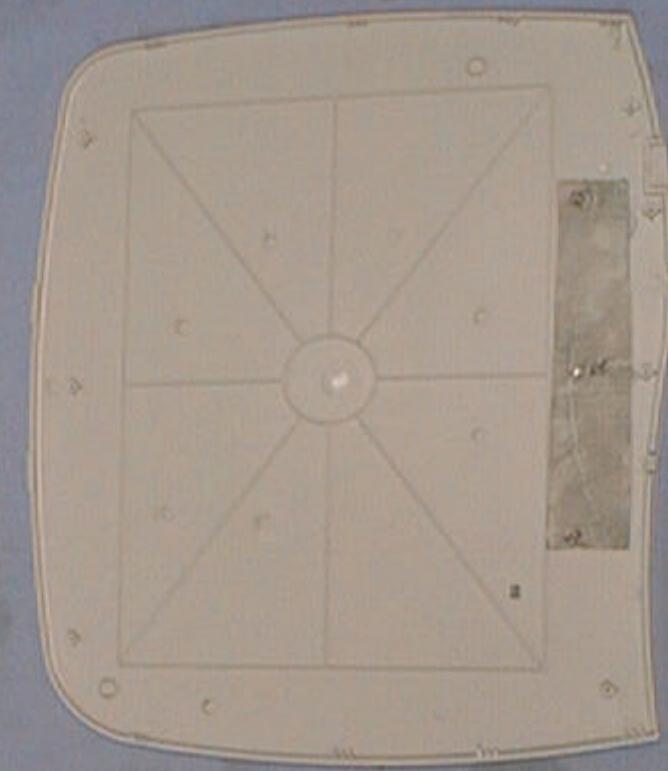

00E1213

Photo # 4 Pen-Tablet Unit Partially Disassembled

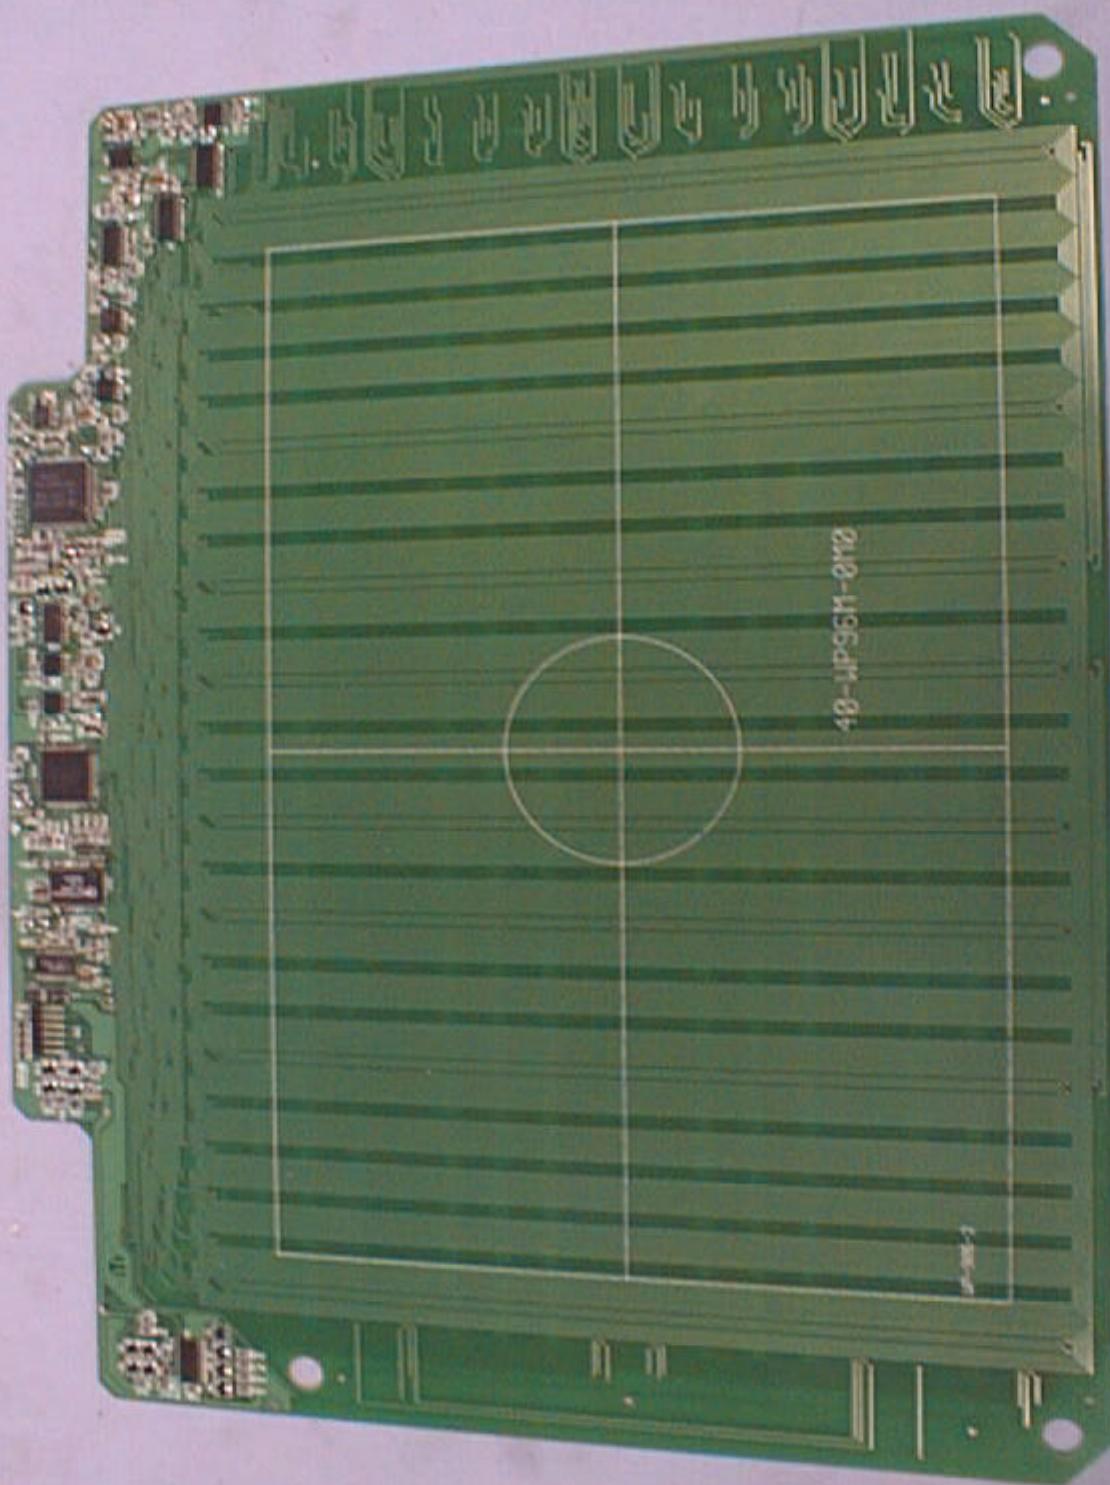



00E1213

Photo # 5 Pen-Tablet Unit Partially Disassembled



00E1213

Photo # 6 Pen-Tablet Unit Partially Disassembled

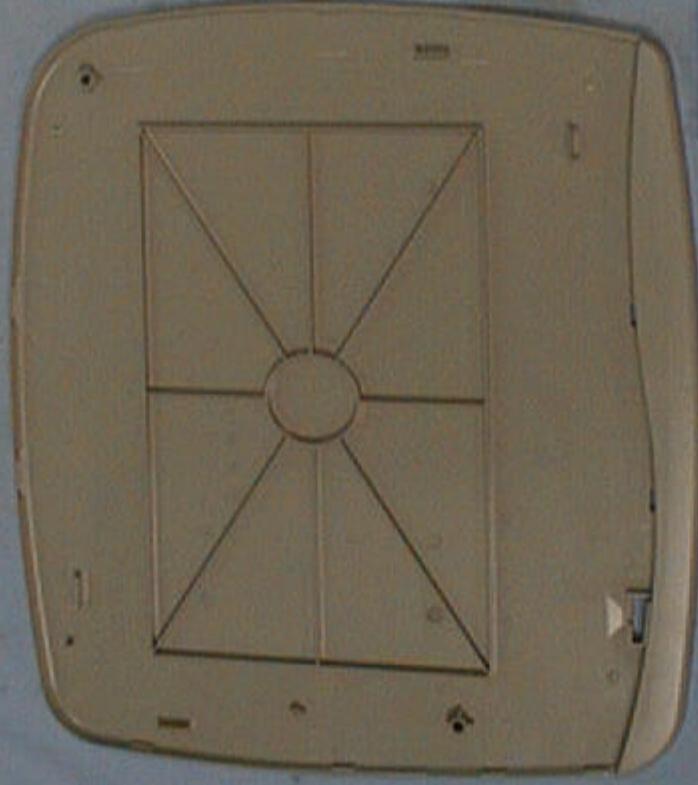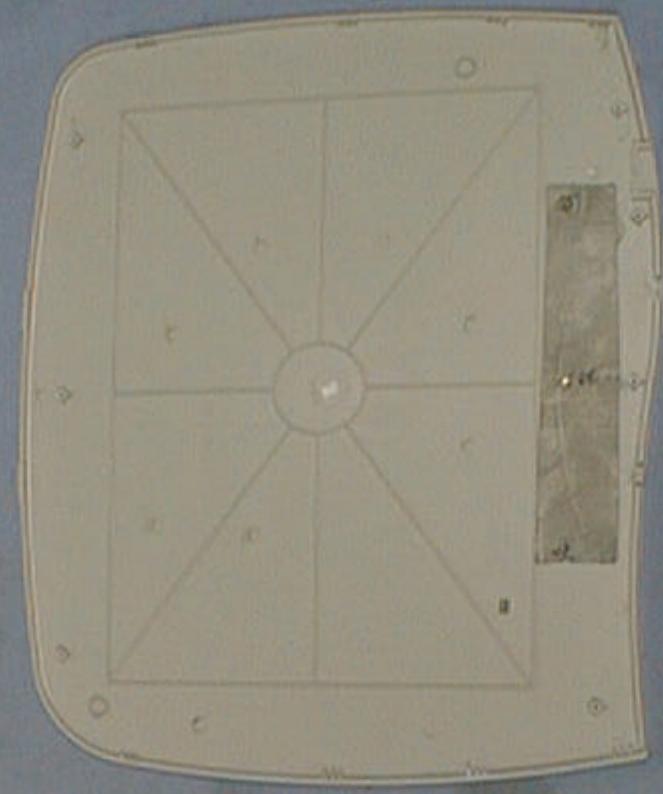

00E1213

Photo # 7 Cordless Mouse Front View



00E1213

Photo # 8 Cordless Mouse Rear View



00E1213

Photo # 9 Cordless Mouse Unit Partially Disassembled

00E1213

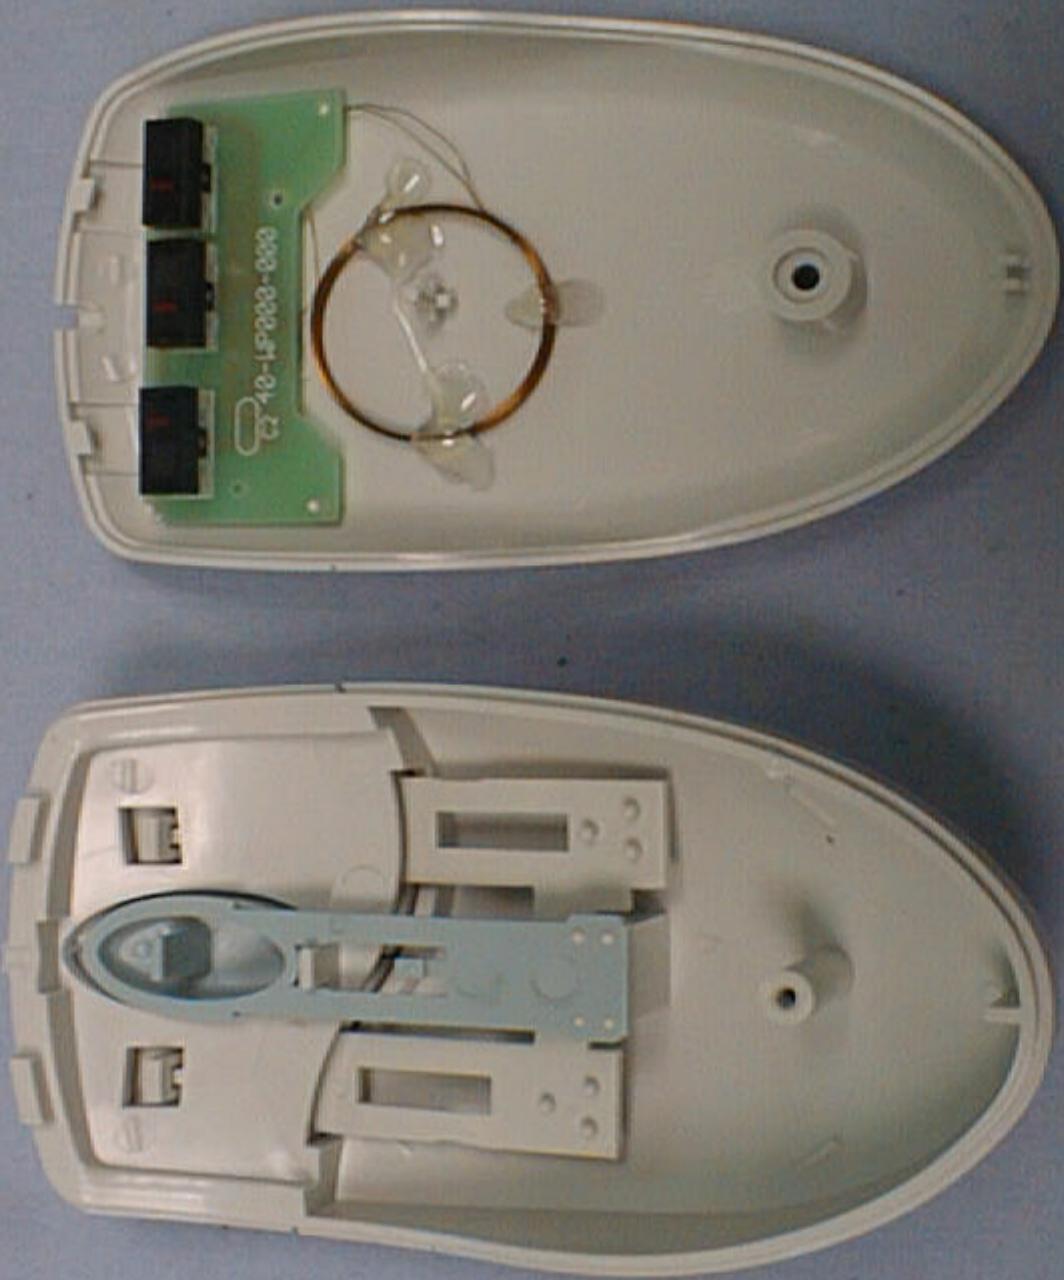


Photo # 10   Cordless Mouse Unit Partially Disassembled

00E1213

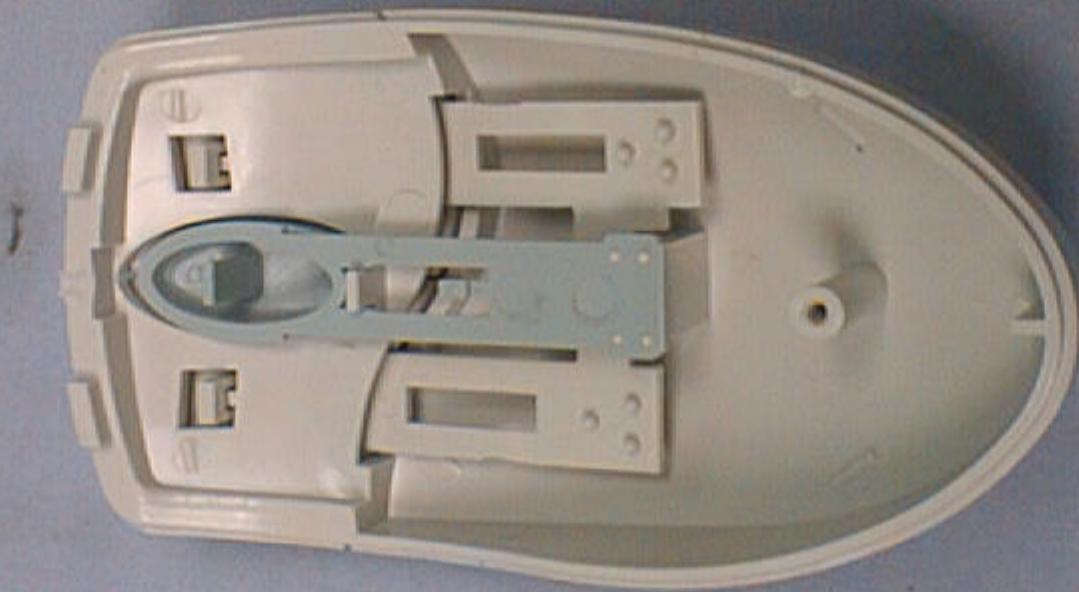
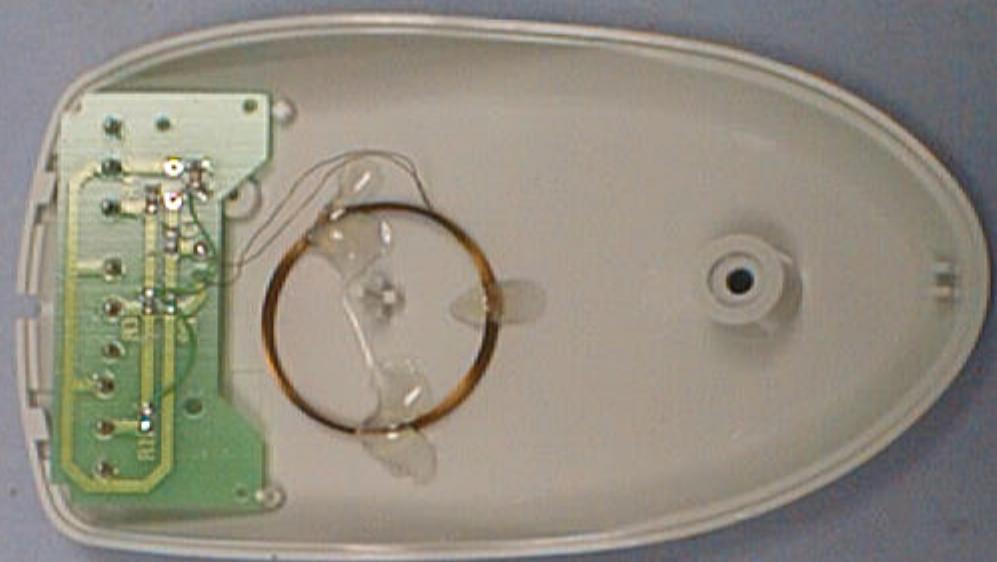


Photo # 11 Cordless Pen Front View

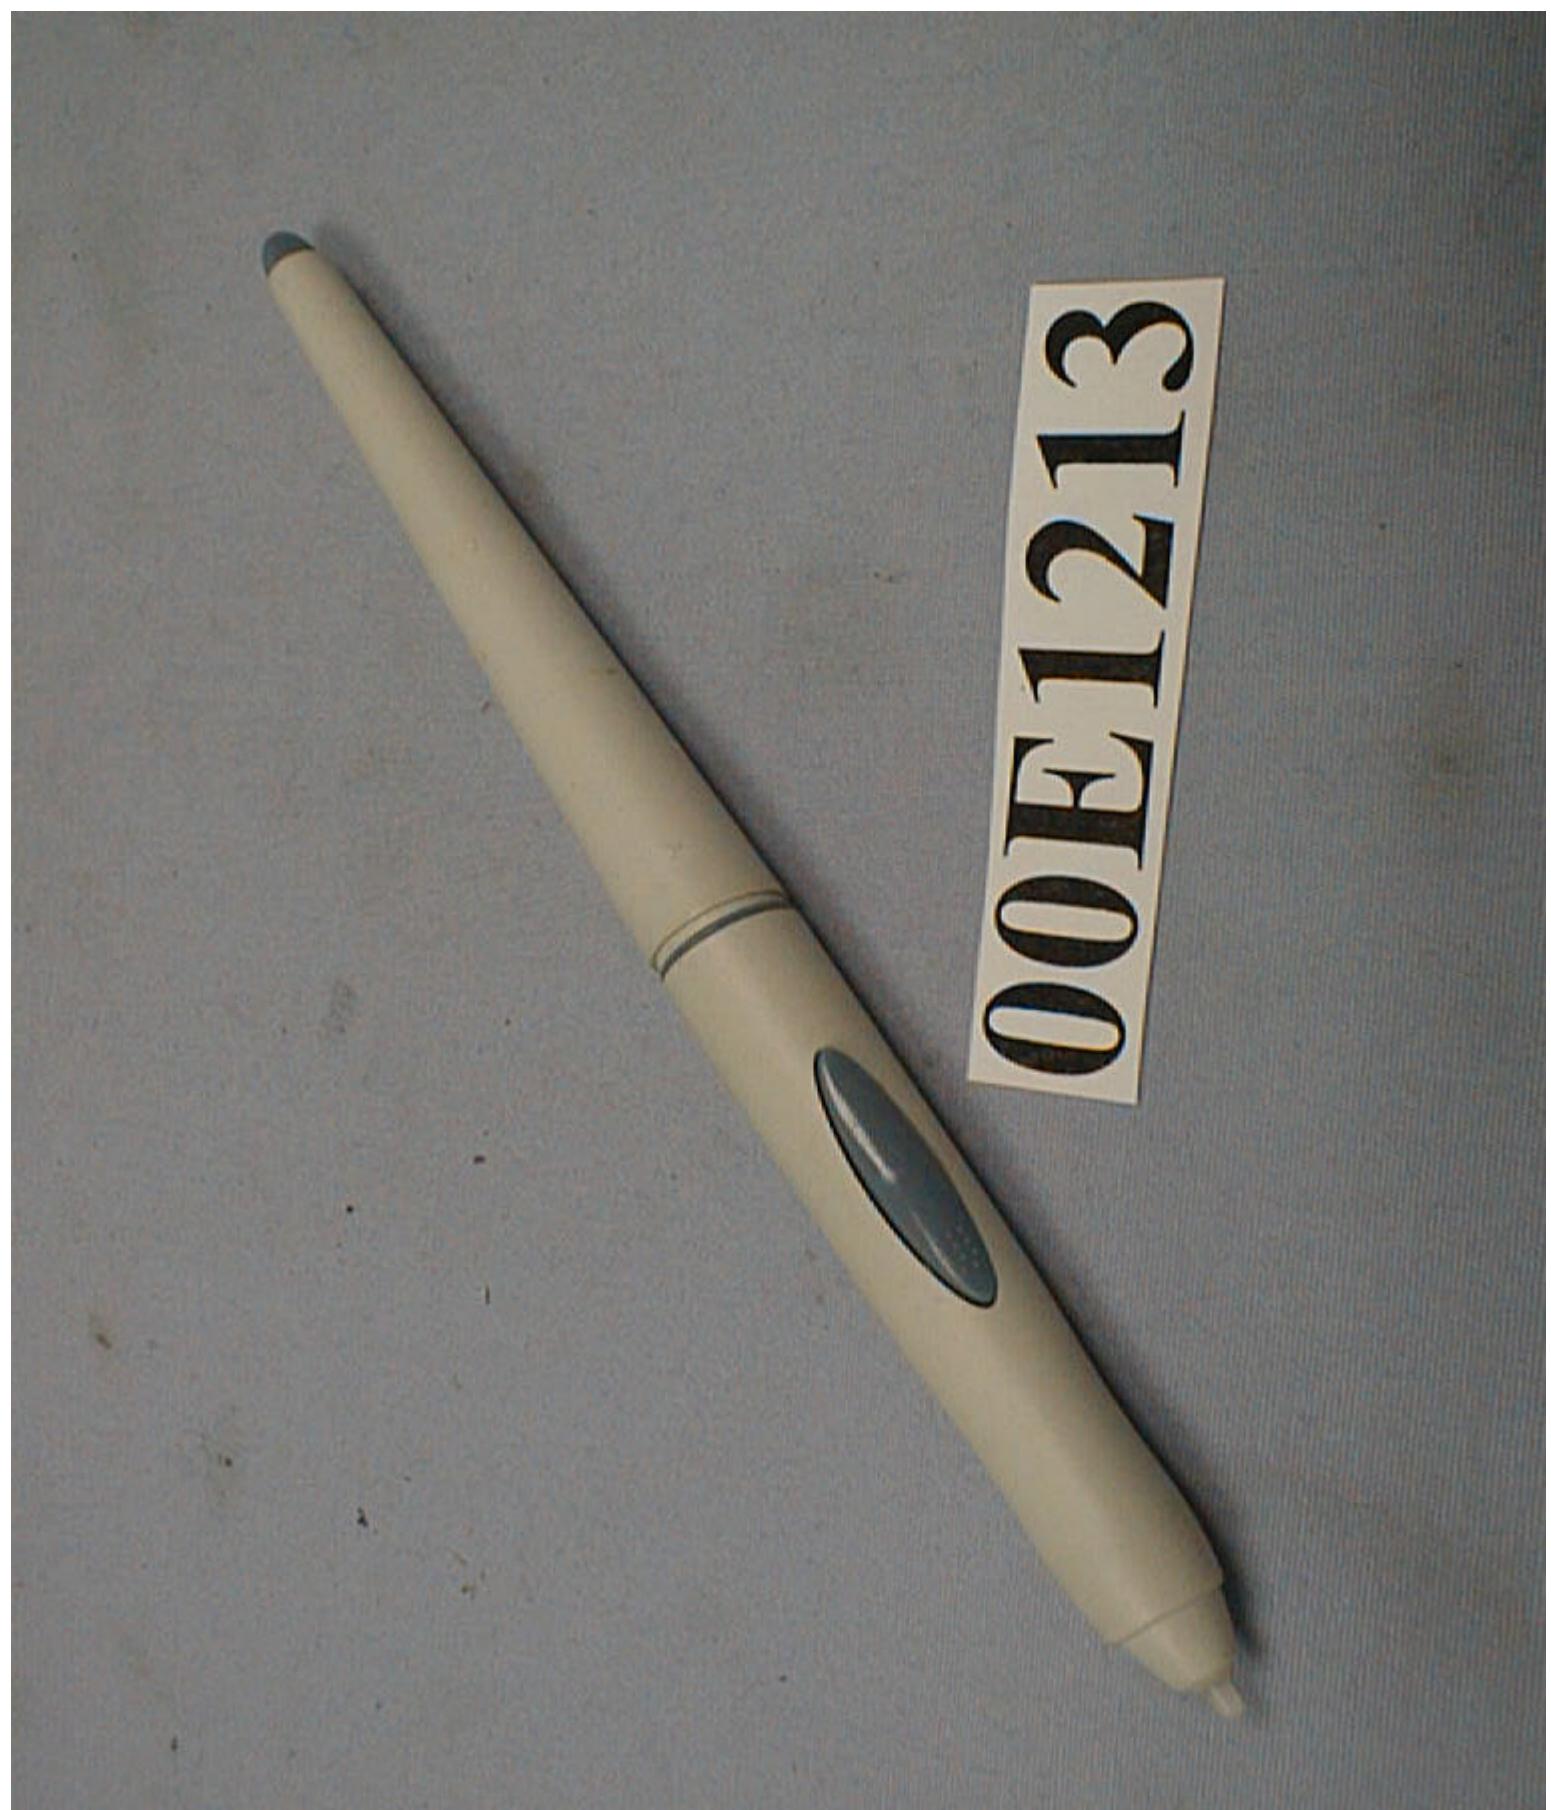


Photo # 12 Cordless Pen Unit Partially Disassembled



00E1213