 


FCC ID: G6D370H

# RADIO CONTROL

## TRIM CONTROL SWITCH:

Trim switch is located on underside of vehicle. It is used to align the wheels of your vehicle for consistent drive in a straight line. Move switch left or right until desired alignment is reached.

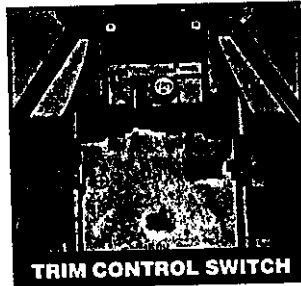

## FOR BEST RESULTS:

- Be aware of radio frequency. Avoid operating within range of another unit using same frequency. Radio frequency is indicated on package, transmitter and vehicle.
- Use a New Bright 6 Volt rechargeable battery pack.
- Use fresh alkaline batteries.
- Note:* If malfunction occurs, replace batteries.
- Do not bend or pull antenna.
- Keep **ON/OFF** switch in 'OFF' position when toy is not in use.
- Remove batteries when toy is not in use for extended period of time.
- Operate transmitter within 100 feet of vehicle.
- Keep contacts clean from rust and dust.
- Do not mix alkaline, standard or rechargeable batteries in the battery clip.
- Do not mix old and new batteries in the battery clip.

## TROUBLE SHOOTING

Always check the batteries! 90% of malfunctions relating radio controlled vehicles are caused by dead or incorrectly installed batteries.

## BATTERY REQUIREMENTS:

**VEHICLE:** One 6.0V rechargeable NiCd battery pack and quick charger.  
**OR** Four 'AA' Alkaline Batteries (Battery Clip)  
**TRANSMITTER:** One '9V' Alkaline Battery.

## CAUTION:

The radio receiver in your vehicle is a sensitive electronic device. Damage can occur if operated in sand, mud or water. Operation should be limited to clean and dry surfaces. Exposure to heat or hot direct sunlight for long periods can also cause damage.



CAUTION-ELECTRICALLY OPERATED PRODUCT. NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

# INSTRUCTION MANUAL

# 6.0V FULL POWER FUNCTION RADIO CONTROL



- NO. 31654
- NO. 31655
- NO. 61654
- NO. 61655
- NO. 31612
- NO. 61612

AGES 8 AND ABOVE

## UNPACKING & ASSEMBLY:

- Remove vehicle, transmitter, plastic tube and retractable radio antenna from foam tray.
- Screw threaded end of antenna clockwise into cavity located on top side of transmitter.
- Carefully straighten antenna on vehicle by inserting into the white plastic tube. Do not pull antenna.
- Tie a knot at the end of antenna to secure tube in place.

## TWO POWER OPTIONS: ALKALINE BATTERIES

 
NOTE: To improve performance and increase running time, the use of a New Bright 6 Volt rechargeable battery pack is highly recommended.

- Insert 4 'AA' alkaline batteries into included battery clip with positive (+) and negative (-) ends matching compartment markings.
- Insert clip into vehicle chassis. (Label facing out)

- Slide clip forward (following the direction of the arrow). Turn compartment lock toward compartment to secure.
- Power contacts should be touching.



BATTERY CLIP INSERTION

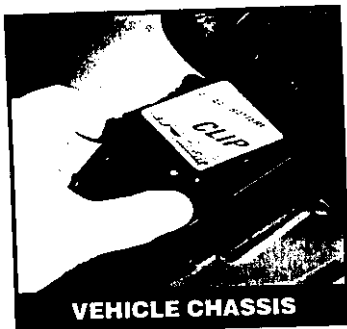


VEHICLE CHASSIS


**WARNING:** The battery clip included is not rechargeable. Any attempt to do so may cause personal injury and damage.

## 6.0V RECHARGEABLE BATTERY PACK

 - The NEW BRIGHT 6.0V POWER CHARGE SYSTEM is designed as an alternative to expensive disposable batteries.
- Charge the rechargeable 6.0V NiCd battery pack with the quick charger.
- Insert the charged 6.0V battery pack into vehicle chassis.

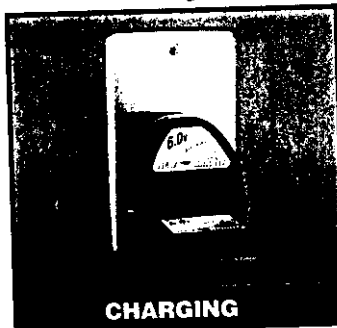

CHARGING

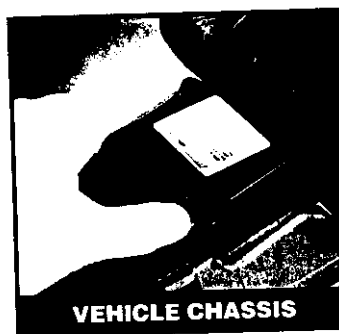 


VEHICLE CHASSIS

- Slide battery pack forward (following the direction of the arrow). Turn compartment lock toward compartment to secure.
- Power contacts should be touching.

NOTE: Be sure to follow the instructions of the 6.0V POWER CHARGE SYSTEM and completely understand all charging and recharging instructions of the battery pack and charging unit. Adult supervision is advised.

## TRANSMITTER BATTERY INSTALLATION:

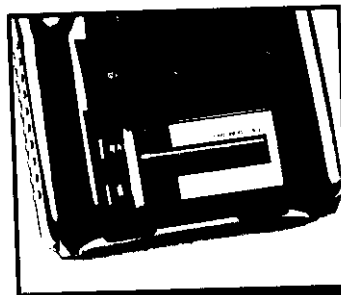 

TRANSMITTER BATTERY INSERTION

- Remove battery cover located on back side of transmitter.
- Insert one '9V' alkaline battery with positive (+) and negative (-) ends matching the compartment markings.
- Replace battery cover.

## OPERATION:

1. Turn **ON/OFF** switch on bottom of vehicle to 'ON' position.
2. **FORWARD DRIVE:** Push left joystick up to move forward. Joystick will automatically return to the Neutral position when released.
3. **REVERSE DRIVE:** Push left joystick down to move in reverse. Joystick will automatically return to the Neutral position when released.
4. **LEFT/RIGHT STEERING:** Move right joystick left or right for desired direction while operating Forward or Reverse function.

Joystick controls  
Forward and Reverse  
drive.

Joystick controls  
Left and  
steering.

