



# WHAT'S INCLUDED

 
## Component Checklist

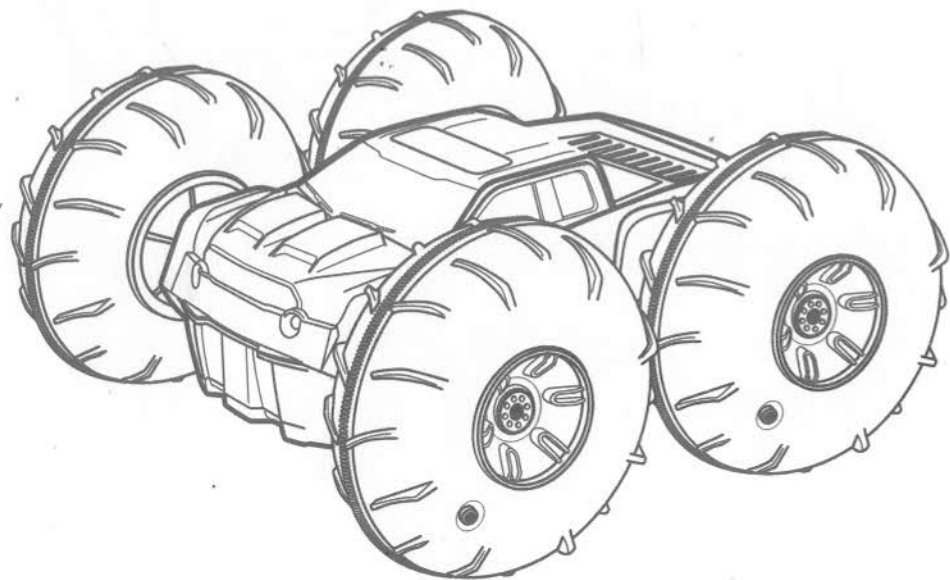


(1) R/C Super Rebound

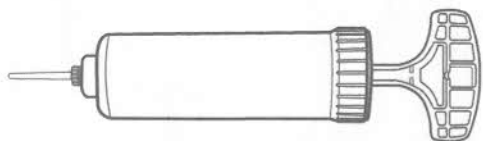

(1) Air Pump




(2) "AA" Batteries

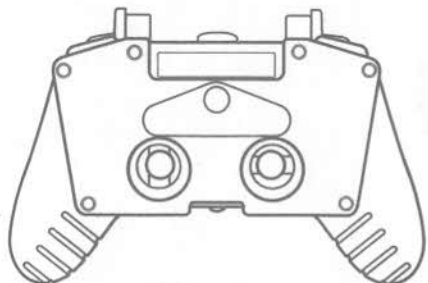

(1) Transmitter



(1) USB Charging Cord

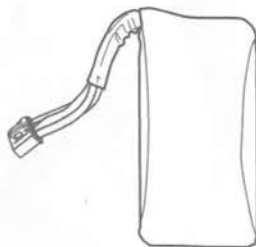


(1) Rechargeable Battery Soft Pack

# TRANSMITTER

## Battery Installation

1. To open battery compartment cover on transmitter, slide in the direction indicated by the arrow.
2. Insert 2 "AA" size batteries. Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.
3. Replace the Battery Compartment Cover making certain that the Compartment tab has "snapped" into the locked position.

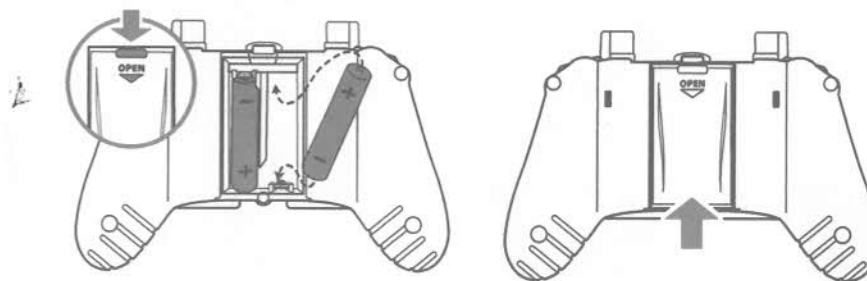

Note: When replacing Transmitter batteries:  
Do not mix old and new batteries.  
Do not mix alkaline, standard or rechargeable batteries.  
Use alkaline batteries only.

## Syncing

This transmitter is equipped with 2.4GHz technology which allows up to 6 vehicles to be used at the same time.


Before first use and after any time the batteries are replaced, the transmitter must be paired to the vehicle.

To sync transmitter and vehicle, follow the steps below:

1. Correctly install batteries in the transmitter.
2. Place vehicle upside down, and turn Vehicle ON/OFF switch to the ON position. The vehicle is only in sync mode for 30 seconds.
3. Immediately press and hold the Forward/Reverse joystick on the transmitter. Keep holding until wheels move (up to 30 sec.).

# TRANSMITTER


## Functions

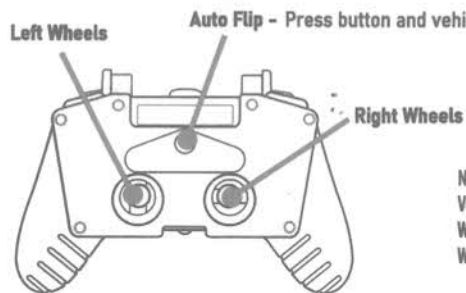

Note:  
Vehicle has working lights.  
When vehicle is powered ON, headlights and side lights will flash.  
When vehicle is in motion the lights will glow.

## How to Drive

### FORWARD/REVERSE DRIVING AND FLIPS

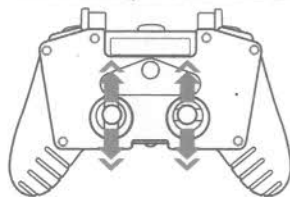


**FORWARD DRIVING**  
Push BOTH joysticks forward for Forward Driving.


**REVERSE DRIVING**  
Pull BOTH joysticks backward for Reverse Driving.

**FLIPS**  
Push both joysticks forward to begin Forward Driving, then quickly pull back both joysticks to flip the vehicle over.

## TURNING

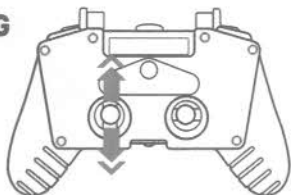


**RIGHT TURNING**  
Push LEFT joystick forward to turn right while driving forward. Pull LEFT joystick back to turn right in reverse.

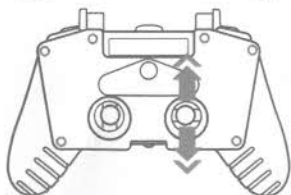


**LEFT TURNING**  
Push RIGHT joystick forward to turn left while driving forward. Pull RIGHT joystick back to turn left in reverse.

## SPINS

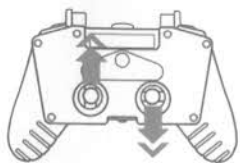


**360° SPINS - Clockwise**  
Push joysticks as shown for Clockwise Spinning.

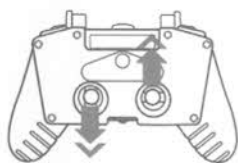

**360° SPINS - Counter-Clockwise**  
Push joysticks as shown for Counter-Clockwise Spinning.

# VEHICLE


## Features

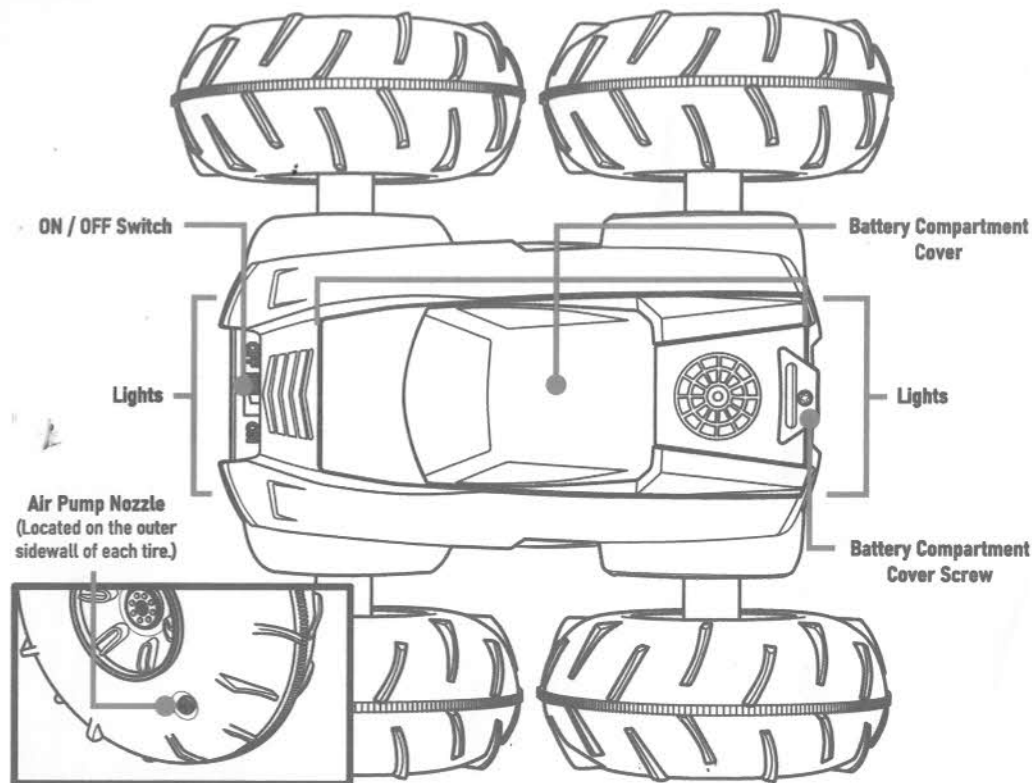

## Inflating the Tires


To properly perform flips, ensure the tires are fully inflated.  
A properly inflated tire should be firm, but not hard.

1. Locate the Air Pump Nozzle on the sidewall of the tires.
2. Insert the pin of the Air Pump into the tire nozzle.
3. Pull the Air Pump handle out fully, then push it back in.
4. Repeat until tires are fully inflated and firm to the touch.
5. Avoid overfilling tires. If tires are over-inflated, to slightly deflate the tire.

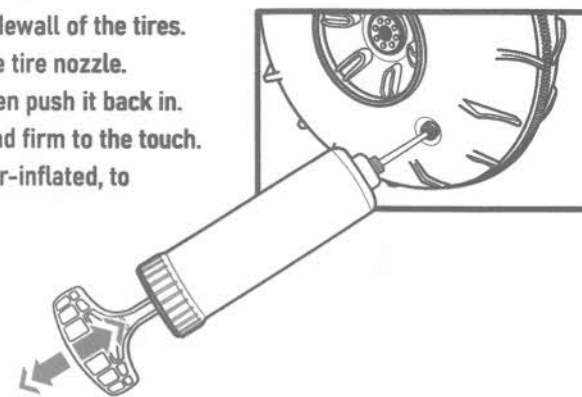

# VEHICLE

## Installing Vehicle Battery

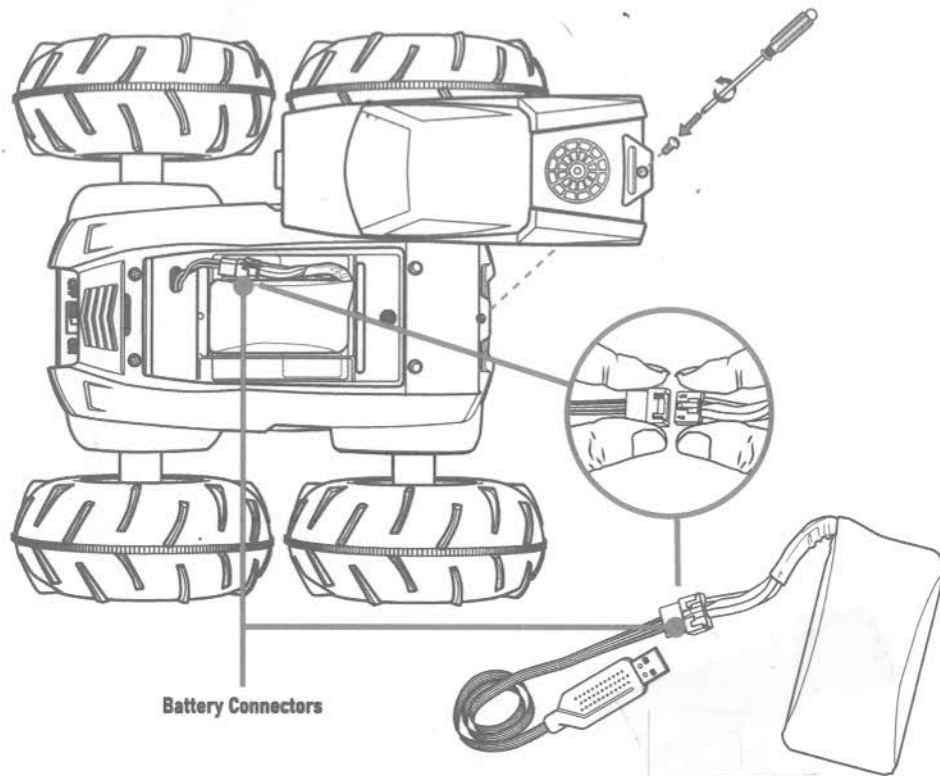

Battery Connectors

## Charging

This vehicle is equipped with a removable Lithium-Ion battery soft pack that is recharged via USB. Vehicle must be switched OFF prior to charging.


1. Locate the Battery Compartment Cover Screw located on the top side of vehicle (shown in Vehicle Features Section).
2. Remove screw and slide open compartment cover. Place screw in a safe place.
3. Locate the Battery and Vehicle Connectors, shown above. Grab hold of the plastic connector. Using a fingernail, pull back the locking tab and pull to separate the connectors. Do not grab and pull by the wires. Remove the Battery Pack.
4. Connect the supplied USB Charging Cord (shown above) by pressing the Battery and USB connectors together until the locking tab clicks in place.
5. Plug USB into any powered 5V DC USB port. Charging is completed in approximately 1.5-2 hours (when charging from a computer).
6. After charging is complete, reconnect the Battery and Vehicle and store the USB cord in a safe place. Replace compartment cover and secure with screw.

# PROPER USE

## Precautions and Care




Wipe body with a soft rag or cloth.

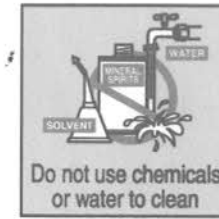

Do not use chemicals or water to clean



Brush areas where dirt gets trapped.

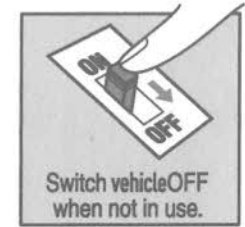

Switch vehicle OFF when not in use.



DO NOT LEAVE OUT IN THE SUN



DO NOT DRIVE ON SAND



DO NOT GET WET

## CAUTION!

Do not recharge Battery if vehicle is hot or warm to the touch. Allow Battery to cool before recharging. Recharging a hot or warm Battery will shorten the life of the unit.

Do not recharge the Battery if it appears to be damaged or leaking.

Do not use included USB Cord for anything other than the intended purpose.

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Do not attempt to disassemble Battery soft pack.

Always remove Batteries from transmitter when not in use.

Only an adult should charge Batteries.

## Trouble Shooting

### Problem - Vehicle does not move or moves slowly.

- Has the rechargeable Internal Battery been fully charged?
- Make certain there are fresh alkaline batteries in the transmitter and that they have been installed in the correct position.
- Are the (+) and (-) markings on the alkaline batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

### Problem - Vehicle does not flip over.

- Check that the tires are fully inflated. Inflate until firm.

### Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

### FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



# OWNER'S MANUAL

*Please read and understand all precautions prior to use.*

**Thank you for choosing a premium New Bright product.**

USA & Canada  
30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization (RA) number and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:  
1-877-NBI-TOYS  
(1-877-624-8697)  
Monday through Friday, 8:00 AM to 5:00 PM Eastern Time