

## TROUBLESHOOTING & SUPPORT

**90% of all difficulties experienced with radio controlled boat are due to either weak batteries or batteries that have been installed incorrectly. When batteries become weak, the boat may not necessarily stop completely. However, boat may exhibit slow response, slow speed or erratic behavior.**

**Problem - Boat does not move or moves slowly.**

- Make certain the water sensor is making contact with water.
- Make certain there are fresh alkaline batteries in the transmitter and that they have been installed in the correct position.
- Are the (+) and (-) markings on the alkaline batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Has the internal battery in the boat been charged?
- Are the metal contact tabs touching, rusty or dirty in the transmitter?

**Problem - Boat moves by itself or exhibits reduced range from the transmitter.**

- Make certain there is no outside radio interference in your area. The best way to test this is to take the Boat as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

- Always remove Batteries from transmitter when not in use.
- Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.
- Do not attempt jumps or tricks with this boat.
- Do not attempt to remove internal battery.
- Adult supervision recommended.

## PROPER USE, PRECAUTIONS & CARE



### F.C.C. CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# ADVENTURE FORCE

## NANO BOAT

RADIO CONTROLLED BOAT



## OWNER'S MANUAL

Please read and understand all precautions prior to use.

USA & Canada  
30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary you will be issued a Return Authorization (RA) number and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:  
1-877-NBI-TOYS  
(1-877-624-8697)  
Monday through Friday, 8:00 AM to 5:00 PM Eastern Time

U.S. Toy Sales and Marketing Co. Inc.  
30260 Oak Creek Drive - 2nd Floor  
Wisnom MI 48393  
1-877-624-8697  
<http://www.newbright.com/>

REF-6706

JN127-21

## TRANSMITTER BATTERY INSTALLATION



1. To open battery compartment cover on transmitter, remove the 4 small screws and set aside.
2. Insert 3 "AAA" alkaline batteries. Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.
3. Replace and tighten the 4 small screws to secure the battery compartment cover.

 
### Note: When replacing Transmitter batteries:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Use alkaline batteries only.


## TRANSMITTER FUNCTIONS

### Auto pairing:

1. Install 3 "AAA" alkaline batteries in transmitter.
2. Make sure boat is fully charged then place in the water.
3. Indicator light on transmitter will flash for pairing.
4. When indicator light stops flashing pairing is complete. You are now ready to play.

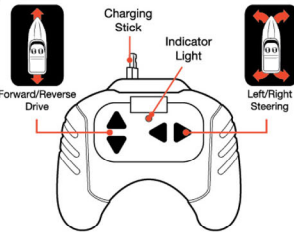

## BOAT FUNCTIONS

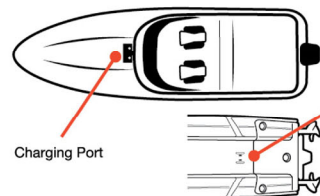 


**Water Sensor**  
On the underside of the boat there is a water sensor. This is a safety feature that prevents the propeller from running unless the boat is in water.

## CHARGING INSTRUCTIONS
 
### How to Charge:

1. Raise charging plug at top of controller.
2. Align boat as shown.
3. Plug the charging stick into the charging port on the top side of the boat.
4. The charging indicator light will turn on when the boat is charging successfully. If the charging indicator is flashing while the boat is connected, it means that the batteries in the controller are low and should be replaced.
5. When charging is completed, in approximately 15 minutes, the charging indicator light will turn off.

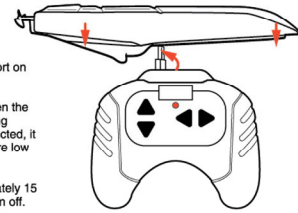


## Operating and Caring

Radio waves control and drive the boat. Any of the following conditions may interfere with the behavior and function. The Transmitter signals can easily be interrupted. Caring for your Transmitter and boat is illustrated on these pages.

**THIS BOAT IS ENGINEERED TO RUN ON THE WATER'S SURFACE. FULLY SUBMERGING BENEATH WATER WILL DAMAGE INTERNAL ELECTRONICS AND MECHANICAL PARTS.**

 - Do not operate boat where there are water plants, rubbish or other obstacles in the pond. This could damage or impair propeller.
  - Do not play where there is strong water current or when there is strong wind blowing.
  - Do not play outdoors during thunderstorms.
  - Do not touch propeller while it is spinning. This is extremely dangerous.
  - When lifting the boat, be sure to hold the body securely.
  - Be sure to bring the boat back to shore (out of water) before the battery power runs out.
  - Wipe clean with towel after playing.
- Caution: Never use chemicals (including benzene, alcohol or thinner to clean).

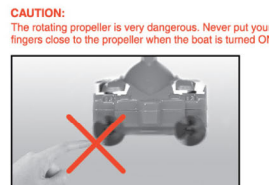

It is possible that water can enter the inside of your boat during play. Periodically remove any trapped water from the compartment. This should also be done at the end of each play session.

Drain boat periodically and before storing. To drain boat, bring boat to a dry place, turn boat upside down until all water is drained from the hull. Dry boat well before putting it away.