 
 
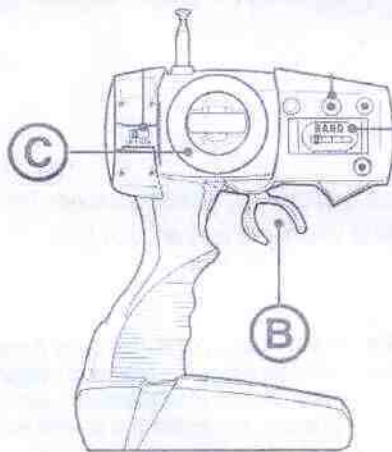 


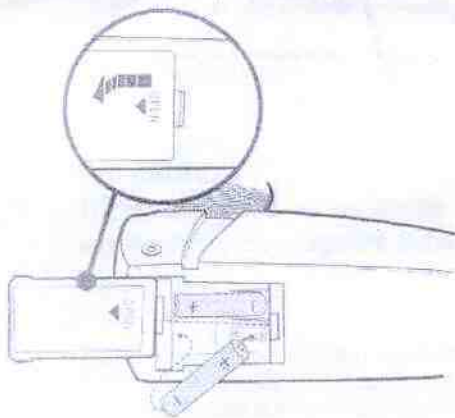

RADIO CONTROL • RADIO COMMANDE • FERNBEDIENUNG • COMANDO RADIO
MANDO DE RADIO • CONTROLO POR RÁDIO • RADIOGRAFISCH BESTUURBAAR
KONTROLA RADIOWA • RADIOVÁ KONTROLA • RAYO KONTROLLÜ
ΣΥΣΤΗΜΑ ΤΗΛΕΚΑΤΕΥΘΥΝΣΗΣ • RIADENÉ RÁDIOM • RÁDIÓVEZÉRLÉS • РАДИО УПРАВЛЕНИЕ

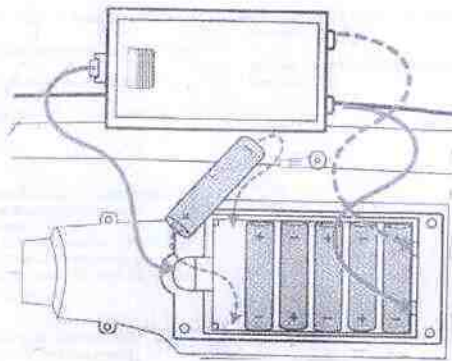

REF83610

L615109223/JN324-09

Features:

- Full Function Radio Control.
- Digital Proportional Speed Control.
- Steering Trim - Adjust the steering trim located underneath the vehicle between the front wheels.

The Vehicle:

- **Wheel Alignment:**
 - If the vehicle pulls to the left or the right, adjust the wheel alignment dial until the vehicle drives in a straight line.

- Turn the vehicle upside down and locate the ON/OFF switch at the side of the chassis. Turn the ON/OFF switch to the "ON" position.
- The vehicle is now ready to use.

Features Operated by the Transmitter:

- ON/OFF Switch - is located to the left of the LEFT RIGHT Steering dial. (A)
- Squeeze the SPEED CONTROL trigger to move the vehicle FORWARD. (B)
- Push the SPEED CONTROL trigger away to move the vehicle in REVERSE. (B)
- Move the LEFT/RIGHT Steering Dial to the right to move the vehicle RIGHT. (C)
- Move the LEFT/RIGHT Steering Dial to the left to move the vehicle LEFT. (C)

- **Throttle Trim** - is located above the 4-band Select switch. (E)
 - Turn the vehicle upside down and locate the ON/OFF switch at the side of the chassis.
 - Move the ON/OFF switch to the "ON" position. If the wheels move, the Throttle Trim may need to be adjusted.
 - Turn the Throttle Trim dial on the transmitter until the wheels come to a stop.

Battery Requirements:

- Transmitter - 2 "AA" alkaline batteries. (not included)
- Vehicle - 6AA alkaline batteries. (not included)
(Use alkaline batteries only.)

Battery Installation:

- **Vehicle:**
 1. Locate the battery compartment on the vehicle chassis.

3. Insert 6AA alkaline batteries. Be sure the (+) and (-) are properly matched.

Transmitter:

1. Locate and remove the Battery Compartment Cover, which is located on the bottom of the Transmitter.
2. Insert 2 "AA" alkaline batteries. Be sure the (+) and (-) are properly matched.

3. Insert antenna and turn clockwise until securely fastened.
4. Extend the antenna to its full length when in use.

Notes:

- Operate the vehicles within 50-100 feet (25-30 meters) range.
- Switch off the toy when not in use.
- Remove all batteries when not in use for long periods.
- If the vehicle is not functioning properly, replace the batteries.
- Adult supervision recommended.
- Do not dispose of batteries in fire. Leakage, explosion and personal injury may occur.
- Dispose of all batteries properly.
- Do not attempt jumps or tricks with this vehicle.
- Please remove all packaging attachments before giving this toy to your child.
- Do not insert the antenna wire into electrical socket outlets.

The performance of this toy may be affected by strong environmental disturbance or interference.

This product will not perform normally in a strong electrostatic environment.

We wish you many happy hours of pleasure with your New Bright toy.

FCC CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.