

Model: G6DG41HHSBP

Battery Instructions:

2 "AA" batteries are included for demonstration and they can be used until replacement. When replacing new batteries, please follow the instructions below:

1. Open the battery compartment cover at the bottom of the vehicle, discard the included 2 "AA" batteries.
2. Insert 2 fresh "AA" batteries with positive (+) and negative (-) ends correctly matching the compartment markings.
3. Replace battery compartment cover.
4. Open the battery compartment cover at the back of the controller.
5. Insert 2 fresh "AAA" batteries with positive (+) and negative (-) ends correctly matching the compartment markings.
6. Replace battery compartment cover.

Operation:

1. START : Move switch on bottom of vehicle to the "ON" position.
2. FORWARD/TURNING IN REVERSE: Push forward/reverse joystick up to move vehicle forward and down for turning in reverse.

For Best Results:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard or rechargeable batteries.
3. Use alkaline batteries only.

Caution:

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.