
WHAT'S INCLUDED

Component Checklist (1) R/C Acrobat (1) Transmitter (2) "AA" Batteries

TRANSMITTER

Battery Installation

- 1. To open battery compartment cover on transmitter, slide in the direction indicated by the arrow.
- Insert 2 "AA" size batteries.
 Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.
- 3. Replace the Battery Compartment Cover making certain that the Compartment tab has "snapped" into the locked position.

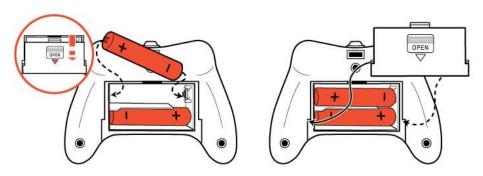

Note: When replacing Transmitter batteries:

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

Use alkaline batteries only.

Syncing

This transmitter is equipped with 2.4GHz technology which allows up to 6 vehicles to be used at the same time.


To sync transmitter and vehicle, follow these steps:

- 1. Install batteries in Transmitter.
- 2. Turn on Vehicle.

Once the batteries are installed and the vehicle is turned on, the Transmitter will sync automatically with the vehicle.

TRANSMITTER

Functions

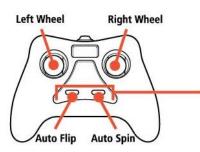

Note:

Vehicle has working lights. When vehicle is powered ON, lights will glow Red. When vehicle is in motion the lights will glow Blue. When vehicle stops, lights will glow Red again.

Auto Drive

Acrobat has 2 pre-programmed stunts.

Press Auto Flip and Acrobat will drive by itself and perform a flip.

Press Auto Spin and Acrobat will do 360° spins.

How to Drive

FORWARD AND REVERSE DRIVING





FORWARD DRIVINGPush BOTH joysticks forward for Forward Driving.



REVERSE DRIVING

Pull BOTH joysticks backward for Reverse Driving.

TURNING





RIGHT TURNING

Push LEFT joystick forward to turn right while driving forward. Pull LEFT joystick back to turn right in reverse.



 


LEFT TURNING

Push RIGHT joystick forward to turn left while driving forward. Pull RIGHT joystick back to turn left in reverse.

SPINS










360° SPINS - Counter-Clockwise Push joysticks as shown for Counter-Clockwise Spinning.

VEHICLE

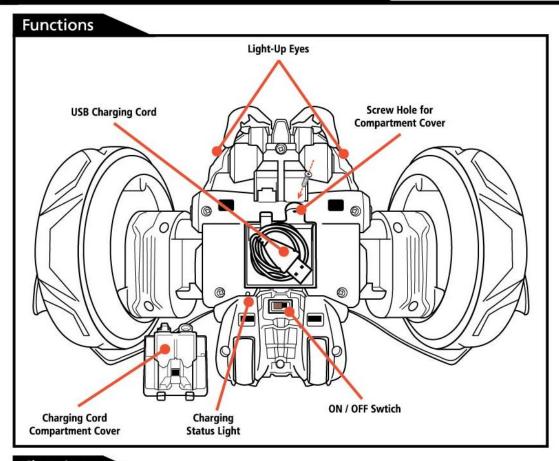

Charging

This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB.

ON/OFF Switch must be in the OFF position prior to charging.

- 1. Locate the Charging Cord Compartment Cover on the underside of vehicle.
- 2. Use a screwdriver to remove the small screw keeping the cover in place.
- Remove USB cable from the Storage Compartment. (Use care when extending cord as it is attached to inside internal battery). Cord can be plugged into any computer or USB outlet brick (not included).
- 4. Insert the USB connector into a computer or other USB power source.
- 5. While charging, the Charging Status Light under the vehicle will be on. Once fully charged the light will turn off. Charging is completed in approximately 1.5-2 hours (when charging from a computer).
- **6.** After charging is complete, store the the USB cord in the Charging Cord Compartment. Replace the Compartment cover and screw securely back into place.