

Features - Operated by the Transmitter:

1. Move Left joystick up to move the vehicle FORWARD.
2. Move Left joystick down to move the vehicle in REVERSE.
3. Move Right joystick left or right to move vehicle LEFT or RIGHT.
4. This vehicle has lights.
 - When driving forward or reverse the lights will turn on.
 - When stopping in forward or reverse the lights will turn off.
5. This vehicle has sounds.
 - Press ENGINE button on controller to hear engine sounds.

Batteries/Recharging Unit (Included):

Transmitter - 2 "AA" batteries.

Vehicle - internal rechargeable Lithium Ion Battery with USB Charging Cord.

The Transmitter:

1. Insert 2 "AA" batteries in the battery compartment at the back of the transmitter. Be sure the (+) and (-) are properly matched.
2. The transmitter will automatically sync with the vehicle.
3. The vehicle is equipped with 2.4GHz technology which allows up to 6 vehicles to be raced at the same time.

Charge by USB:

1. Locate the ON/OFF Switch on underside of vehicle and switch to the OFF position.
2. Open the USB Cord Compartment cover located on the underside of the vehicle. Use care when extending cord. Do not pull or tug on cord.
3. Plug USB cord into any computer.
4. While charging, the Charging Status Light will be on. Once fully charged the light will turn off. (Approx. 2.5 hours When charging from a computer).

Steering Trim:

If the vehicle veers to the left or right, adjust steering trim on underside of vehicle until the desired alignment is reached.



IMPORTANT!

The internal Lithium Ion battery pack is only PARTIALLY CHARGED prior to shipment and it is recommended the battery be fully charged before first use.

Caution:

Chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charger cable until the damage has been repaired.

Notes:

1. Operate the vehicle within 80-100 feet (25-30 meters) range.
2. Switch off the toy when not in use.
3. Remove "AA" batteries in transmitter when not in use for long periods.
4. If vehicle is not functioning properly, make sure batteries in transmitter are fresh, vehicle is fully charged.
5. Adult supervision recommended.
6. Please remove all packaging attachments before giving this toy to your child.
7. Do not insert the USB cable into electrical socket outlets.
8. Do not use the included USB cable for purpose other than recharging this vehicle.
9. USB Power Adapter is not included.
10. To protect the battery and prolong its life, do not overcharge the vehicle.
11. This toy is only to be connected to equipment bearing either of the following symbols:  or .

The reception performance may be affected under a strong interference disturbance environment.



This product would not perform normally under a strong electrostatic environment.

The instructions must be kept since it contains important information.

We wish you many happy hours of pleasure with your New Bright toy.

U.S. Toy Sales and Marketing Co., Inc.
30260 Oak Creek Drive - 2nd Floor
Wixom MI 48393
1-877-624-8697
<http://www.newbright.com/>

ENGLISH

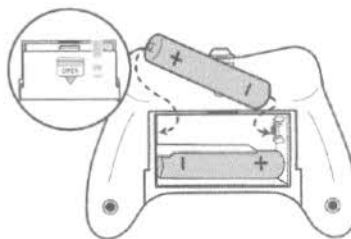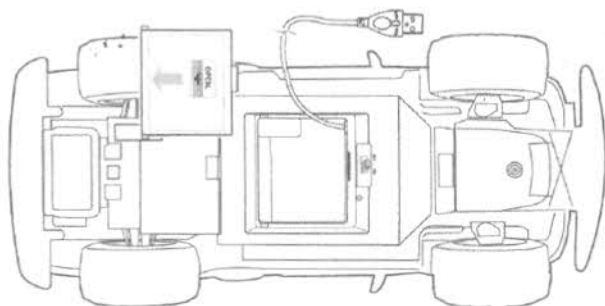

NEW BRIGHT