




NEW BRIGHT


**RADIO CONTROL • RADIO COMMANDE • FERNBEDIENUNG • COMANDO RADIO
MANDO DE RADIO • CONTROLO POR RÁDIO • RADIOGRAFISCH BESTUURBAAR
KONTROLA RADIOWA • RADIOVÁ KONTROLA • RÁDYO KONTROLLŰ
ΣΥΣΤΗΜΑ ΤΗΛΕΚΑΤΕΥΘΥΝΣΗΣ • RIADENÉ RÁDIOM • RÁDIÓVEZÉRLÉS • РАДИО УПРАВЛЕНИЕ**

Model No. / Modéle : GF4MS-2433 / GF4MS

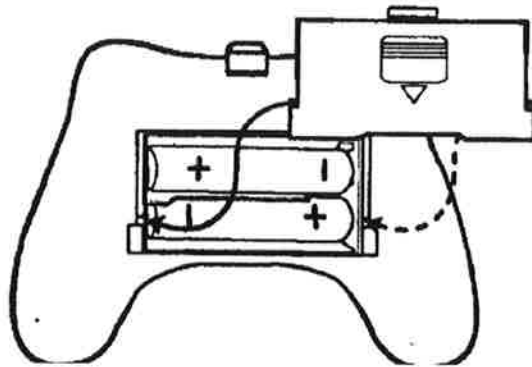

This device complies with industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

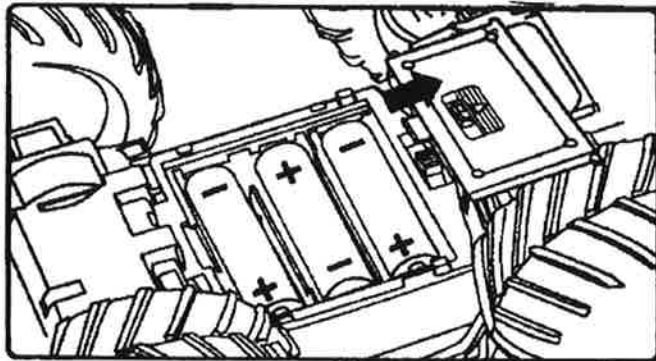

Features - operated by the controller:

1. Forward/Reverse - push/pull left side lever forward/backward.
2. Left/Right - use right side lever.
3. This vehicle has lights.
When driving forward or reverse the lights will turn on.

The Controller:

Insert 2 "AA" batteries in the battery compartment on the back of the transmitter.
Be sure the (+) and (-) are properly matched.

The Vehicle:

- Insert 3 "AA" batteries in the battery compartment on bottom of vehicle. Be sure the (+) and (-) are properly matched.
- The vehicle is now ready for use.

Steering Trim:

If the vehicle veers to the left or right, adjust steering trim on underside of vehicle until the desired alignment is reached.

Batteries:

Transmitter - 2 "AA" batteries.
Vehicle - 3 "AA" batteries.

Notes:

1. Operate the vehicle within 80-100 feet (25-30 meters) range.
2. Use alkaline batteries only.
3. Switch off the toy when not in use.
4. Remove all batteries when not in use for long periods.
5. If the vehicle is not functioning properly, replace batteries.
6. Adult supervision recommended.
7. Please remove all packaging attachments before giving this toy to your child.
8. Do not insert the antenna wire into electrical socket outlets.

The reception performance may be affected under a strong interference disturbance environment.

This product would not perform normally under a strong electrostatic environment.

We wish you many happy hours of pleasure with your New Bright toy.

ENGLISH

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION:

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC

