



## VEHICLE

### Component Checklist

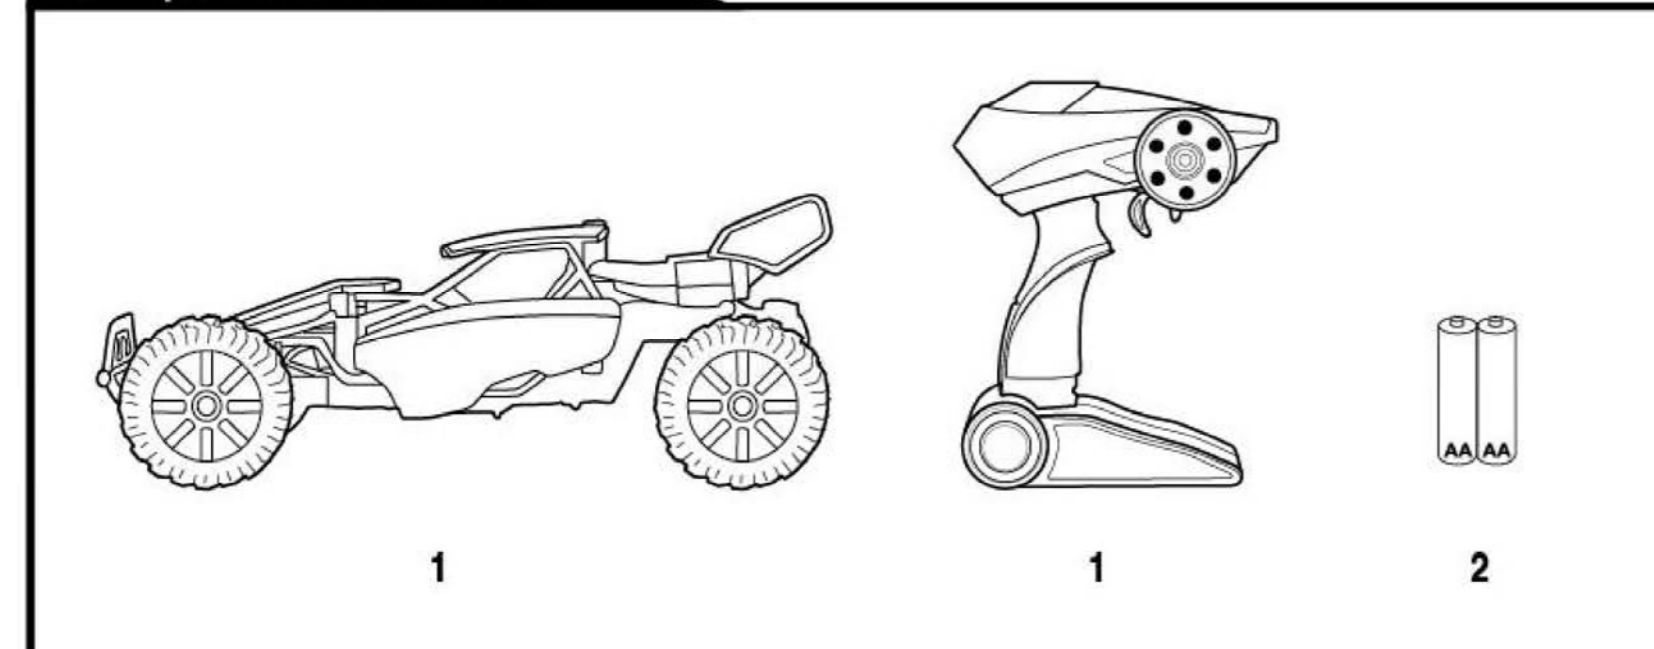

### Features and Functions

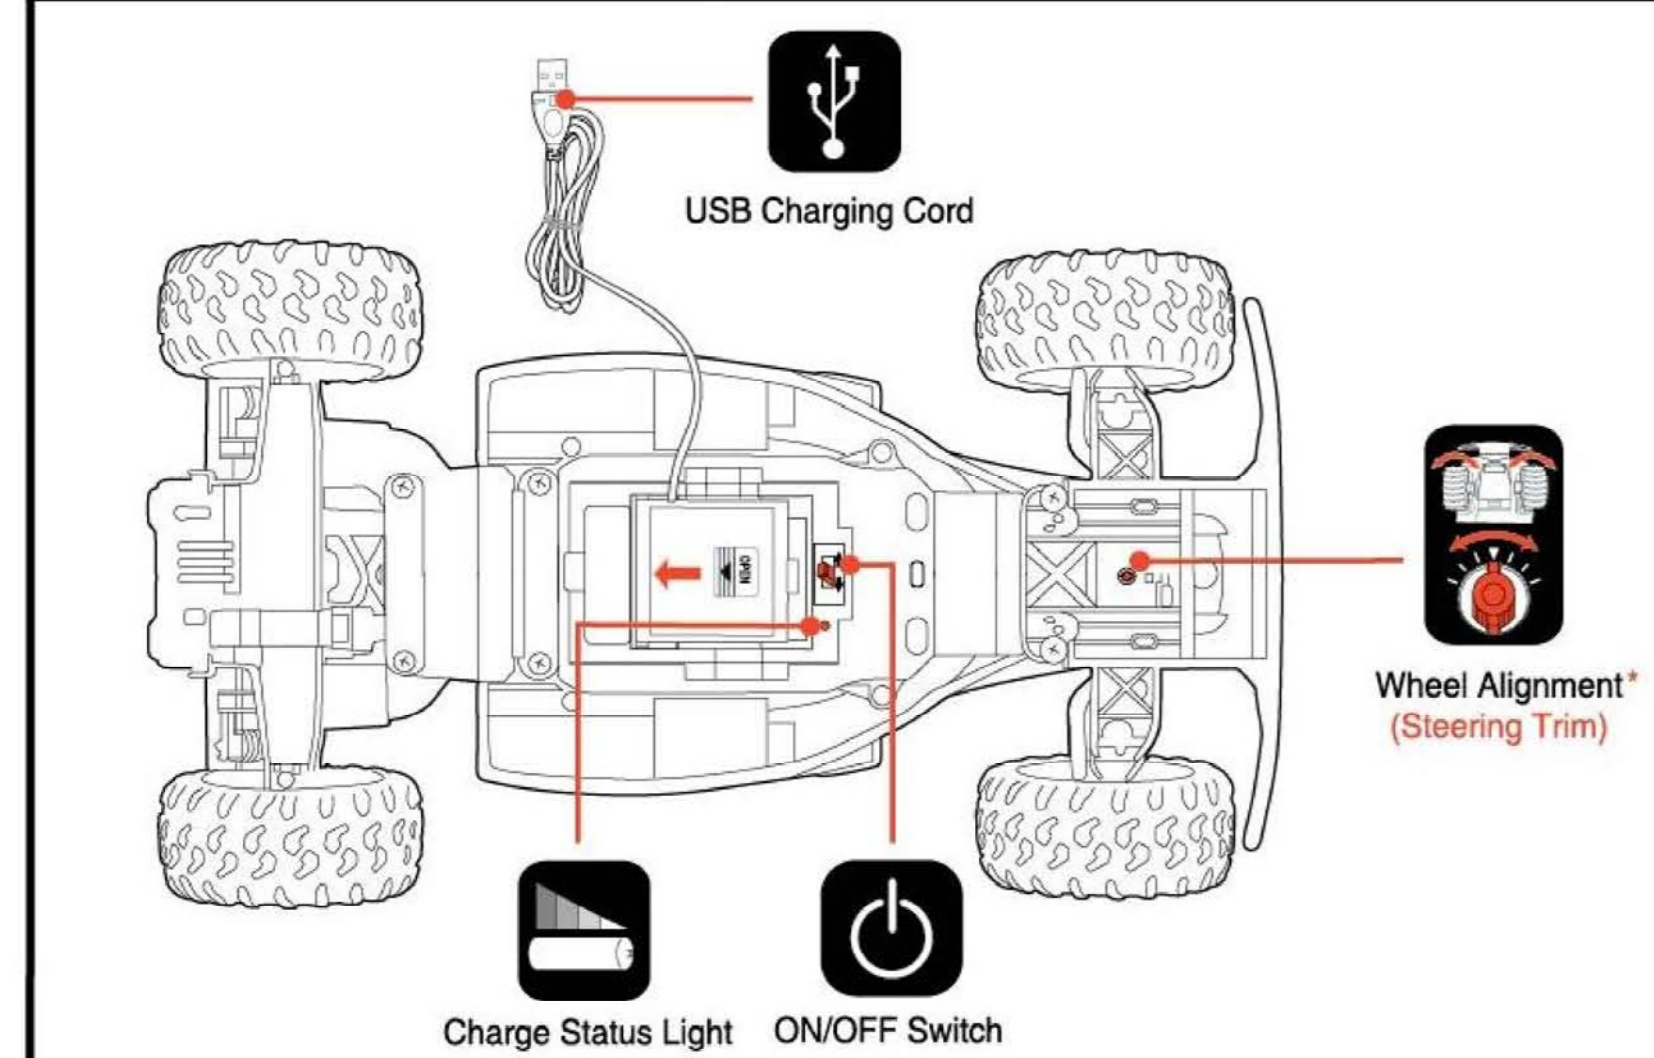

\* If vehicle pulls to the left or right during forward driving the Steering Trim may need to be adjusted. The Steering Trim is located on bottom of chassis between the front wheels.


#### Note: Vehicle has working lights.

- When vehicle is powered ON, headlights will glow and tail lights will flash for pairing.
- When vehicle is in motion the headlights and tail lights will glow.


## VEHICLE

### Charging the Battery

This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB. ON/OFF Switch must be in the OFF position prior to charging.

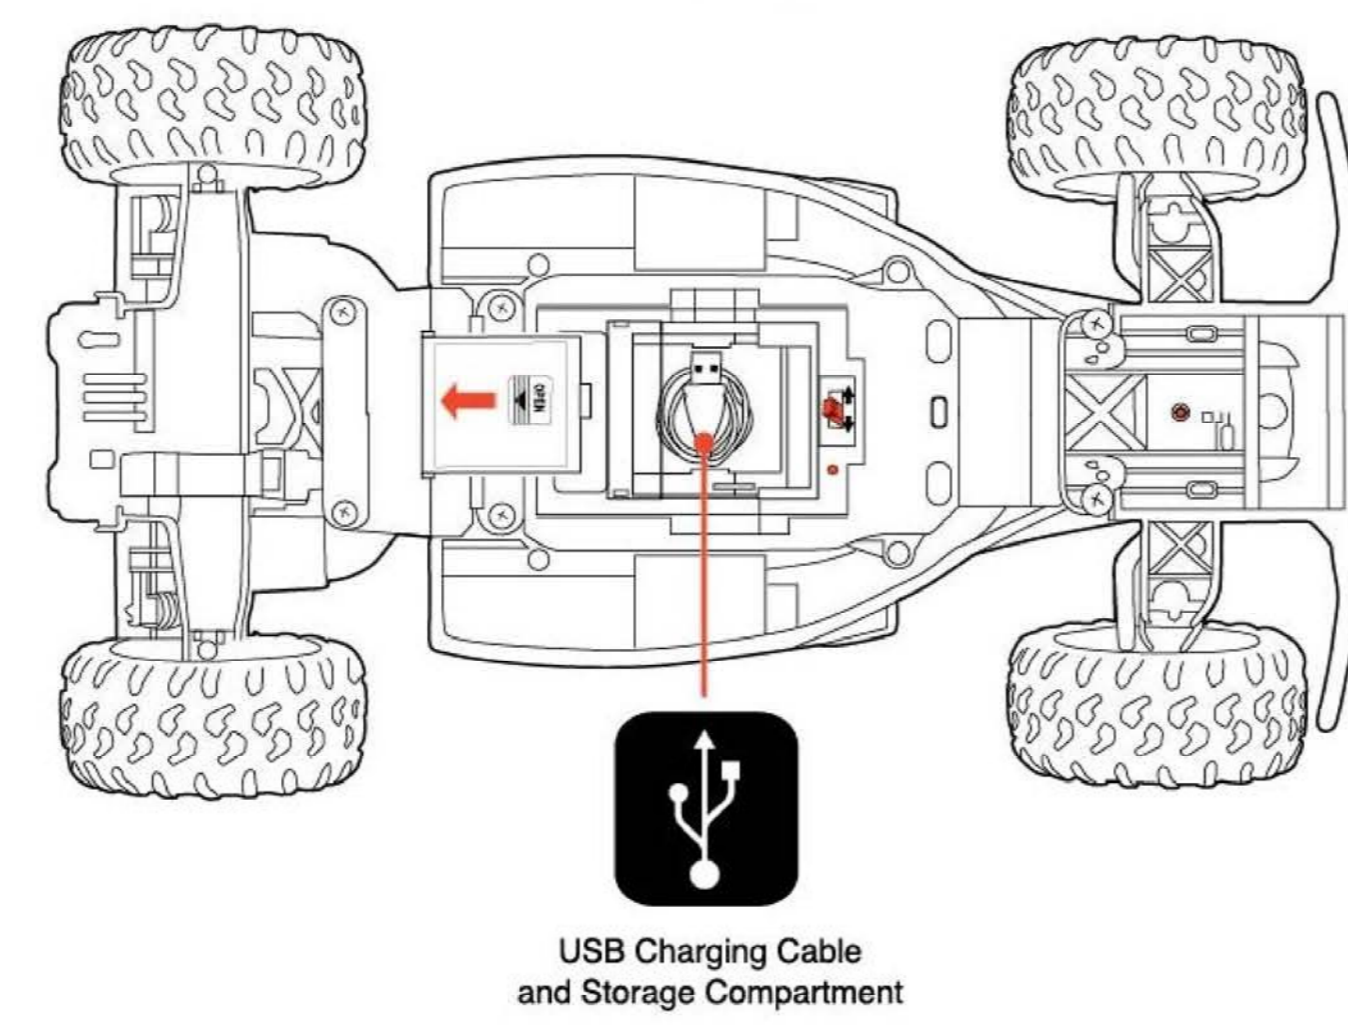

1. Locate the ON/OFF switch and USB cord on the under-side of the vehicle.
2. Turn the ON/OFF switch to the "OFF" position.
3. Open the Battery Compartment Cover.
4. Remove USB cable from the Storage Compartment. (Use care when extending cord as it is attached to inside internal battery). Cord can be plugged into any 5V DC computer or 5V DC USB outlet adapter (not included).

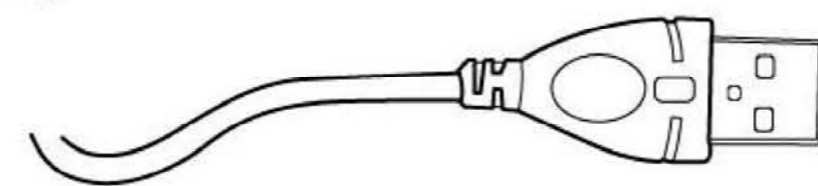


5. While charging, the LED under the vehicle will be on. Once fully charged the LED will turn off. Charging is completed in approximately 2 hours. Return cord and secure storage lid before operating the vehicle.

## TRANSMITTER

### Battery Installation

1. Locate battery compartment cover on back of transmitter. Pull back on the tab in the direction indicated by the arrow.
2. Insert 2 "AA" size batteries. Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.
3. Replace the Battery Compartment Cover making certain that the Compartment tab has "snapped" into the locked position.

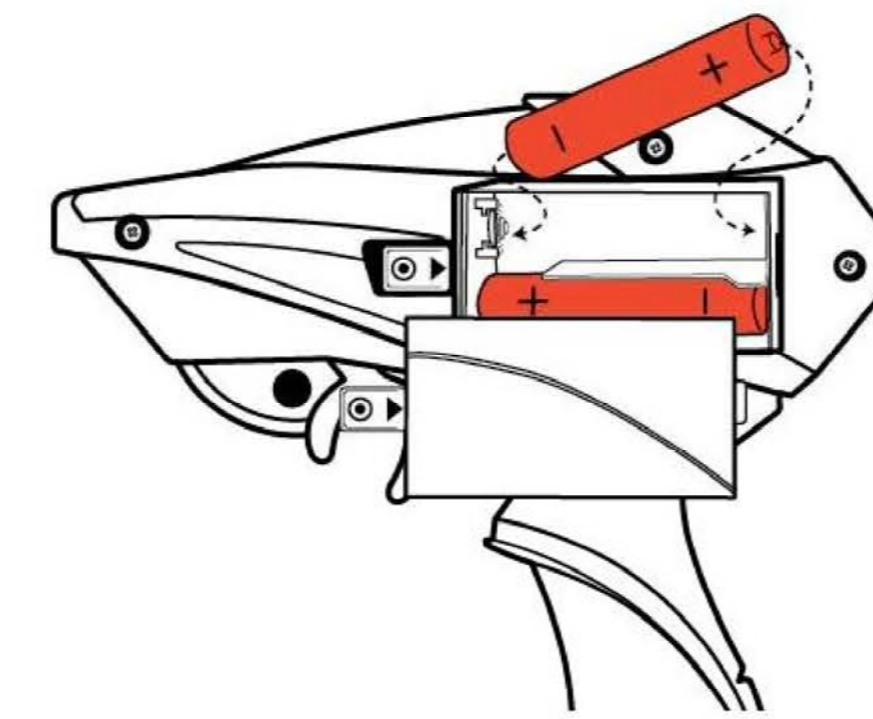


#### Note:

- When replacing Transmitter batteries:
- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Use alkaline batteries only.

## TRANSMITTER

### Functions

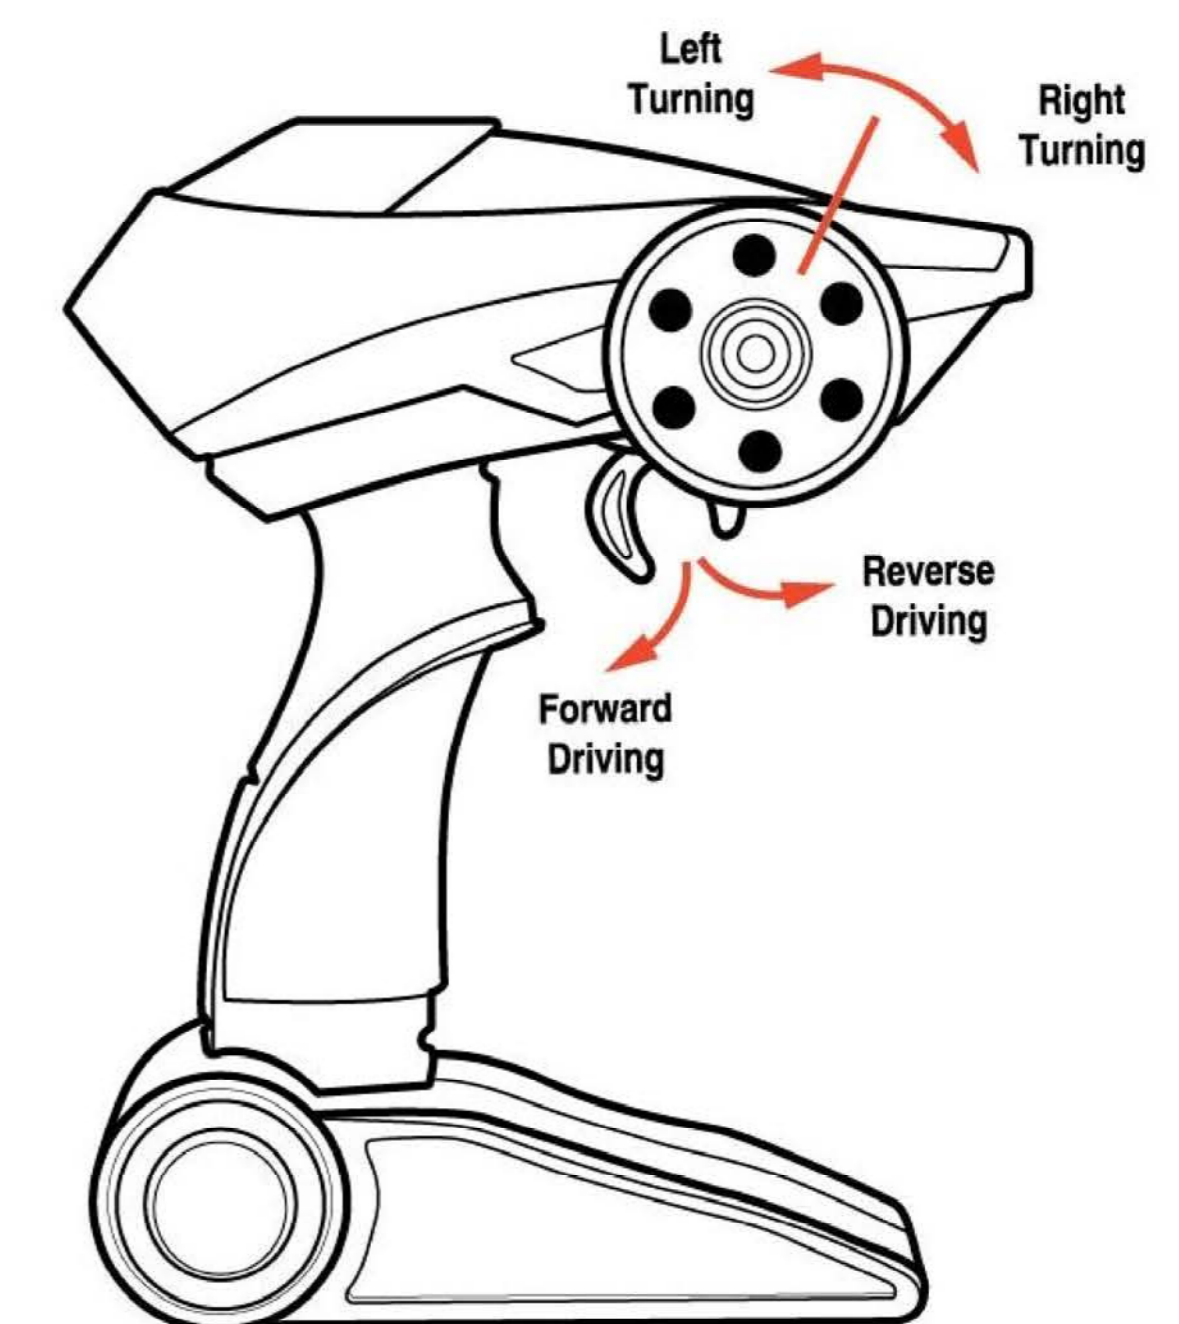

This transmitter is equipped with 2.4GHz technology which allows up to 6 vehicles to be raced at the same time.

Before first use and after any time the batteries are replaced, the transmitter must be paired to the vehicle.

To sync transmitter and vehicle, follow the steps below:

1. Correctly install batteries in the transmitter.
2. Place vehicle upside down, and turn Vehicle ON/OFF switch to the ON position. The Vehicle is only in sync mode for 30 seconds.
3. Immediately pull and hold the Forward/Reverse trigger on the transmitter. Keep holding until wheels move (up to 30 sec).