

# PSU Replacement

Getting Started Guide

**Preliminary Draft**

#### Package Contents

- Replacement power supply
- Power supply retaining screw
- Rear cover retaining screw
- Replacement instructions

#### Tools Needed

- Philips screwdriver

#### Compliances FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure information: At least 20cm (8 inches) of separation distance between "Power Supply and Touchscreen" and the user's body should be maintained to ensure compliance with FCC RF Exposure Requirements.

#### Device Purpose

Household Fire/Alarm Central Panel Power Supply Unit

#### Responsible Party - U.S. Contact Information

Technicolor Connected Home LLC, 5030  
Sugarloaf Parkway, Building 6  
Lawrenceville, GA  
30044 USA, 317-587-5466

FCC Part 15B Supplier's Declaration of Conformity  
The FCC Part 15B Supplier's Declaration of  
Conformity (SDoC) for your product is available  
at the following internet address:  
[www.technicolor.com/ch\\_regulatory](http://www.technicolor.com/ch_regulatory)

#### Safety

This device complies with UL 985, UL1023.

**WARNING:** The rechargeable battery is only available through your service operator. If your battery needs to be replaced, contact your service operator to arrange for replacement.

## TCA-203 PSU Replacement



1. Locate existing AC wall plug for the security tablet
2. Unplug AC wall plug from wall outlet



5. Plug the new power cable into the DC jack in the rear of the unit.

3. Place the tablet face down on a smooth, clean, dry surface



4. Unplug the existing power cable from the DC input and remove it from the unit.



6. Plug the new AC wall plug into the lower outlet of the AC wall plug.
7. Carefully secure the AC plug to the outlet with the AC wall plug retaining screw.

Note: The AC plug should not be plugged into an outlet that is controlled by a wall switch in order to avoid interrupting power the the tablet.

## TCA-300 PSU Replacement



1. Locate existing AC wall plug for the security tablet
2. Remove AC wall plug retaining screw with Philips screwdriver
3. Unplug AC wall plug from wall outlet



4. Place the tablet face down on a smooth, clean, dry surface
5. Remove the rear panel retaining screw located at the bottom of the unit
6. Lift off the rear panel by tilting the the table stand towards the top of the unit. The panel will unsnap from the unit.



7. Unplug the existing power cable from the DC input and remove it from the unit. The Ethernet cable shown is optional and may not be present.



8. Rout the cable from the new AC Plug through the hole in the rear panel and plug it into the DC jack in the back of the unit.

9. Position the power cable as shown to avoid interfering with the rear panel placement. NEED A PICTURE OF THIS



10. Insert the rear panel tabs into the top of the unit and position the cables exiting the unit so the panel lays flat.

Press down on the stand to snap the rear panel into place. After the panel snaps into place press on each corner of the unit to ensure a secure fit.

11. Replace the rear panel retaining screw

12. Plug the new AC wall plug into the same receptacle as the original AC wall plug. The AC wall plug should be placed in the lower receptacle.

13. Carefully secure the AC plug to the outlet with the AC wall plug retaining screw.

Note: The AC plug should not be plugged into an outlet that is controlled by a wall switch in order to avoid interrupting power the the tablet.

