

6. Press [OK] (the same as [PROGRAM] key) to confirm the selection, and the Display Box will show:

PUT HANDSET ON
THE BASE TO
REGISTER

7. Put the handset on the base unit to register it with the base unit. When the registration is done, confirmation beep can be heard and the Display Box shows as below for 3 seconds.

REGISTERED
HANDSET ID=2

8. If it fails to register after 10 seconds, the Display Box will show:

REGISTRATION
FAILED!
TRY AGAIN!

Note:

1. There will be 30 seconds for you to register all other handsets. If the time is not enough to register all handsets, you can press and hold [PAGE] key for 5 seconds to extend the time.
2. If the handset cannot show the ID number in the display, it means that the handset has not been registered, and cannot be used.

BASE UNIT RESET

Unplug the AC power adaptor to the base unit, then plug it in again. When both of its indicator lamps flash, press [PAGE] key 5 times in 10 seconds. When done, both lamps on the base will flash. The base unit will lose all settings and memories including previous handset registers. At this time, you must re-register all handsets like new to use the cordless system.

CHANGING SECURITY CODE

Every base unit has its unique security code when it leaves the factory. In case you want to change security code, perform the following:

- (1) **Press and hold** the [PAGE] key on the base unit, unplug the power adaptor of the base unit, then plug it in again. At the mean time, keep holding the [PAGE] key for 6 seconds.
- (2) When the in-use indicator lamp flashes, the security code is changed to a new one automatically.

Note: After changing the security code in the base unit, all handsets must re-register. And the handset ID will be re-assigned.