

Disney store  
EXCLUSIVE



## MICROPHONE



©Disney  
The Disney Store, Inc., Glendale California 91203-2671  
disneystore.com • Made in China

### **OPERATING INSTRUCTIONS** **FM WIRELESS MICROPHONE**

#### **BATTERY INSTALLATION**

1. Remove screw and open battery cover by sliding downward from the back of the microphone handle and lift it off.
2. Install two new AA size batteries in accordance with the instructions located in the battery compartment. Replace the battery cover and tighten screw.
3. Extend the wire antenna fully.

#### **NOTE:**

When using the FM Microphone, hold the Microphone 2 inches from your mouth and speak in a normal voice into the head of the Microphone.

#### **TO OPERATE**

1. Use any good FM radio. Turn the radio ON and face the radio towards you. Adjust the volume to a normal level.
2. Place the Microphone near to the radio and turn it on. Hold the Microphone 2 inches away from your mouth and speak in a normal voice while tuning your FM radio back and forth across the 98 mark on the tuning dial. If the reception of the Microphone is good when your radio is tuned between local broadcast stations then no adjustment of the Microphone is necessary. Do this slowly to get best reception.

- If a local broadcast station in your area falls on or near your frequency and interferes with FM Microphone reception, it will be necessary to tune the radio dial slightly one way or the other until the broadcast station cannot be heard.

This can be done by placing the Microphone near the radio.

Carefully tune the radio to the loudest whistle. After you receive this whistle sound move the Microphone about 5 feet away from the radio and you are ready to transmit your voice.

#### **IMPORTANT:**


- Always be sure that fresh batteries are installed before making this adjustment.
  - When adjusting the frequency shift using a small screwdriver, do not apply excessive turning force.
  - If the receiver is tuned outside 98 frequency, reception from the Microphone will not be heard.
3. After the FM radio is tuned to the Microphone, move 5 feet away from the radio. Face with the antenna towards the radio and speak into the Microphone while someone carefully tunes the radio to the best reception. When using the Microphone at a distance of 10 feet or more from the radio, it may be necessary to increase the volume of the radio and carefully tune the radio again for best reception.
  4. For best results, stand 5 to 10 feet away from the radio with the antenna pointed towards the radio.

**NOTE:** In case you hear feedback sound, move the microphone further away from the radio or lower the volume control on radio.

#### **IMPORTANT NOTES:**

- This Microphone is for use with FM radios only and will not work on the AM band.
- When using your Microphone, keep the antenna facing toward the receiver and the receiver facing the Microphone.
- When using the Microphone, hold the Microphone 2 inches from your mouth and speak in a normal voice.
- The reception of the Microphone may be affected by the environment i.e. metal structure or movement of people between the Microphone and the radio. The reception is also affected by the condition of the Microphone and/or radio batteries.
- If the Microphone is not to be used for an extended period, remove the batteries from the set.
- For best results, the manufacturer recommends the use of alkaline batteries.
- To prevent damage, do not expose the set to rain or moisture

THIS MICROPHONE HAS BEEN FACTORY TESTED  
PLEASE READ AND FOLLOW THE INSTRUCTIONS FOR BEST PERFORMANCE

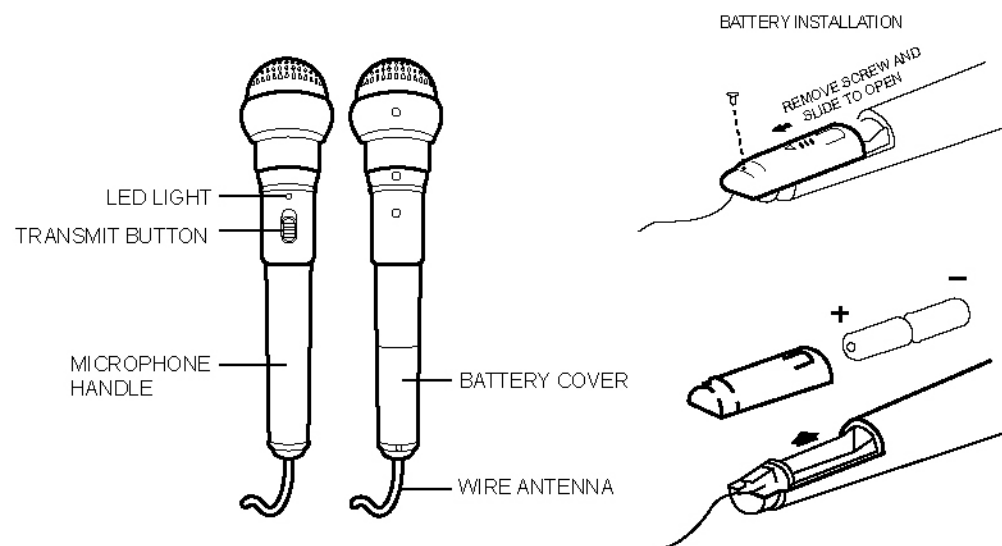

USES 2 AA SIZE (UM-3) BATTERIES (NOT INCLUDED)

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

#### **LIMITED WARRANTY**

This product is warranted to the original consumer purchaser against defects in material or workmanship for a period of 90 days from original date of purchase. If any such defect is discovered within the warranty period, we will repair or replace the unit free of charge (except for a \$10.00 charge for packing, return postage and insurance) subject to verification of the defect or malfunction upon delivery or postage prepaid to:

Columbia Telecommunication Group, Inc.  
174 Milbar Blvd.  
Farmingdale, NY 11735

This warranty does not apply to defects resulting from abuse, alteration or unreasonable use of the unit, resulting in cracked or broken cabinets or units damaged by excessive heat. YOU MUST ENCLOSE PROOF OF DATE AND PLACE OF PURCHASE AND CHECK/MONEY ORDER FOR \$10.00 TO COVER HANDLING OR WE CANNOT BE RESPONSIBLE FOR REPAIR OR REPLACEMENT. Any applicable implied warranties including warranties of merchantability and fitness are hereby limited to 90 days from date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow exclusion of incidental consequential damages so the above limitations and exclusions may not apply to you.

Modifications not authorized by the manufacturer may void users authority to operate this device

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.