

## Operation Instructions

1. **Inserting the battery:** Open battery compartment on the back of the figure with a screwdriver. Lift off the door. Using the battery connector inside the compartment, snap in a 9-volt battery. Put the battery in the compartment and replace the battery door.
2. **To turn the walkie talkie on:** Move the ON/OFF switch located on the side of the figure to the ON position. You will hear a low hissing background noise, which indicates the unit is working properly.
3. **To transmit to any compatible walkie talkie:** Push the TALK button on the right side of the unit. Hold it down while you speak into the speaker/microphone located in the chest of the figure.
4. **To listen to another person talking on another unit:** release the TALK button and wait to hear their voice. You must release the TALK button to hear any other transmission.
5. **To use MORSE CODE features:** You must hold down the TALK button while you press the MORSE CODE button located on the front of the figure. You can press the MORSE CODE button in the sequences shown on the Morse Code Chart.
6. **To turn the walkie talkie off:** Move the ON/OFF switch to the OFF position. This maintains the battery life.

### Battery Use Instructions

Non-rechargeable batteries are not to be recharged.  
Exhausted batteries are to be removed from the toy.  
The supply terminals are not to be short-circuited.  
Only batteries of the same or equivalent type as recommended are to be used.  
Batteries are to be inserted with the correct polarity.



Columbia Telecommunications  
Group, Inc.  
174 Milbar Blvd.  
Farmingdale, NY 11735

Printed in china

## LIMITED WARRANTY

This product is warranted to the original consumer purchaser against defects in material or workmanship for a period of 90 days from original date of purchase. If any such defect is discovered within the warranty period, we will repair or replace the unit free of charge (except for a \$10.00 charge for packing, return postage and insurance) subject to verification of the defect or malfunction upon delivery or postage prepaid to:

Columbia Telecommunications  
Group, Inc.  
174 Milbar Blvd.  
Farmingdale, NY 11735

This warranty does not apply to defects resulting from abuse alteration or unreasonable use of the unit, resulting in cracked or broken cabinets or units damaged by excessive heat. **YOU MUST ENCLOSE PROOF OF DATE AND PLACE OF PURCHASE AND CHECK/MONEY ORDER FOR \$10.00 TO COVER HANDLING OR WE CANNOT BE RESPONSIBLE FOR REPAIRS OR REPLACEMENT.**

Any applicable implied warranties including warranties of merchantability and fitness are hereby limited to 90 days from date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow exclusion of incidental or consequential damages so the above limitations and exclusions may not apply to you.