



OPERATIONAL DESCRIPTION

- 1) Insert batteries into the keyboard.
 - 2) Push the 'Wakeup/ID set' button on the RF Base station and hold down for three seconds.
Power/Data indication LED will blink in every a second.
 - 3) Type ESC key with Left-Control, Left-Shift and Right-Shift key down combination.
The Power/Data indication LED will blink still.
 - 4) Input user ID number that is 1 to 255 with the numeric keys on the keyboard and than type Enter key. After input the Enter key, the Power/Data indication LED will stop to blink.
 - 5) Once the user ID setting is done, the RF Base station automatically returns back its normal operation mode.
- * Note: Step 2 though step 4 must be done within 30 second. Otherwise, the RF base station will cancel the matrix ID setting procedure. In the case, the operator will have to retry from step 2. If a wrong key has typed, the keyboard will cancel the user ID setting procedure. In the case, if the Power/Data indication LED on the RF base station is still blinking, the operator will have to retry from step 3. Otherwise, the operator will have to retry from step 2.