

Owner's Manual

Your RadioShack Rocking PT Cruiser is built to handle the road with style, whether the road is the hallway in your house or the sidewalk outside. Built to 11/12 scale, your car can reach speeds of up to 650 feet per minute. You can cruise the sidewalks of your neighborhood speeding forward or backward, rocking from side to side, bouncing, the rear of the car up and down, and turning sharp corners.

You need the following items (not supplied) to power your car:

- one 9V battery for the transmitter
- at least one 9.6 volt rechargeable battery pack for the car
- one battery pack charger

THE FCC WANTS YOU TO KNOW

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

INSTALLING BATTERIES

In the Transmitter

The transmitter requires one 9-volt battery. For the best performance and longest life, we recommend a alkaline battery.

1. Slide ON/OFF on the transmitter to OFF.
2. Press the tab on the battery compartment cover and open the cover.
3. Place a battery in the battery compartment according to the polarity symbols (+ and -) marked inside.
4. Close the cover.

Note: When the transmitter's range decreases, replace its battery.

In The Car


The car requires one 9.6-volt rechargeable battery pack for power.

You must charge a rechargeable battery pack before you can use it to power your car. To charge it, follow the battery charger's instructions.

1. Slide ON/OFF on the bottom of the car to OFF.
2. Use a coin to turn the battery compartment cover's latches clockwise until they stop. Then lift off the cover.
3. Put the battery pack in the compartment with the battery pack's connector on the same side as the car's matching connector.
4. Attach the battery pack's white connector to the car's matching connector. Do not

force them! They only fit together one way.

5. Replace the cover and turn the latches counterclockwise until they stop.

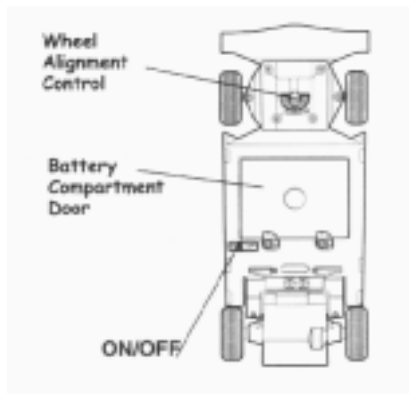

Be sure the connectors and wires do not touch the car's moving parts. If the car loses power or does not respond to the transmitter, recharge the battery pack.

Note: Occasionally, let the battery pack fully discharge before recharging it. Otherwise the battery pack may lose ability to fully charge.

DRIVING THE ROCKING PT CRUISER

Left Control Lever
Push forward to move forward.
Push back to move backward.
Release to stop



Press one time to get a music ,blink lights on the back view of the car and also with the vibrates motion, if you press again then you will get another music.
The car provides two music for you to choose.

Press one time for star the music, blinking lights and vibrate motion. Press again then will stop all the function.

Right Control Lever
Push left to move left.
Push right to move right.
Release to go straight.