

Owner's Manual

Please read before using this equipment

Note: You need the following items (not supplied) to power your Truck:

1. At least one 9.6V rechargeable battery pack for the Truck
2. One 9V battery for the transmitter
3. One battery pack charger

Preparation

Installing Batteries

Note: Any batteries purchased for use in this toy may pose a hazard to children. Please check safety notice supplied with batteries before use.

In the Truck

You need a 9.6V rechargeable battery pack for the truck. Before you use the battery pack, you must charge it using a special battery-pack charger.

1. Set OFF/ON on the side of the boat to OFF.
2. Use a coin to turn the battery compartment latches then lift the cover up.
3. Put the battery pack in the compartment with the battery pack's connector on the same side as the boat's matching connector.
4. Attach the battery pack's connector to the truck's matching connector.
Do not force them! They fit only one way.
5. Close the cover, then turn the latches to secure the battery compartment.

In the transmitter

The transmitter requires one 9V battery.

For the best performance and longest life we recommend using an alkaline battery and to never use a rechargeable battery.

1. Press down on the battery compartment cover and slide it in the

direction of the arrow.

2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Snap the cover shut.

When the transmitter's range decreases, replace its battery.

Cautions:

- . Use only afresh battery of the required size and recommended type.
- . Never leave a dead or weak battery in the transmitter.

Operation

1. Slide OFF/ON on the truck to ON.
2. Use the transmitter's speed control trigger and steering lever to drive and steer the truck.
 - a. Push the left hand side's lever to move the truck forward
 - b. Pull the left hand side's lever to move the truck backward.
 - c. Turn the wheel counterclockwise to move left.
 - d. Turn the wheel clockwise to move right.
 - e. Release the wheel to go straight.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment, such modifications could void the user's authority to operate the equipment.

3. When you fish driving the boat, slide OFF/ON on the boat to OFF.

