

# 1:24 Radio Control Car

60-8994/60-8995/60-8996/60-8997

## What's Included

Car Transmitter Owner's Manual Transmitter's Antenna Rod

## Step One

### Installing Batteries


#### You will need...

One 9V battery for the transmitter (not included)

Four 1.5V AA battery for the racer (not included)


### Installing Batteries in the Racer

 - Turn the racer off.
- Use a Phillips screwdriver to loosen the screw on the back of the racer and press OPEN to open the battery compartment cover.
- Insert 4 AA batteries in the compartment, according to the polarities marked inside.
- Replace the cover and secure the tab and the screw.

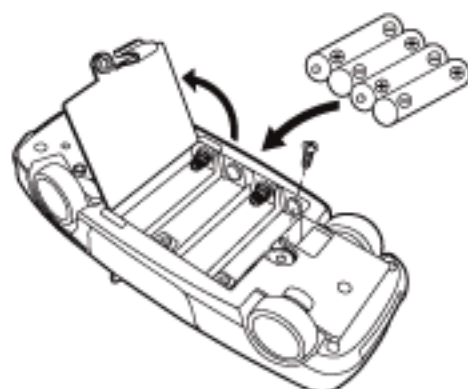

### Installing Battery in the Transmitter

 - Use a Phillips screwdriver to loosen the screw on the bottom of the transmitter and slide the battery compartment cover off.
- Insert one 9V battery in the battery compartment, matching the polarity symbols (+ and -) as marked inside.
- Replace the cover and snap it on. Then secure the screw.

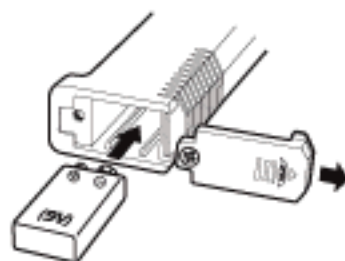

#### FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## Step Three

 
### Driving the racer

- Slide ON/OFF to ON to turn on the transmitter and the racer.
- Extend the antenna to its full length before driving the car. For maximum range, hold the transmitter with the antenna as high as possible and point it straight up. Retract the antenna when you are finished driving the car. Use the transmitter's controls to drive and steer the racer.
- When you finish driving the vehicle, turn the transmitter and vehicle off.


LED Indicators light when you:

- rotate the steering control to turn left and right.
- push FORWARD or BACKWARD to move forward or backward.

Push FORWARD to drive the car forward. The headlights illuminate. Pull BACKWARD to move backward. Release to stop. The taillights illuminate.

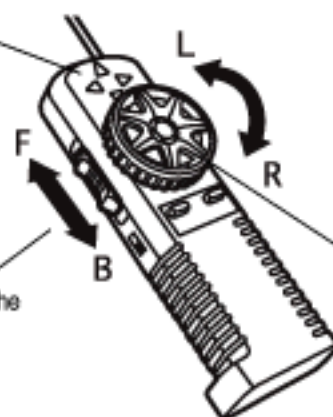

 Steering Wheel — Use the steering control to turn left and right. Release it to make the car go straight.

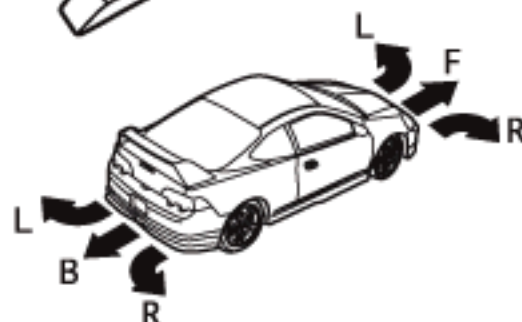

## Battery Notes

- Use only fresh batteries of the required size and recommended type.
- Use only the recommended battery pack and charger. You may purchase a charger at your local RadioShack store.
- When the transmitter's range decreases, replace its battery. Never leave dead or weak batteries in the vehicle or transmitter.
- Do not charge the battery pack while it is in the vehicle or immediately after use. Allow it to cool first.
- After you charge the battery pack (12 to 14 hours), disconnect it from the charger. Overcharging the battery pack might damage it.
- Do not mix old and new batteries, different types of batteries (alkaline, standard, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the vehicle for a week or more, remove the batteries from it and the transmitter. Batteries can leak chemicals that may destroy electronic parts.
- Ensure the connectors and wires are positioned so they do not touch moving parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

## Interference

Your racer or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your racer or transmitter is causing the interference, turn off your racer and release the control levers. If the interference goes away, your racer or transmitter is causing it. Try to eliminate the interference by:

- Moving your racer and transmitter away from the TV or radio
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, you maybe required to stop using your racer.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

**Note:** This digital apparatus does not exceed the Class B limits for Radio noise emissions from digital apparatus set out in the Radio interference Regulations of Industry Canada.

**Important:** This car can use nickel-cadmium rechargeable batteries. At the end of a nickel-cadmium battery's useful life, it must be recycled or disposed of properly. Contact your local hazardous waste management authorities for information on recycling or disposal programs in your area.

 


### Important:

- Not suitable for children under 3 years of age as the toy is electrical and mechanical in nature.
- Keep this owner's manual so that you can trace back to the importer whenever necessary.

## Hints & Tips

- Driving your racer for long periods of time can generate a high heat level, which causes wear and tear on the motor. To help keep heat levels down, when your vehicle's battery power dies, let it cool for at least 10 minutes before recharging the battery.
- Do not touch the motor immediately after using the racer, as it may become hot during use.
- If your vehicle's motor runs, but does not respond to the transmitter, move closer to the vehicle and try again.
- If someone uses a CB nearby, it might interfere with the control of your racer. If this happens, move the vehicle away from the CB.
- You cannot operate your vehicle near devices with transmitters that use the same frequency as your vehicle (27MHz or 49MHz). Check the box to see which frequency you have.
- If your vehicle moves slowly, or not at all, and you have installed a fully charged battery pack, check the wheel mechanism for lint, dust, hair or thread.
- When the transmitter's range decreases, replace its battery.
- If your vehicle does not drive in a straight line, adjust the wheel alignment control on the bottom of the vehicle. If the vehicle pulls to the right, turn the control toward left, and if it pulls to the left, turn the control toward right.

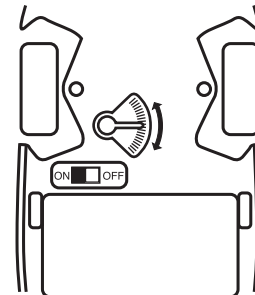

## Care & Use

- Do not play with your vehicle in the street.
- The racer reaches speeds (110m/360 ft. per minute). Avoid high-impact collisions with people and objects.
- If the racer gets stuck under an object, immediately release both controls on the transmitter. Then, retrieve the vehicle.
- Wipe the vehicle occasionally with a damp cloth to keep it looking new.
- Tampering with your vehicle's electronic parts may cause damage to the vehicle. If your vehicle does not operate properly, take it to your local RadioShack store for assistance.

## InterTAN Warranty

InterTAN warrants that this product will be free from defects in materials and workmanship for a period of ninety (90) days from the date of purchase. Within this period, simply take the product and your proof of purchase to any InterTAN store or dealer and the product will be repaired without charge for parts and labour. InterTAN reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through InterTAN's company owned stores and dealers and to a product that is presented for repair in a country where InterTAN offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which InterTAN operates. This warranty is subject to all statutory rights you may have in the country of purchase.

MANUFACTURED IN CHINA. IMPORTED FOR/IMPORTÉ POUR  
InterTAN CANADA LTD., BARRIE, CANADA, L4M 4W5  
REGISTERED TRADEMARK OF InterTAN, CANADA LTD.  
REGISTERED TRADEMARK LICENSED TO InterTAN CANADA LTD

© 2004 InterTAN Canada Ltd. All Rights Reserved.

RadioShack is a trademark licensed to  
InterTAN Canada Ltd. by RadioShack Corporation. 5A04  
Printed in China