

Cat. No. 136154

OWNER'S MANUAL – Please read before using this equipment.

Racing Car

You need the following items (not supplied) to power Racing Car.

Two 1.5 alkaline battery for the transmitter
at least one 9.6 volt rechargeable battery pack for the car
one battery pack charger

FCC Declaration of conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Racing Car
Model:	136154
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Pone:	817-415-3200

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.

INSTALLING BATTERIES

Cautions:

- Use only a fresh battery / battery pack of the required size and recommended type.
- If you will not be using the car for a week or more, remove the battery from the transmitter and the battery pack from the car. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the car or the transmitter.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

In the Transmitter

The transmitter requires two 1.5-volt alkaline battery. For the best performance and longest life, we recommend alkaline battery.

1. Uses the screwdriver to turn forward with the arrow direction on the battery compartment cover and lifts it off
2. Place a battery in the battery compartment according to the polarity symbols (+ and -) marked inside.
3. Close the cover then uses the screwdriver to turn the opposite direction of the arrow to lock the battery door.

Note: When the transmitter's range decreases, replace its battery.

In The Car

The car requires one 9.6-volt rechargeable battery pack for power.

You must charge a rechargeable battery pack before you can use it to power your car. To charge it, follow the battery charger's instruction.

1. Slide ON/OFF on the bottom of the car to OFF.
2. Use a coin to turn the battery compartment cover's latches clockwise until they stop. Then lift off the cover.
3. Put the battery pack in the compartment with the battery pack's connector on the same side as the car's matching connector.
4. Attach the battery pack's white connector to the car's matching connector. Do not force them! They only fit together one way.
5. Replace the cover and turn the latches counterclockwise until they stop. Be sure the connectors and wires do not touch the car's moving parts. If the car loses power or does not respond to the transmitter, recharge the battery pack.

Note: Occasionally, let the battery pack fully discharge before recharging it. Otherwise the battery pack may lose its ability to fully charge.

Cautions:

- Use only the recommended battery pack and charger.
- Do not charge or recharge the battery pack while it is in the car.
- After you charge or recharge the battery pack (see the charger's manual for the charging time). Disconnect it from the charger. Overcharging the battery pack could damage it.
- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

DRIVING Racing Car

Warning: This car can reach much higher speeds than many other radio-controlled cars.

Be careful to avoid high-speed collisions with people and objects.


1. Slide ON/OFF on the car and the transmitter to ON.
2. Use the transmitter's levers to drive and steer the Racing Car.

Left Control Button

“ F ” Press it to move forward
“ R ” Press it to move backward.
Release to stop.

Right Control Button

“ L ” Press it to turn left.
“ R ” Press it to turn right
Release to go straight

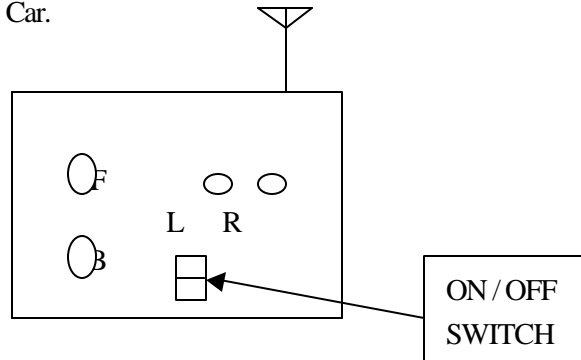

Caution: If the Racing Car gets stuck under an object, immediately release the transmitter's control leavers and retrieve the car.

3. When you finish playing with the car, slide ON/OFF on the car and the transmitter to OFF.

ADJUSTING WHEEL ALIGNMENT

If the Rocking PT Cruiser does not drive in a straight line when you release the right control lever, adjust the wheel alignment control (between the front wheels, underneath the car). Slide the control toward L (left) if the car is pulling to the right, or toward R (right) if the car is pulling to the left.

Printed in China