Jeep Wrangler Unlimited

Thank you for purchasing your Jeep, Wrangler® Unlimited from RadioShack. Built to 1:14 scale, it can reach speeds of 650 feet per minute. Please read this user's guide before installing, setting up and using your Jeep.

What's Included

136227R

Jeep Wrangler

Transmitter

Jeep Antenna Tube AA Battery Tray

User's Guide

Safety and Care

- Do not use your Jeep near transmitters with the same frequency (40 MHz).
- A nearby CB can interfere with your Jeep's control.
 If this happens, move the Jeep away from the CB.
- Never play with your Jeep in the street.
- Avoid high-impact collisions with people and objects.

Manufactured in China.

Imported for InterTAN Australia Pty Limited (ITA) A.C.N. 002511944

Registered trademark licensed to ITA and used with the permission of TRS Quality Inc.

L / H - Switch to L when driving on rough

terrain, or to H when driving on smooth terrain.

Driving Your Jeep

- Thread the Jeep's antenna wire through the supplied antenna tube. Then, insert the tube into the antenna tube holder on the Jeep's body.
- Make sure the transmitter and the Jeep are on the same band. Turn on the Jeep and transmitter.
- 3. Use the transmitter's control levers to steer your Jeep.
- 4. Turn off the Jeep when you finish driving.



Installing Batteries

Charge a 9.6 V battery pack (not supplied) before installing.

1. Turn off your Jeep and transmitter.

Lights when you

turn on the Jeep.

- Insert one 9V battery (not supplied) in the transmitter battery compartment matching the polarity symbols (+ and -) marked inside.
- Load and connect a fully-charged 9.6V battery pack or battery tray with 6 AA batteries (neither supplied). The connector fits only one way. Do not force it.
- Replace the battery door and secure the latch.

Battery Notes:

- Use only fresh batteries of the required size and recommended type. Use batteries of the same types, capacities and chemistries.
- Do not burn or bury batteries.
- To keep motor heat levels down, let the Jeep cool at least ten minutes between battery exchanges.
- If you do not plan to use the Jeep for a week or longer, remove the batteries from both the Jeep and transmitter.
- Position the battery connectors and wires so they do not touch any moving parts.

R / L – Turn toward R if the Jeep pulls to the left, or toward L if it pulls to the right.

©2007. RadioShack Corporation. All rights reserved.

RadioShack is a trademark used by RadioShack Corporation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.