

Toyota Tundra



Installing Batteries

- 1. Turn off your truck.
- 2. Insert one 9V battery (not supplied) in the transmitter battery compartment matching the polarity symbols (+ and -) marked inside.
- 3. On the truck, turn the latches to open the battery compartment.
- 4. Load six AA batteries (not supplied) with correct polarity into the supplied battery compartment tray

Load and connect a fully-charged 9.6V battery pack (not supplied). The connector fits only one way. Do not force it.


5. Replace the battery door and secure the latches.

Battery Notes:


- Use only fresh batteries of the required size and recommended type. Do not mix batteries of different types, capacities, or chemistries.
- Do not burn or bury batteries.
- To keep motor heat levels down, let the truck cool at least ten minutes between battery
- If you do not plan to use the truck for a week or longer, remove the batteries from both the truck and transmitter.
- Position the battery connectors and wires so they do not touch any moving parts.

Driving Your Truck

- 1. Thread the truck's antenna wire through the supplied antenna tube. Then, insert the tube into the antenna tube holder on the truck's body.
- 2. Make sure the transmitter and the truck are on the same band. Turn on the truck and transmitter. Your truck comes in 3 frequencies(ABC) so you can play with friends. Set your truck and transmitter to a frequency different to your friend's.
- 3. Use the transmitter's control levers to steer your truck.
- 4. Turn off the truck when you finish driving.

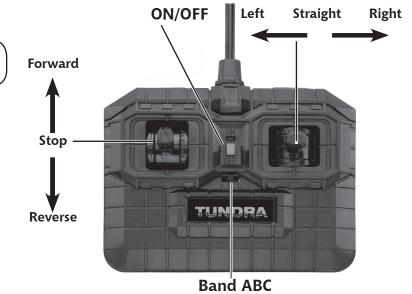

R / **L** – Turn toward **R** if the truck pulls to the left, or toward L if it pulls to the right.

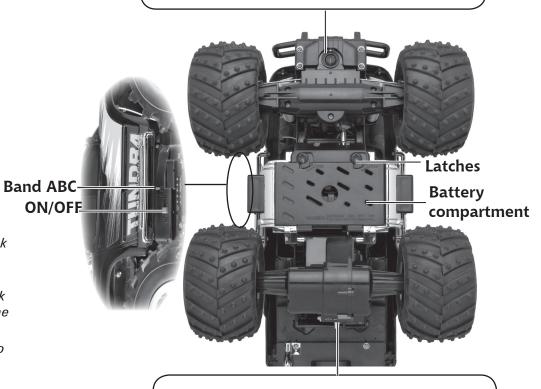

L / H – Switch to L when driving on rough terrain, or to **H** when driving on smooth terrain.

Thank you for purchasing your 1:14 7F Dual Power 4WD Toyota Tundra from RadioShack. Built to 1:14 scale, it can reach speeds of 570 feet per minute and comes in one of two frequencies (27 MHz or 49 MHz), so you can race with a friend. Please read this user's guide before installing, setting up and using your truck.

What's Included **4WD Toyota Truck Antenna Tube** User's Guide

Transmitter AA Battery Tray

Safety and Care

- Do not use your truck near transmitters with the same frequency (27 MHz or 49
- A nearby CB can interfere with your truck's control. If this happens, move the truck away from the CB.
- Never play with your truck in the street.
- Avoid high-impact collisions with people and objects.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced technician for help

If you cannot eliminate the interference, the FCC requires that you stop using your truck. Changes or modifications not expressly approved by *RadioShack* may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

limited 90-day Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack companyowned stores and authorized **RadioShack** franchisees and dealers. For complete warranty details and exclusions, check with your local **RadioShack** store.

RadioShack Customer Relations 300 RadioShack Circle Fort Worth, TX 76102

04/04

www.radioshack.com

Actual product may vary from the images found in this document.

©2007. *RadioShack Corporation* . All rights reserved. *RadioShack* and

05/24/2007 17:46:00