

# Ford F150

60-402

## Get Ready to Drive


### Install Batteries

- 1 Turn off the truck and transmitter.
- 2 Insert one 9V battery (not supplied) in the transmitter battery compartment, matching the polarity (+ and -) marked inside.
- 3 Open the truck's battery compartment, then insert a fully-charged 9.6V battery pack (not supplied) into the battery holder and connect the connectors. The battery only fits one way. Do not force it.
- 4 Place the battery holder into battery compartment by aligning the two notches and secure the latches.

### Battery Compartment

### battery holder

Align with notches

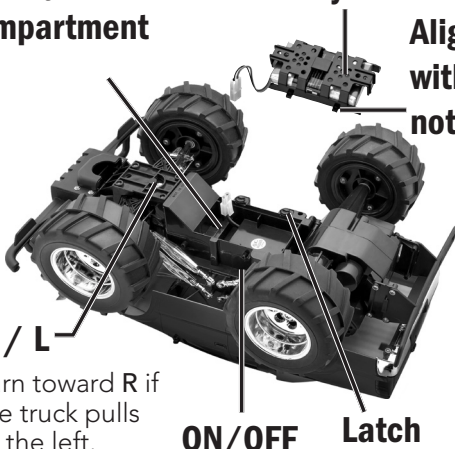

R / L

Turn toward R if the truck pulls to the left.

Turn toward L if the truck pulls to the right.

ON/OFF

Latch

### Install Antenna

- 1 Thread the truck's antenna wire through the supplied antenna tube.
- 2 Insert the tube into the antenna hole on the truck's body.
- 3 Tie a loose knot to hold the antenna wire in place.

## Drive Your Truck

- 1 Extend your transmitter antenna to full length.
- 2 Turn on the truck and transmitter, then use the transmitter's controls to steer.
- 3 Turn off the truck and transmitter when you finish driving.



Attach the antenna here.

### HI/LOW

Switch to LOW when driving on rough terrain.

Switch to HI when driving on smooth terrain.


### Steering

### Trigger

Pull back to drive forward, push to drive backward.

### ON/OFF

Attach the antenna tube here.

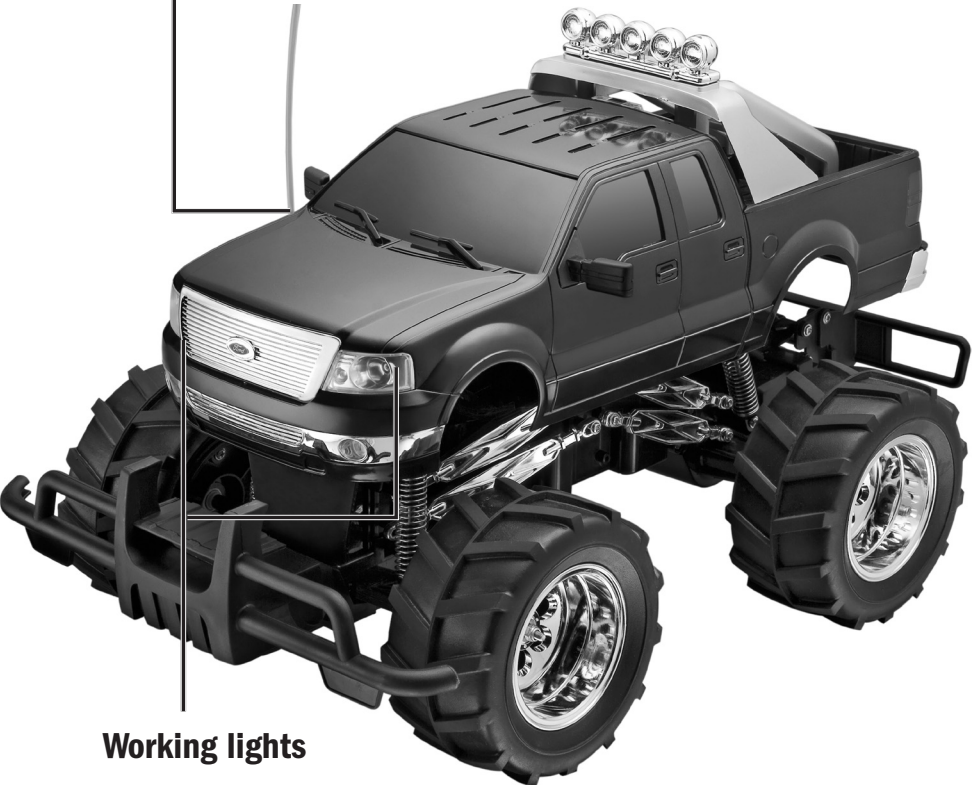

Working lights

### Battery Notes

- Use only fresh batteries of the required size and recommended type. Do not burn or bury batteries.
- To keep motor heat levels down, let the vehicle cool at least ten minutes before changing batteries.
- If you do not plan to use the vehicle for a week or longer, remove the batteries from both the vehicle and transmitter.
- Position the battery connectors and wires so they do not touch any moving parts.
- Remove the exhausted batteries from the vehicle and transmitter.
- Do not recharge the non-rechargeable batteries.
- Remove rechargeable batteries from the vehicle before charging.
- Rechargeable batteries should only be charged under adult supervision.
- Do not short-circuit the supply terminals.



### Recycle Rechargeable Batteries

Placing rechargeable batteries in the trash can be harmful to the environment. Instead, recycle old rechargeable batteries at your local **RadioShack** store free of charge. **RadioShack** participates in the RBRC® battery recycling program, and is committed to preserving the environment and conserving natural resources. Call 1-800-THE-SHACK (1-800-843-7422) for more information.

Thank you for purchasing your Ford F150 from **RadioShack**. It can reach speeds up to 600 feet per minute and comes in one of two frequencies (27 or 49 MHz). Please read this user's guide before installing, setting up and using your vehicle.

### What's Included

Ford F150 Transmitter  
Antenna Tube User's Guide

### Safety and Care

- Adult supervision is recommended at all times.
- Do not use your toy near transmitters with the same frequency.
- A nearby CB radio can interfere with your truck's control. If this happens, move the toy away from the CB.
- Never play with your toy in the street.
- Avoid high-impact collisions with people and objects.

### Specifications

Speed ..... up to 600 feet/min  
Frequency..... 27/49MHz  
Control distance ..... 150 feet (45.7 m)  
Climbing angle ..... 30 degrees  
Control..... 7 function  
Drive..... 2-wheel

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

### RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your truck. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### Limited Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company- owned stores and authorized **RadioShack** franchisees and dealers. EXCEPT AS PROVIDED HEREIN, **RadioShack** MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store. **RadioShack** will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**RadioShack** Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76102  
12/99

[www.radioshack.com](http://www.radioshack.com)



Protect the environment by recycling used electronics. Go to [www.eyclingcentral.com](http://www.eyclingcentral.com) to find a recycling location near you.