



60-4384

Petersen's 4-wheel & off-road Chevrolet Avalanche



Thank you for purchasing your RadioShack Petersen's 4-Wheel & Off-Road Chevrolet Avalanche. Scaled to 1:13 the size of a real Chevy Avalanche, it can reach speeds of up to 600 feet per minute and climb 40 degree inclines. This truck is perfect for children ages 8 and up.

what's included

Chevrolet Avalanche
user's guide

transmitter

 
installing your batteries

To power your truck, you will need one 9V battery for the transmitter and one 9.6V battery pack for the truck. Neither of these batteries is included, but both are available at your local RadioShack or online at www.radioshack.com.

in the transmitter

1. Remove the cover.
2. Put the 9 volt battery in the compartment as indicated by the polarity symbols (+ and -). Replace the cover.

NOTE When the transmitter's range decreases, replace its battery.

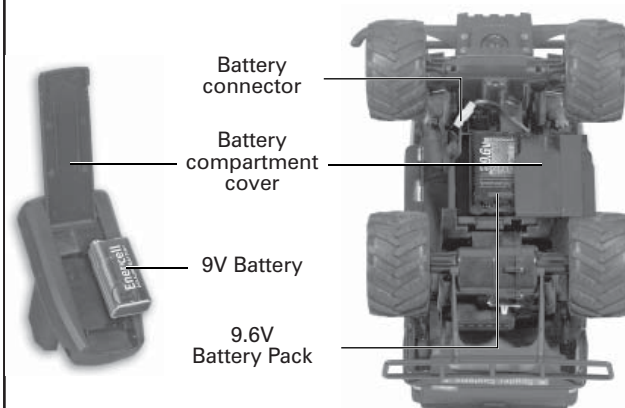

in the truck

 
1. Remove the battery compartment cover. Replace when finished.
2. Attach the battery pack's connector to the truck's connector. It fits only one way.
3. Place the battery pack in its compartment. Replace the cover and secure it.

NOTE When the truck's operation becomes erratic, replace the batteries.

driving your truck


1. Extend the transmitter's antenna to its full length.
2. Turn the transmitter and the truck on. The headlights should turn on.
3. Pull the speed control trigger toward the handle to move forward. Pull all the way in for turbo speed.
4. Push the trigger away from the handle to move backward.
5. Release to stop.
6. Use the steering control wheel to turn left and right.
7. Release the wheel to drive straight.
8. When you finish driving the vehicle, turn it off.

NOTE You can use the gear switch on the transmitter to select high or low gear. Raise it up for high gear to drive on rough surfaces, the indicator lights red. Put it down for low gear to drive on rough surfaces, the indicator light green.

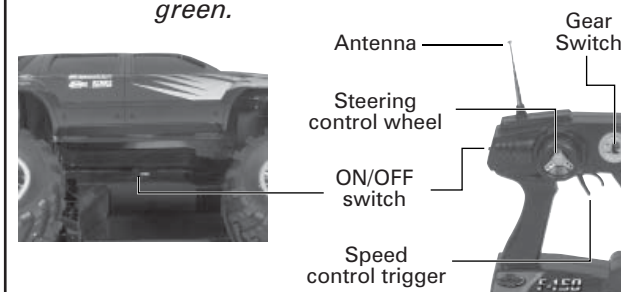

wheel alignment

 If the car does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the car. Turn the control toward L if the car is pulling to the right or toward R if the car is pulling to the left.

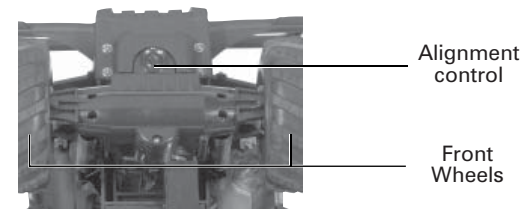

helpful hints

- Driving your truck for long periods of time can generate a high heat level, which causes wear and tear on the motor. To help keep heat levels down, when your vehicle's battery power dies, let it cool for at least 10 minutes before installing new batteries.
- Do not touch the motor immediately after using the truck, as it may become hot during use.
- If your truck's motor runs, but does not respond to the transmitter, move closer to the vehicle and try again.
- If someone uses a CB nearby, it might interfere with the control of your truck. If this happens, move the vehicle away from the CB.
- You cannot operate your truck near devices with transmitters that use the same frequency as your vehicle (27 MHz or 49 MHz). Check the box to see which frequency you have.
- If the truck moves slowly, or not at all, and you have installed new batteries, check the wheel mechanism for lint, dust, hair or thread.
- When the transmitter's range decreases, replace its battery.
- The truck might make a popping or grinding noise when you slide the gear control switch. This is normal.

battery notes

- Dispose of old batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not use batteries of different types capacities, or chemistry.
- If you do not plan to use the toy for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Batteries purchased for use in this toy may pose hazard to children. Please check the safety notice supplied with batteries before use.
- Do not recharge a battery pack immediately after use (while it is still hot). Allow it to cool first.
- Do not overcharge the battery. Overcharging the battery pack might damage it.
- Do not charge the battery pack while it is still in the truck.
- Make sure the battery compartment cover is secure before driving the truck.

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



caring for your truck

- This truck is recommended for children ages 8 and up.
- Do not play with your vehicle in the street.
- Avoid high-impact collisions with people and objects. Do not drop it.
- If the truck gets stuck under an object, immediately release both controls on the transmitter. Then, retrieve the vehicle.
- Use and store your truck only in room temperature environments.
- Keep the truck away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- If your truck is not performing as it should, take it to your local RadioShack store for assistance.

the fcc wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your phone. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

Product	Petersen's 4-wheel & off-road Chevrolet Avalanche
Model	60-4384
Responsible Party	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone	817-415-3200

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04



RadioShack.