Bluetooth® Remote Controller User's Manual BRC-100

Version 1.0 2013/12

ID NO:

About This Manual

This manual is designed to assist you in installing and using the Bluetooth Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2013

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

Trademarks

All trademarks and registered trademarks are the property of their respective owners.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1) this device may not cause interference and

2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN

INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Introduction

Thank you for purchasing the **Bluetooth® Remote Controller**. This User's Manual contains information that will help to operate the device as well as answering questions about certain special keys and buttons. Please keep this manual in a safe place for future reference.

System Requirements

- iPhone 4/4S/5/5S iPad/ iPad2/ The New iPad/ iPad mini/ iPad Air
- Smart phones and tablet PCs with Android3.0 or higher
- Bluetooth 2.1 or higher

Package includes:

Bluetooth® Remote Controller * 1, Manual * 1

Device pairing

- 1. Turn on the Bluetooth from iPad/Smart Phone.
- Turn on the BRC-100 power and press the "CONN" button. (Please make sure the red LED is flashing)
- The device Bluetooth Remote controller displays on iPad/Smart Phone. Then, choose "Connect".
- 4. Start to use BRC-100.
- Note: 1. Please press any key to re-establish the connection between BRC-100 and iPad/Smart Phone after turning the Power Switch On.
 - 2. There is a power switch at back of the BRC-100. When not in use, please turn to OFF to save battery power.

Key function description:

Function name		Android	ios
+	V+ / Shutter button	Increases the device's sound volume. Hold down to increase volume more quickly.	Increases the device's sound volume. Hold down to increase volume more quickly. / Shutter button
Н	Pre-track	Switches to the previous media track. Press once for each preceding media track.	Switches to the previous media track. Press once for each preceding media track.
▶/II	Play/Pause	Switches between Play and Pause. Once Pause is pressed, pressing this button again resumes play.	Switches between Play and Pause. Once Pause is pressed, pressing this button again resumes play.

		Switches to	Switches to
		the next	the next
		media track.	media track.
>>	Next track	Press once	Press once
, , _		for each	for each
		subsequent	subsequent
		media track.	media track.
		Decreases	Decreases
		the device's	the device's
_	V-	sound	sound
		volume.	volume.
		Hold down to	Hold down to
		decrease	decrease
		volume more	volume more
		quickly.	quickly.
			Back to main
			screen. /
	Home / Siri	Back to main	Hold down 1
,	Tiome / Sin	screen.	seconds into
Sir			the Siri
			system
		Back to	
	Backspace	previous	Non-function
	Васкорасс	page	TTOTT TUTTOTION
		pago	
		Move up.	
	Move up	Hold down to	Non-function
	Wiove up	move up	11011 1011011011
		more quickly	
		Move left.	
	Move left	Hold down to	Non-function
		move left	
		more quickly	
OK	Enter key /	Enter key /	
	Shutter	Shutter	Non-function
0	button	button	
_			

Move right	Move right. Hold down to move right more quickly	Non-function
Move down	Move down. Hold down to move down more quickly	Non-function

Troubleshooting

Make sure installed the batteries correctly.
 Check to make sure the batteries installed are not dead. Try the batteries in another device.