

Bluetooth Palm Style Keyboard with Touchpad

User's Manual

Version 1.0 2011/3

ID NO:

About This Manual

This manual is designed to assist you in installing and using the Wireless palm style Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2011

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

WARNING

A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

1. INTRODUCTION

Thank you for purchasing the **Bluetooth Keyboard with Touchpad**. This User's Manual contains information that will help you to operate your keyboard as well as answer questions about certain special keys and buttons.

- **MCE Buttons:** My Music, My Videos, My Pictures, My TV, My Radio, DVD.
- **Internet Buttons:** WWW, E-mail, Back, Forward
- **Multimedia Buttons:** Volume down, Volume up, Mute, Pre track, Next track, Play/Pause and Stop

Note: 1. All the MCE buttons need to work under MCE application. If press in Windows XP or Vista, will not work.

2. The MCE, Internet, Multimedia hotkeys, Start, and Window key can not work under Linux.

2. SYSTEM REQUIREMENTS

- Microsoft Windows® XP with MCE/ Vista/Windows 7 operating system
- Microsoft Internet Explorer 6.0 or later.

3. DEVICE PAIRING

 
Widcomm software:


1. Right click on the BT icon and choose “Explore My Bluetooth Places”



2. Press the ID button at back of the Bluetooth Mine Keyboard, then the led will start flashing.
3. Click the “Search for devices in range” option, the “Bluetooth Keyboard” will be found.

Double click on the “Bluetooth Keyboard” icon, it will pop-up another windows. Just follow the screen display to input the Pin Code then press “enter”.

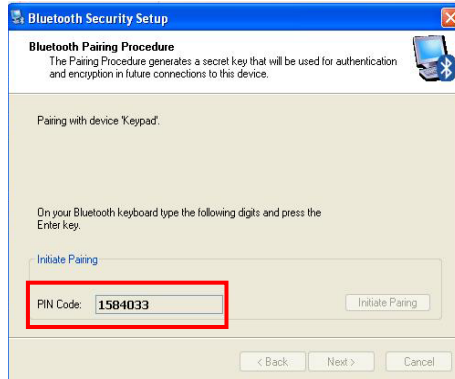

4. The Found New Hardware Wizard appears and the OS will install the driver automatically. No other steps are necessary.
5. The Bluetooth icon will become to  . The Bluetooth Mini Keyboard is ready to use.

Toshiba software:

1. Right click on the BT icon and choose “Add New Connection”

 



2. Press the ID button at back of the Bluetooth Mini Keyboard, then the led will start flashing.

3. Click “Next”




4. Choose the “Bluetooth Keyboard” device and click “Next”
5. Just follow the screen display to input the Pin Code then press “enter”

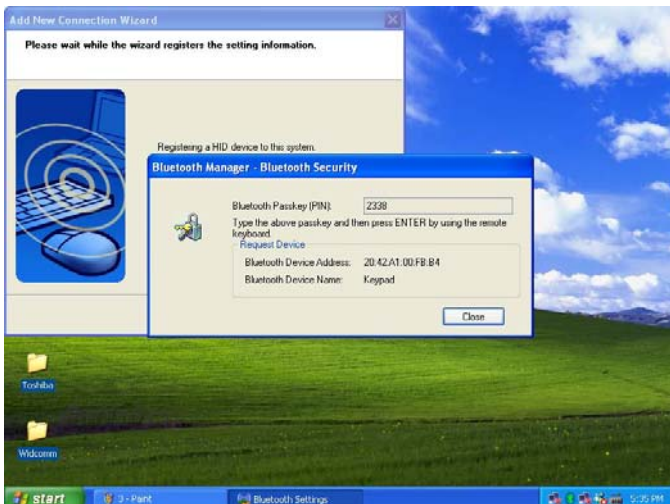


6. The Found New Hardware Wizard appears and the OS will install the driver automatically. No other steps are necessary.
7. The Bluetooth icon will become to  . The Bluetooth Mini Keyboard is ready to use.

 IVT Software:



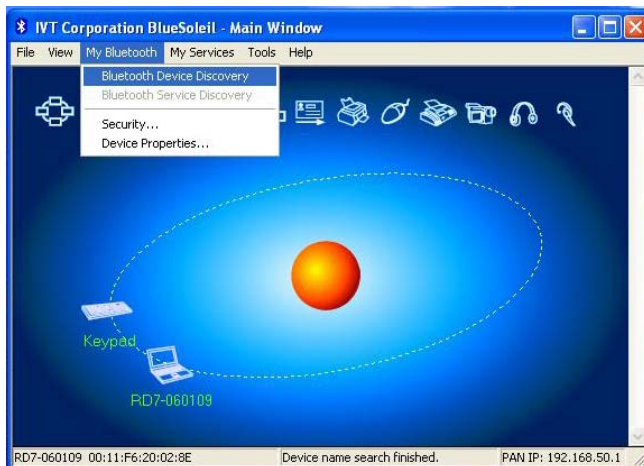





1. Press the ID button at back of the Bluetooth Mini Keyboard, then the led will start flashing.
2. Double click the BT icon on the system tray and it will pop-up a windows. Choose “My Bluetooth” → ” Bluetooth Device Discovery”







3. It will find the “Bluetooth Keyboard” device. Right click on the Keyboard icon and choose “Connect” → “Bluetooth Human Interface Device Service”
4. Just follow the screen display to input the Passkey then press “enter”
5. The Found New Hardware Wizard appears and the OS will install the driver automatically. No other steps are necessary.
6. The Bluetooth icon will become to  . The Bluetooth Keyboard is ready to use.













Note: After 30 minutes non-operation, the keyboard will go to sleep mode. Please press any key to wake up.

4. Keyboard Button Functions

Function Name		Function Description
	Start	Open the MCE application.
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Stop	Stops playing the media.
	Next track	Switches to the next media track. Press once for each subsequent media track.
	Pre-track	Switches to the previous media track. Press once for each preceding media track.
	Mute	Mutes the computer's sound volume. Press it again to turn the system volume back on.
	V-	Decreases the computer's sound volume. Hold down to decrease volume more quickly.
	V+	Increases the computer's sound volume. Hold down to increase volume more quickly.


20 Enhanced Function Keys: (12 Embedded MCE Hotkeys+4 Internet hotkeys+4 addition hotkeys that are controlled by the "Fn Key")

<i>Fn</i>	Fn key	Enables the 20 Embedded Keys, press the Fn key to enable the hotkey.
	1: My Music	Open My Music application
	2: My Video	Open My Videos application.
	3: My Picture	Open My Pictures application.
	4: My Radio	Open My Radio application.


	5: My TV	Open My TV application.
	6: DVD	Open DVD menu application.
	7: Flip 3D	Call the Flip 3D function
	8: Win Select	Call the Win Select function.
	9:Zoom in	Zoom in the picture.
	0:Zoom out	Zoom out the picture.
	-: Minimum	Minimum all current windows. Press again to recover.
	=: Close	Close the active Windows® application.
	Back	Goes back to a previous item that was already viewed in programs that support the “Back” command, such as a Web browser
	Forward	Goes to the next item—if it was previously viewed in the same session, in programs that support the “Forward” command, such as a Web browser.
	WWW	Starts the default Web browser and goes to the home page. If the Web browser is active, it opens the home page.
	Email	Starts the default e-mail program.
PgUp	Page Up	Keyboard “Page Up” function.
PgDn	Page Down	Keyboard “Page Down” function.
Home	Home	Keyboard “Home” function.
End	End	Keyboard “End” function.

5. Touch pad

 To adjust the touchpad, you can go to **【Control Panel】** → **【Mouse】** → **【Pointer Options】** to select a pointer speed.

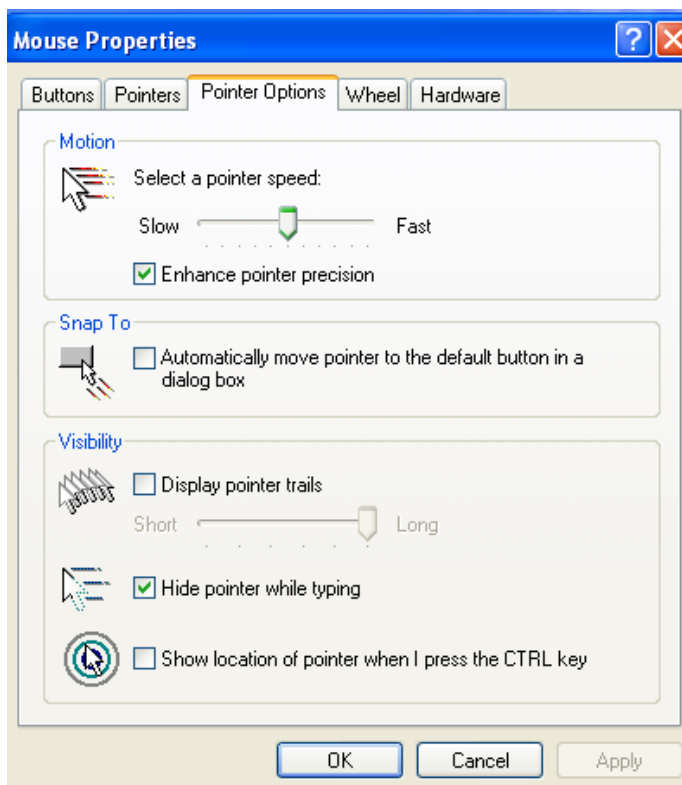

 Scroll function: Using two fingers on the touchpad up and down.

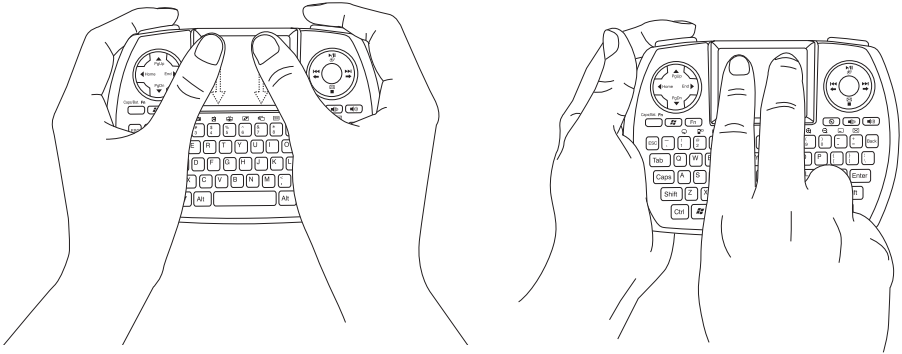

6. Troubleshooting

➤ **Wireless Product Does Not Work**

- Make sure you have connected the receiver correctly.
- Make sure you have installed the batteries correctly. Check to make sure the batteries you have installed are not dead. Try the batteries in another device.
- Try unplugging then reconnecting the receiver to the computer and press the ID button at back of the keyboard.
- When it connected, the led of the receiver will start flashing.

➤ **RF Distance Does Not Reach 10M**

It is possible that computer monitor (or a large metal object) may be interfering with the receiver's radio reception. Also, the batteries may be low. Check the batteries status. You may also need to re-establish the connection between the keyboard and receiver.

➤ **The touchpad can not work normally when power on**

To avoid this issue, please use the touchpad after 2 seconds.

Because the touchpad need correction by itself when power on.