

Wireless Touch pad and Mini Keyboard with Backlight

User's Manual

PKB-1800L

Version 1.0 2012/08
ID NO :

About This Manual

This manual is designed to assist you in installing and using the Wireless Touchpad Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2012

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

WARNING

A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Caution:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN
INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE
INSTRUCTIONS.

1. INTRODUCTION

Thank you for purchasing the **Wireless Entertainment Touch Pad Keyboard**. This User's Manual contains information that will help to operate the keyboard as well as answering questions about certain special keys and buttons. Please keep this manual in a safe place for future reference.

2. SYSTEM REQUIREMENTS

- Microsoft Windows® XP / Vista/Windows 7/
Linux operating system
- Microsoft Internet Explorer 6.0 or later.

3. KEYBOARD FUNCTION

- 3 Application Hot Keys: WWW, My Computer, Email
- 6 Multimedia Hot Keys: Volume down, Volume up, Mute, Pre track, Next track, Play/Pause.

4. INSTALLATION

- Connect the receiver to your PC USB port.
- "New Hardware Found" will display.
- Place batteries into keyboard and turn it on.
- Start using the wireless touchpad keyboard.

Note: keyboard goes into sleep mode after 30 minutes non-operation; press any key to wake up.

5. Touch Pad function:

Press "M" button to switch function between touchpad / Hotkey function. When the Mode LED is on, it means the hotkey on touchpad is standby.



6. Backlight Control

Pressing the "M" button for more than 3 seconds then release, it allows keyboard backlight function to be switched on and off.

7. Troubleshooting

➤ Wireless Product Does Not Work

- Make sure the receiver is connected correctly.
- Make sure the batteries are installed correctly. Check to see if the battery power is dead.
- Please unplug then re-plug the receiver, then press the ID button at back of the keyboard for re-pairing.
- When the receiver LED starts flashing, the keyboard is connected with the computer.

➤ **RF Distance Does Not Reach 10M**

- It is possible that computer monitor (or a large metal object) may be interfering with the receiver's radio reception.
- The interference might be affected when the battery power is low. Please check battery status
- Re-establish the connection between the keyboard and receiver might be necessary to keep the RF distance working in 10 meters.