

Use Modes	Mode of Operation	Explanation	Frequency of Transmission
Consumer	Normal	Transmitter in normal operation – wheel is rotating.	4 packets every minute
Consumer	Storage	Transmitter enters mode when wheel is not rotating. Vehicle is stopped.	No transmission.
Consumer	Alert	Transmitter enters this mode when the temperature exceeds 110 deg. C or if a 20Kpa change in pressure is detected.	8 Packets every 4 seconds for 1 minute.
Factory/Setup	Normal	Activated with 125 kHz signal	4 packets per initiation.