

Re: Certification for  
TRW/Volvo Low Power Transmitter  
Model: GQ43VT16T  
FCC ID: GQ43VT16T  
CANADA: to be provided by IC

USER'S MANUAL

The following material will be contained in the vehicle owner's manual:

**(PRELIMINARY)**

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

A sample page of operating instructions follows.

**EXHIBIT** J

Page 1 of 2

U of Mich file 415031- 932

**User's guide for the RKE RF transmitter / Receiver**

Transmitter type : 04686482AA

Receiver type : 04686474AA

**EXHIBIT** J

Page 2 of 2

U of Mich file 415031- 932

**1. Introduction**

Our system called RKE (Remote Keyless Entry) is composed of two separate units : a transmitter and a receiver.

Its function consists in enabling the remote control of the door lock and unlock of a car by operating on the controls of an external central unit, which is not part of subject system.

The transmitter electronic circuit is introduced in a fob which is attached to the ignition.

**2. Door lock**

To unlock the doors, press and release the unlock button on the key fob once to unlock the driver's door, or twice to unlock all the vehicle's doors.

The illuminated entry system also comes on.

**3. Door unlock**

To lock the doors, press and release the lock button on the key fob to lock all doors.