

OKI[®]
PHONES

Oki Telecom, Inc.
437 Old Peachtree Road
Suwanee, GA 30024
(770) 995-9800
1-800-554-3112

FCC ID: B2JUM9106
2.983 (d)(8) 1 of 3

OKI[®]
PHONES

user's
guide

CD800



Portable CDMA Digital Cellular Telephone

OKI Part Number 01-34001 Issue 1
Printed in U.S.A.


The Phone

PRIMARY KEYS:

- 1** Press for 1/2 second to turn power on or off. (Powering Down)
- 2** Dedicated emergency dialing key. One touch dialing to programmed emergency "Help" dialing number.
- 3** Adjusts volume and scrolls through menu options.
- 4** **Keypad.** Place calls, program features.
- 5** Originates calls, activates hook-flash signal, selects features.
- 6** Erases digits, clears the display.
- 7** Terminates calls, enters pauses.

FUNCTION KEYS:

- 8** (Soft Keys) Accesses features and stored information.
- 9** Accesses messaging features, menu and scroll keys through menu options.

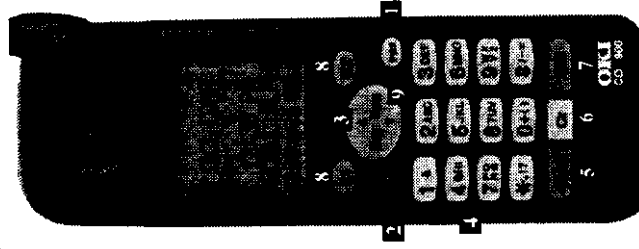

BATTERY DISPOSAL

What should I do when my battery will no longer hold a charge?



Call OKI at 1-800-554-3112.




OKI will send you a prepaid envelope.



Mail the battery back to OKI in the prepaid envelope.



OKI will safely dispose of the battery.

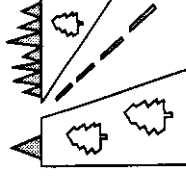

OKI & YOU.
Together
we can protect the
environment.

Congratulations on the purchase of the OKI Phones CD800 CDMA Digital portable cellular phone. Your CD800 provides exceptional voice quality (no static noise), longer battery life, voice privacy and a full range of messaging capabilities.

Please read all instructions thoroughly.

Phone Number 1: _____

If you plan on locking your phone or using the Security Menu features, you may use the preset lock/unlock code **(1)(2)(3)(4)** or reprogram the phone with your own code. Refer to Program New Unlock Code in the section titled "Security Menu".

Unlock Code: _____

Keypad Lock: To lock press and hold **(End)**.

To Unlock Keypad : Press **Menu** + **(Clr)**.

IMPORTANT!

To achieve full battery capacity, refer to Battery Care procedure on page 5.

CONTENTS	
The Display	2
Using Your Phone	3
Your Phone	5
Basic Operation	9
The Memory	19
Subscriber Services	24
General Menu	32
Security Menu	46
Safety	55
Index	59
Specifications	63

The illustrated display represents the standard display (in idle mode). You may program the top line with a personal message (up to 10 characters) (see Security Menu Section). During an incoming call, the RSSI and Battery Meter are temporarily replaced by incoming call information.

The RSSI and Battery meters will be displayed continuously unless the **Menu**, **Msg** or in some cases the **(G)** and **(S)** keys are pressed.

1 Received Signal Strength Indicator (RSSI). Constantly shows cellular signal level.

2 Digital Service Indicator. **D** is displayed when digital service is used.

3 System Roam Indicators. **(A)** and **(B)** Indicates which system you are operating on.

4 Service Indicators. **(S)** (service) and **(V)** (no service) alert you of availability of service.

5 Ringer Alert. **(A)** alerts you if ring volume or wake-up tone is muted.

6 Battery Meter. **(B)** Indicates battery charge level.

7 Short Message Indicator and Counter. Alerts you of short messages stored or received. **(S)** - solid indicates stored "Read" messages exist in message log. Counter is only active when message log is active. Flashing **(S)** - indicates new messages have been received. (Counter will display number of new and unread messages).

8 Voice Mail Message Indicator and Counter. Alerts you of voice mail messages waiting to be retrieved. Flashing **(V)** indicates when new messages are waiting. Counter will display number of new or unread messages.

9 Menu Mode and Number. Reminds you that Menu feature is being accessed. **(MENU)** and feature number are displayed. You may quickly access that particular menu feature by pressing feature number + **Menu**. **(MENU)** will flash when accessing a Security Menu feature.

OKI SERVICE STATION

For an authorized OKI Service Station near you, please contact:

OKI Telecom, Inc.
437 Old Peachtree Road
Suwanee, GA 30024
(770) 995-9800
1-800-554-3112

Product Specifications:

RF Channels: 832, 800 MHz

Vocoder: 8/13 Kbps

Operating Temperature Range:

Dimensions:

Battery Voltage: +3.8 VDC ±0.4V

-30°C to 60°C (-22°F to 140°F)

Main Unit with:

600mAh Battery (Slim): 15.0cm x 5.5cm x 2.0cm, 190cc
5.9 in. x 2.2 in. x 0.8 in., 10.4 cu. in.

2400mAh Battery (Ext.): 15.0cm x 5.5cm x 3.0cm, 220cc
5.9 in. x 2.2 in. x 1.2 in., 15.6 cu. in.

Weight:

Compatible Technology Platforms:

Complies with EIA standards for Class II units

Slim Battery: 7.7 ozs. Extended Battery: 10.2 ozs.

*AMPS/800

*CDMA/800

NOTICE:

Although every effort has been made to eliminate errors, OKI Telecom, Inc. disclaims liability for any difficulties arising from the interpretation of information contained in this document. The information is subject to change without notice. Products may vary from those pictured. OKI Telecom, Inc. maintains proprietary rights to certain hardware and software features of this product.

© 1997 OKI Telecom, Inc.

® OKI is a registered trademark of OKI Electric Industry Company, Limited.

S	
Storing Names	21
Pauses	20
Phone Numbers	19
Subscriber Services	24-32
System I.D. Number	14
T	
Timers	15-16
Touch Tone Dialing	14
U	
Unlock Code	1, 48
Using Your Phone	3
V	
Voice Mail Notification	2, 26-27
Voice Mail Programming	20
Voice Privacy	46
Volume	11
Ring	11
Earpiece	11
Keystone	12
W	
Wake-Up Tone Mute	12
Y	
Your Phone	5-8

Your Oki CD800 features have been arranged in various menus to allow easy access to the features most frequently used. The chart below lists the various Menu Options and information to access them.

MENU

Select the appropriate Menu to access the desired feature. The Menu Title will appear on the top line of the phone's display. To scroll through the options contained in that Menu, press the **Menu** key. The active feature line will blink. A **▶** (Pointer) prompt indicates additional feature options are available. Press the **(S2)** key to move to the next display. The feature name will be displayed in capital letters at the top of the display.

Press **Menu** or volume **▲** or **▼** to scroll through feature options. When the Pointer **▶** is displayed next to a desired feature option, press **(S2)** to select. A check mark **✓** next to a feature option indicates that this is the currently stored or default setting for that particular feature. Press and hold **(S2)** to store desired setting. Press **(Clr)** to return to main menu list. Press **(Clr)** again to return to power on message.

MENU TITLE				
GENERAL*	SECURE	IN-CALL	INFO	LISTS
Press Menu	Enter Unlock Code + Press Menu	Must be in a call. Press Menu	Press (S2)	Press (S1) + (S1)
Auto Answer 0,0 + 1,0 + Menu	Lock Phone	Mute	Timers	Phone Book
Lighting 0,0 + 2,0 + Menu	Credit Card	Go Analog	Own Phone #	Called By
Ringing Set 0,0 + 3,0 + Menu	On Message	Scratchpad	System Used	Last Dialed
Clock/Alarm 0,0 + 4,0 + Menu	Restriction	—	Lists Menu	Scratchpad
Alerts Set 0,0 + 5,0 + Menu	—	—	Warranty	—
Privacy Set 0,0 + 6,0 + Menu	—	—	Software #	—
Call Forward 0,0 + 7,0 + Menu	—	—	ESN (Dec.)	—
—	—	—	Emergency #	—

* Features contained in the GENERAL MENU may be accessed by simply pressing the two-digit feature number plus **Menu**.

NOTE:

Menu items listed above in the LISTS and INFO may not appear if there are no stored numbers or scratchpad entries.

M	Message Menu	27
	Message List	32
	Message, Broadcast	32
	Minute Alert	42
	Mute Ringing & Keytone Volume	13
O	One-Step Dialing	23
	Own Phone Number	13
P	Pacemaker	57
	Pauses, Storing	20
	Phone Book	23
	Phone Book Changes	23
	Placing/Ending Calls	10
	Power On/Off	9
	Programming	30
	New Unlock Code	49
	Credit Card Information	50
	Power On Message	52
R	Ring Type	38
	Ring Volume and Tone	12, 36
	Ringer Alert	2
	Roam Saver	3
S	Safety	55-59
	Security Menu	47, 54
	Secret Memory	22
	Selecting Phone Number from Phone Book	23
	Short Message Service	26-30
	Receiving Short Messages	26-28
	Retrieve & Review Stored Messages ...	29
	Delete & Lock Stored Messages	30
	Delete Message	30
	Lock/Unlock Message	31
	Review Message Memory (used)	31
	Setting Up Message Preferences	32
	Short Message Notification	2, 26-27

Children	57
Credit Card Calling	17, 50
Credit Card Number, Programming	50
D	
Dialing	
From Phone Book	23
One-Step Dialing	23
Digital Service Indicator	2
Display	2, 9
Driving	56

E	
Efficient Phone Operation	56
Electronic Devices	56
Emergency Number Dialing	2, 19
Errors	12
Escalating Ringing	37
Exposure/Radio Frequency	55
Explosive Atmospheres	58
G	
General Menu	4, 33-46
Accessing Menu Features	33

H	
Hook-Flash Signal	14
I	
Introduction	1
INFO Menu	3, 10
K	
Keypad Lock	13
L	
Last Number Dialed	10
Lighting	35
LISTS Menu	4
Lock/Unlock	48
Long Number Review	15

M	
Malfunction Signal	14
Memory, Changing Locations	22
Memory, Secret	22
Memory Scroll	22
Memory, The	19-23
Menu, Change	21
Menu Programming	4, 31
Message Memory (Used)	26, 29, 44

ANTENNA

For best reception, fully extend the antenna until it locks in place before you use the phone. (Pull the top portion of the antenna straight up.)

BATTERY CARE/BATTERY CYCLING

NEW BATTERY:

- Completely cycle the battery 2-3 times. To cycle, completely charge the battery, then leave the phone on until battery is completely used. **Important: Repeat the "new battery" cycle every few months to maintain the performance level of your battery.**

BATTERY TALK/STANDBY/CHARGING TIMES

The table below reflects average talk, standby and charge times using various OKI Phones batteries, rapid charger, vehicle power adapter or rapid AC charger. Times shown are actual average times in an average cellular environment.

Battery Type	P/N	Talk Time (Analog)	Stand by (Analog)	Talk Time (CDMA)	Stand by (CDMA)	Rapid Desk Chgr. Kit	Vehicle Power Adapter	Rapid AC Adapter
600mAH Slim NiMH	6A-34010	24 min.	5.2 hrs.	72 min.	12 hrs.	1 hr.	1 hr.	1 hr.
2400mAH Ext. NiMH	6A-31104	108 min.	21 hrs.	300 min.	49 hrs.	120 min.	180 min.	180 min.

- Use:**
- **Recharge Battery** message and alert tone occur approximately ten (10) minutes before recharging is necessary.
 - Turn off the phone when you are not using it (to conserve battery power).
 - Used properly, your battery should provide at least 500 charge/discharge cycles.
 - Use only genuine OKI batteries and charging adapters.
 - Do not undercharge or overcharge.
 - Repeat the "new battery" cycle every few months to maintain the performance level of your battery.
 - Do not operate or charge your battery in extreme temperatures.
 - The unit may overheat or ignite if the battery's positive and negative contacts are connected by a metal object. (i.e. keys in a pocket, etc.)

STORAGE:

- Disconnect battery from phone.

RECOMMENDED TEMPERATURE RANGES

Long Term Storage	-7°F to 95°F (-22°C to 35°C)
Short Term Storage	-22°F to 122°F (-30°C to 50°C)
Operating Temperature	-4°F to 140°F (-20°C to 60°C)
Charging Temperature	32°F to 104°F (0°C to 40°C)

A				Meter	7
Aircraft	57			Storage	6
Alarm	39			Talk/Standby/Charging Times	5
Setting Alarm Time	39			Use	6
Setting Alarm On/Off	39			Blasting Areas	58
Alerts	42				
Wake-Up Alert	42				
Minute	43			C	
Service Area	44			Calendar, Setting	42
Messaging Alert	44			Call Forwarding	24
Ringler Alert	2			Call-In-Absence Indicator	11
Analog Call Set-Up	18			Call Restriction	53
Answering Calls	10			Call Timers	15
Antenna Information	5, 56			Cumulative	16
Area Code Prefix Tag	10			Individual	16
Automatic Answer	34			Resettable	17
Automatic Lock	49			Calling Number Identification	25
Automatic Redial	11			Calling Number Display	25
				Receiving Calling Number	25
				Retrieving Calling Number	26
B				CDMA	1
Backlighting	35			Change Menu	21
Basic Operation	9-18			Charger (AC Adapter)	8
Battery				Clock	40
Care/Cycling	5			Setting Phone's Clock	40
Charging	5, 8			System Clock	41
Disposal	7, Back Cover				
Inserting/Removing	7				

BLASTING AREAS

To avoid interfering with blasting operations, turn your unit OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Construction crews often use remote control RF devices to set off explosives.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmospheres are often, but not always, clearly marked. They include: fueling areas such as gas stations, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your phone or accessories.

Vehicles powered by liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publications Sales Division.

WARNING

Failure to comply with any safety instructions listed in this manual may result in fire, electric shock, bodily injury or even death.

DISPOSAL:


- The battery may explode if disposed of in fire.
- Do not place the battery in your regular trash.
- The battery must be properly disposed of. Refer to the back cover of this manual for details about OKI's battery disposal program.

INSERTING/REMOVING BATTERY

Insert a charged battery. Charge the battery for approximately 60 min. (depending on battery type) before using the phone for the first time. Refer to Battery Talk/Standby/Charging Times on page 5.

To insert, place the bottom of the battery against the bottom edge of the phone. Then, push the top of the battery into place until you hear a "click", indicating that the battery is locked into place.

To remove the battery, unlock it by pushing down on the battery release latch. (The battery release latch is located at the top of the battery.)

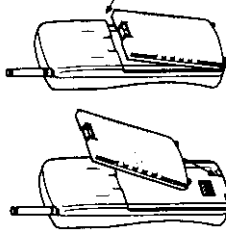

BATTERY METER

The phone's display shows the battery charge level. Three (3) bars indicate maximum charge.


When the charge is low, a warning tone sounds. The display shows **Recharge Battery**. Charge battery or replace with a fully charged spare.

When no bars are shown, the battery symbol  will flash to indicate recharging is necessary. This will also occur when dialing digits or when accessing the phone features.

BATTERY CHARGING

With the battery attached to the phone, insert one end of the charger into the bottom of your phone. Plug the other end of the charger into a standard wall outlet.

When charging is complete, unplug the charger from the outlet, then unplug the charger from the phone.

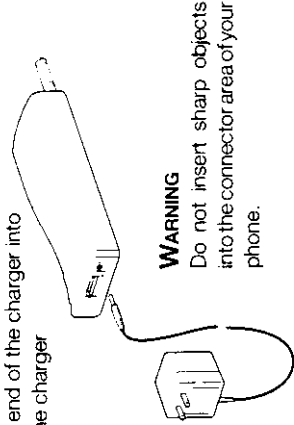

Turn your phone OFF in health care facilities when any regulations posted in the areas instruct you to do so. Always request permission before using your phone near medical equipment. RF energy may affect some electronic systems in motor vehicles. Check with your vehicle manufacturer to verify that your phone will not affect your vehicle's electronic systems.

USE WITH PACEMAKERS

- Phone should be held at least six (6) inches away from pacemaker.
- Phone should not be placed over pacemaker when it is in the ON position.
- Phone should be used at the ear opposite of the pacemaker.

AIRCRAFT

Turn your phone OFF before boarding any aircraft.

- Use it on the ground only with crew permission.
- Do not use the phone while you are in the air.

To prevent possible interference with aircraft systems, Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent interference with cellular systems, FCC regulations prohibit cellular phone use while the plane is in the air.

CHILDREN

Do not allow children to play with your phone. It is not a toy. Children could hurt themselves or others (by poking an eye with the antenna, for example). Children also could damage the phone or make calls that increase your telephone bills.

EFFICIENT PHONE OPERATION

To operate your phone at the lowest power level and have satisfactory call quality:

- Fully extend your phone's antenna.
- Hold the phone as you would any other telephone. While speaking into the mouthpiece, position the antenna up and over your shoulder.
- Do not hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

ANTENNA CARE AND REPLACEMENT

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn may result. Take your phone to an authorized OKI Service Station (OSS) for repair or replacement.

Use only the supplied or approved antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

DRIVING

Check the laws and regulations regarding cellular phone use in the areas where you drive. Always obey them. Also, when using your phone while driving:

- give full attention to driving,
- use handsfree operation, if available, and
- pull off the road and park before making or answering calls.

ELECTRONIC DEVICES

Most modern electronic equipment -- for example, equipment in hospitals and cars -- is shielded from RF energy. However, RF energy from cellular telephones may affect some electronic equipment.

POWER ON

Press **Power** for 1/2 second.

A short wake-up tone beeps; **Power On** and **Scanning For Service** appear briefly on the display. **Entering Service Area** then appears.

- You can personalize the **OKI CDMA** line of the display (Refer to Security Menu section for programming instructions).
- If the display shows **LOCKED**, enter your lock/unlock code before using the phone.

Idle Mode Display:
(example)



POWER OFF

Press **Power**. The display will show: **Powering Down**

PLACING/ENDING CALLS

The phone should be on, unlocked and in a service area. **Enter a phone number (up to 32 digits).** If you make an error, press **(Clr)** to erase unwanted digits.

THERE IS NO DIAL TONE IN CELLULAR. You have the following options:

Press **(Send)** to place the call. **Connecting will be displayed.**

Press **(Clr)** to edit number or return to idle mode display.

ADDING AREA CODE TO SPEED DIAL LOCATION

You can add an area code or other number to a number previously stored in your phone's memory by simply entering the area code + **(#)**, then the speed dial location number + **(ST)**, (i.e. 770 + **(#)** + **(4#)** + **(ST)**.)

Once the number is displayed, press **(Send)** to dial.

ANSWERING CALLS

The phone should be on, unlocked, and in a service area. When the phone rings, the display shows:

◀RECEIVING▶
123-4567

(Last 11 digits of calling party)

▶PRESS SEND▶

Press any key (except volume, **(End)** or **(Mute)**) after one complete ring to answer the call.

IMPORTANT!**READ THIS INFORMATION BEFORE USING YOUR HANDHELD PORTABLE CELLULAR TELEPHONE**

First introduced in 1984, the handheld portable cellular telephone is one of the most exciting and innovative electronic products ever developed. With it you can stay in contact with your office, your home, emergency services, and others.

For the safe and efficient operation of your phone, please observe these simple guidelines.

Your cellular telephone is a radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 894 MHz and employs commonly used frequency modulation (FM) techniques. When you use your phone, the cellular system handling your call controls the power level at which your phone transmits. The power level can range from 0.006 of a watt to 0.6 of a watt.

EXPOSURE TO RADIO FREQUENCY ENERGY

In 1991, the Institute of Electrical and Electronics Engineers (IEEE) and in 1992 the American National Standards Institute (ANSI) updated the 1982 ANSI Standard for safety levels with respect to human exposure to RF energy. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry developed this updated Standard. After reviewing the available body of research in March, 1993, the Federal Communications Commission (FCC) proposed the adoption of this updated Standard.

The design of your phone complies with this updated Standard. If you want to limit RF exposure even further, you may choose to control the duration of your calls and operate your phone in the most power efficient manner.

The device complies with Part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

- 11 DIGITS Restriction on dialing more than eleven (11) digits. Dialing from memory is not affected by this setting.
- 10D,800,CC Only ten digits or less, toll free (1+ 800 or 1+888) + seven-digit phone number), and credit card calls (0 + ten-digit phone number) permitted. Dialing from memory is not affected by this setting.
- Emrgncy Only All manually dialed calls restricted except for emergency dialing. Dialing from memory is not affected by this setting.
- FROM MEMORY ▶ Press **Menu** to view options.
 - Allow All No Restriction
 - Call Only Programming numbers is restricted. All memory locations accessible for speed dialing.
 - 00-09 Only Programming numbers is restricted. Access to memory locations 00-09 only for speed dialing.
 - Restricted All storage and access restricted.
- Level 3:
 - OPERATOR 0 ▶ Press **(3)** to select and **Menu** to view options. Options include: **ALLOWED** or **RESTRICTED. (NO 0 DIALING).**
- Level 4:
 - VIEW OWN # ▶ Press **(3)** to select **Menu** to view options. Options include: **ALLOWED** or **RESTRICTED. (Cannot display own phone number).**

- AUTOMATIC REDIAL**
Your phone automatically redials when the cellular system does not accept your call. **DO NOT** press **(End)**; the call is automatically terminated and is then redialed up to five (5) times every ten (10) seconds. If you do not want automatic redial, press **(End)** or **(Cfr)** at any time.
 - CALL-IN-ABSENCE INDICATOR**
The phone counts unanswered calls (until phone is turned off or the battery loses its charge). The indicator counts up to 99 calls (even when the phone is locked). For example, the display may show: **Missed Calls: 02**.
(Refer to General Menu/Auto Answer Section on page 33).
 - VOLUME**
 - RING VOLUME:** May be adjusted by pressing volume **▲** or **▼** while the phone is ringing or may be set to a desired level in the "RINGING" menu option. See Ring Volume Control in the section titled "General Menu".
 - EARPIECE VOLUME:** Press volume **▲** or **▼** during conversation, display shows:
EARPIECE VOLUME
L++++ H
 - KEY TONE VOLUME:** Press volume **▲** or **▼** when the phone is not in use, display shows:
KEYTONE VOLUME
L++++ H
- Key tone volume also controls the error and wake-up tone volumes.

MUTE RINGING & KEY TONE VOLUMES
Set each to the lowest volume level (MUTED).

When ringing is muted (silent incoming call), the symbol is active to indicate ringing is off. When the keypad tone is muted, the wake-up tone is also muted (even if **Wake-Up Tone: ON** is set).

ERRORS

Error tone volume can be adjusted by the Key Tone Volume setting. (See Volume, p. 11).

DIALING ERROR:

Press **Clr**.No SERVICE INDICATOR

When the no service indicator is constantly lighted, you are out of the cellular coverage area. Change your location until the indicator disappears.

HIGH-LOW TONE

An alternating tone indicates you have dialed incorrectly or you are calling while in a no service area.

Press **(End)** and try your call again.

FAST-BUSY SIGNAL

A fast-busy signal indicates the system is busy or you are calling in a marginal service area.

Press **End** and try your call again.

If you always hear a fast busy signal, contact your dealer to confirm proper programming of your phone and that your cellular service has been activated.

RESTRICTING CALLS

You can restrict various types of incoming or outgoing calls.

From the idle mode, enter your **unlock code** + **Menu** to access Security Menu. Press **Menu** to scroll to **Restrict** ▲.

Press **52** to select. Display shows:

RESTRICT

▲ Incoming

**Outgoing
Operator 0**

Options are either **ALLOWED** or **RESTRICTED**. Press **Menu** to toggle between selections. Press **Save** to save selection.

Follow these steps (**Menu** to select and **Send** to save) to set other restriction options.

Press **Clr** twice to return to idle mode display.

RESTRICTION OPTIONS INCLUDE:

Level 1:

INCOMING ALLOWED: No Restriction

INCOMING RESTRICTED: Restriction (no incoming calls allowed)

Level 2:

OUTGOING

THE JOURNAL OF THE AMERICAN MEDICAL ASSOCIATION

Press **Menu** to view options

Allow All

to save or, if your card does not require an access number, just press **Send**. Enter your credit card number at the flashing cursor (up to 16 digits). Press **Send** to save. Press **Clr** once to return to main menu selections. Press **Clr** again to return to idle mode message.

@ AT&T, Sprint and MCI are registered trademarks

POWER ON MESSAGE DISPLAY PROGRAMMING

To personalize your phone's power on message (idle mode) display, access the Security Menu.

Enter your unlock code + **Menu**. Press **Menu** to scroll to **On Message** ►. Press **32** to select this feature.

Display shows: **ON MESSAGE**
OKI CDMA

Entering Message:

Cursor blinks to prompt alpha entry. Press a key to enter the first letter shown on the key, press the key a second time to display the second letter shown, etc. Pressing the key four times displays the key's numeric value. The following keys are exceptions: **(*)**, **(#)**, **(0)**.

▲ / ▼ keys control upper/lower case letters and **(51)**/**(52)** keys control the cursor movement. **(Clr)** erases digits.

Your message can contain up to 10 characters.

Press **Send** to save message. Press **(51)** to return to **Secure Menu**. Press **(Clr)** again to return to idle mode display.

MALFUNCTION SIGNAL

When an **Error** message with a number appears, your telephone requires service or repair. Contact an authorized OKI Service Station (OSS).

OWN PHONE NUMBER

Press **(32)**. (INFO) (From the idle mode display). The display shows: **INFO MENU**
Press **Menu** or ▼ to select **OWN PHONE #** ►
Press **(32)** to view.

The phone number currently being used by your phone will be displayed.

Press **(Clr)** twice to return to idle mode display.

NOTE:

The OWN PHONE # display will not be displayed if restricted. (See Call Restrictions in the Security Menu Section, page 53).

KEYPAD LOCK

Locks keypad to prevent accidental or unwanted key presses.

To lock: Press and hold the **(End)** key for two (2) seconds.

Display shows: **KEYS LOCK!**

To unlock: Press **Menu** + **(Clr)** to return to idle mode display.

SYSTEM IDENTIFICATION (SID) NUMBER

Press **(32)** (INFO) from idle mode display. The display shows:
Press Menu or V to select SYSTEM USED ▶ **feature.**
Press (32) to view information.

The display shows: **SYSTEM USED** ▶

TIMERS ▶
own phone #
system used
lists

SYSTEM
OKI CDMA
SID ■■■■■
NID ■■■■■

The five (5) digit SID or NID number of the cellular service currently being accessed (or the last system used) will be displayed. Press **(Clr)** twice to return to idle mode display.

HOOK-FLASH SIGNAL

Your cellular provider may offer services such as call waiting, conference calling, etc.... These services often require a hook-flash signal. Press **(Send)** during **conversation**.

TOUCH TONE® DIALING

When you need to access answering machines, banking services, etc..., Touch Tone signals can be sent during conversation by pressing the desired numeric key(s). The tones are sent automatically for as long as you press the numeric key(s) on your keypad.

® Touch Tone is a registered trademark of AT&T.

CARRIER PROGRAMMING INSTRUCTIONS**AT&T**

To program your AT&T credit card number, press **(Send)** when CREDIT CARRIER **AT&T** appears. Press **(32)** to select AT&T option then press **Menu** to select between the 0 + Dial or the 10-ATT-0 dialing method. Press **(Send)** to save selection. Display shows: CREDIT carrier CARD NUMBER. Press **(32)** and enter your credit card number at the flashing cursor. Press **(Send)** to save.

Press **(Clr)** once to return to main menu selections. Press **(Clr)** again to return to idle mode message.

MCI

To program your MCI credit card number, press **(32)** to select the **MCI** option. Press **(Send)** to save selection. Display shows: ACCESS No. 1-800-674-7000 (default setting). You may change the number by entering new digits OR leave the number as is by pressing **(Send)** to save. Enter your credit card number at the flashing cursor (up to 16 digits). Press **(Send)** to store. Press **(Clr)** once to return to main menu selections. Press **(Clr)** again to return to idle mode message.

Sprint

To program your Sprint credit card number, press **(32)** to select the **Sprint** option. Press **(Send)** to save selection. Display shows: ACCESS No. 1-800-877-8000 (default setting). You may change the number by entering new digits OR leave the number as is by pressing **(Send)** to save. Enter your credit card number at the flashing cursor (up to 16 digits). Press **(Send)** to store. Press **(Clr)** once to return to main menu selections. Press **(Clr)** again to return to idle mode message.

OTHER

To program any other credit card number, press **(32)** to select the **OTHER** option. Press **(Send)** to save selection. Display shows: ACCESS No. Enter your card's access number and press **(Send)**

PROGRAMMING AUTOMATIC CREDIT CARD CALLING NUMBER

Select Carrier from the idle mode display. Enter unlock code (1234 default) + **Menu** to access Security Menu.

Display shows:

LOCK PHONE ▶
Credit Card
Phone Select
System

Press **Menu** to select Credit Card ▶. Press **(52)** to view options.

Press **Menu** to scroll through options.

Press **(52)** to select **CARRIER** option: Display shows:

CARRIER ▶
AT&T
MCI
Sprint
Other

Press **Menu** to view additional carrier options:
(Refer to pg. 50 for Carrier Option Programming Instructions).

ENTER CREDIT CARD NUMBER

Press **(52)** to select **CARD NUMBER** option: Display shows:
Press **(52)** to select.

Press **Menu** to select Card Number.

Enter Credit Card Number at flashing cursor.

Press **(Send)** to save the card number.

Press **(Clr)** twice to return to idle mode.

CREDIT CARD
Carrier
Access Number
Card Number

Basic Operation

15

LONG NUMBER REVIEW

The phone's display can show up to 32 digits of an entered or stored number. The RSSI and Battery Meters will temporarily be replaced when entering digits and return within five (5) seconds of last digit entry. For numbers longer than 26 digits the "overflow" indicator (<) will appear on the top display line when the RSSI and Battery Meters are active. **To review the entire number, press and hold **Msg** key.**

CALL TIMERS

Your phone has the following call timer features:

Individual Call Timer (Length of last incoming or outgoing call).

Cumulative Call Timers (Total number of minutes used for all programmed phone numbers and "Total Phone" number of minutes used for the phone number currently used).

Resettable Call Timer (Resettable number of minutes used for currently used phone number).

You may access these timers from the **INFO** Menu during idle mode or call in process mode by following the steps below: Press **(Clr)** at any time to exit feature.

Idle Mode

Display shows:
OKi CDMA
MAY.15 '97
12:00 PM
RECALL INFO

Call In Process Mode

00min00sec
<0000-000
000-0000
INFO MUTE

Press **(32)** (Idle Mode) or **(31)** (Call In Process Mode).
Display Shows:

INFO MENU Press **(32)** then **(M)**
Timers or **▼** to scroll
Own Phone # through selections
Lists Menu

TIMERS
Last Call ►
Total
Resettable

Individual Call Timer display:

Last Call ► Press **(32)** to view
Total
Resettable

TIMERS
LAST CALL
OUTGOING
00Min.00Sec.
(If last call was Outgoing)

LAST CALL
INCOMING or
00Min.00Sec.
(If last call was Incoming)

Press **Menu** or **▼** for next menu selection.

Cumulative (Total) Call Timer display:

TIMERS
Last Call
Total ► Press **(32)** to view
Resettable

TOTAL

0000011 Min.

AUTOMATIC LOCK

From the idle mode display, Enter unlock code (1234 default) + **Menu** to access Security Menu.

Press **(32)** to select **Lock Phone**. Display shows:
LOCK PHONE
Now
At Power Off
Lock Code

Press **Menu** to select **At Power Off** ►. Press **(32)** to select. Press **Menu** to to toggle between On/Off option. Press **(Send)** to save selection.

Press **(Clr)** twice to return to idle mode. Phone will automatically lock each time you turn off your phone's power. You must enter your unlock code before you can place calls.

PROGRAM NEW UNLOCK CODE

From the idle mode display, Enter unlock code (1234 default) + **Menu** to access Security Menu.

Press **(32)** to select **Lock Phone**. Display shows:
LOCK PHONE
Now
At Power Off
Lock Code

Press **Menu** twice to select **Lock Code** ►. Press **(32)** to select. Enter new four (4) digit lock code at flashing cursor. Press **(Send)** to save selection. Press **(Clr)** twice to return to idle mode.

Reminder! Be sure to write down your new lock code. You will need your lock code to unlock your phone and to access your Security Menu features.

LOCK PHONE

From the idle mode display, Enter unlock code (1234 default) + **Menu** to access Security Menu.

Display shows:

SECURE MENU
 Lock Phone ►
 Credit Card
 On Message

Press **(32)** to select **LOCK PHONE** ►

Display shows:

LOCK PHONE
 Now ← Automatically locks phone
 At Power Off ← Phone locks when power is turned off
 Lock Code ← Enter new unlock code

Press **Menu** to scroll through options.

Press **(32)** to select. Press **(Send)** to save selection. Press and hold **(Clr)** to return to idle mode display.

To UNLOCK PHONE

You must enter your unlock code before you can use your phone. The unlock code will not be displayed.

NOTE:

When your phone is locked, the phone will still receive calls and provide indication of when Short Messages and/or Voice Mail is being received.

Press **Menu** or **▼** for next menu selection.

Resettable Call Timer display:

TIMERS	RESETTABLE	REVIEW
Last Call	Press (32) Review	
Total	Reset	
Resettable ►	Press (32) to view	
		0000011 Min.

Press **Menu** or **▼** to toggle between select Reset.

RESETTABLE
 Review ►
 Reset

Press **(32)** to select option
 Press **Menu** to select reset
RESET
 Active ☒
 Clear

Timer is reset to 0000000 Min.
 for currently active phone number

Press **(Send)** to save selection. Press **(Clr)** twice to return to idle mode.

CREDIT CARD CALLING

Credit Card Calling enables you to automatically place a credit card call on a call-by-call basis. After your credit card number has been programmed (See Programming Credit Card Calling Number), you can easily place a credit card call by following the simple steps below: Press **(#) + (#) + (#)**.

Display shows: **Credit Card Call Active**

Enter telephone number to be dialed or press memory location if telephone number is stored in your phone's memory. Press **(Send)** to initiate the call.

ANALOG CALL SET-UP

You may elect to send a call using the analog system. You may do so by using the following methods to request this service.

Idle Mode (Not In Conversation)

Press **(*)** + **Menu** to activate the next call on analog operation.

The display will show:

Analog!
AUG.29 '97
12:00 PM
RECALL INFO

Place call. Display will show: **Connecting**. After a call on analog is completed, the next call will be based on normal system operation. (Note: If analog service is not available, the display will show: **Analog Sys. Unavailable**).

Go Analog (During Conversation)

If analog service is desired for sending data during a digital call in process, you may request analog service by pressing **Menu** until you reach the **Go Analog** feature (feature will flash). Press **(*)** to select. **Scanning For Service** will appear on the display. The call timer display will be replaced temporarily. To cancel request for analog service (prior to gaining analog service), simply press the **(Ct)** key and the call timer will reappear.

If analog service is available, a short confirmation tone (3 beeps) will be heard and the **"D"** (digital) icon will no longer be lit.

If analog service is not available, a prompt tone is heard (1 beep) and **"Analog Sys. Unavailable"** will be displayed momentarily.

ACCESSING SECURITY MENU FEATURES

Security Menu features can only be accessed from "Idle Mode". Enter your "Unlock Code" and then press **Menu** (Menu) key to access security menu features. Press **(Ct)** key at any point in the Main Menu List to exit **Menu** mode and return to **idle mode** display.

Menu will flash ON/OFF when accessing any Security Menu feature.

SECURITY MENU FEATURES

Your security menu features are listed in the following order.

Lock Phone	Lock options (Lock Phone, Automatic Lock and Programmable Unlock Code)
Credit	Program credit card information for automatic credit card calling.
On Message	Personalize power on message for idle mode display.
Restrict	Set Call Restrictions.

VOICE PRIVACY

The voice privacy feature, when available, will provide additional security for your digital phone calls. From the idle mode display, press **Menu** six (6) times to access **Privacy Set** ▶.

Press **Menu** until display shows:

Press **(S2)** to select option. Display shows:

PRIVACY SET

On

Off



Press **Menu** to select On or Off setting.

Press **(Snd)** to save selection. Press **(Cfr)** twice to return to the idle mode display.

(This service must be subscribed to through your service provider if available in your area).

CALL FORWARDING

The call forwarding feature, if subscribed to, will allow you to forward your cellular calls to a specified phone number.

Refer to Subscriber Services page 24.

Your phone stores up to 100 numbers and names in memory using memory location numbers (0-99). Each location stores up to 32 digits and 10 characters.

EMERGENCY DIALING

Press and hold **(G)** to dial the stored emergency number. The emergency number will be dialed automatically.

If your local emergency access number differs from 911 or 311, you may reprogram your phone with a new number (up to eleven digits). Refer to Info Menu Option.

STORING PHONE NUMBERS

Enter phone number (up to 32 digits). Display shows: 1- 404-555-1212
FIND SAVE

NOTE:

FIND will not be displayed if there are no other phone numbers stored in the phone's memory with the same prefix.

Press **(S2)** (SAVE). Display shows:

1-404-555-1212
CHANGE

Name ▶

Number

Press **Menu** to scroll to through options.

The number will automatically be stored in the first available memory location. The location number will appear in the lower right corner of the display. The location number may be changed. (See changing Memory Location Number on page 22).

STORING PAUSES

Programmed pauses may be needed for credit card calls, voice mail, etc.(32 digits maximum)

To insert a pause when programming a number, press **(End)** at the point where the pause is required.

The display shows a "P" for each programmed pause. The first pause is a manual pause (you must press **(Send)** to transmit the remaining digits). Subsequent pauses are fixed at three (3) seconds each (remaining digits are automatically transmitted). If longer than three (3) seconds is required, insert additional pauses by pressing **(End)** for each one. Pauses cannot be the first entry of a sequence.

PROGRAMMING EXAMPLE/VOICE MAIL:

PROGRAMMING EXAMPLE/VOICE MAIL:

(8)(2)(2)(2)(2)(5)(8)(8)(phone number) + (End)(first pause) + (1)(2)(3)(4)(password) + (End)(three second pause/fixed time) + (2)(0)(voice mail command) + (5) + memory location + (Cir).

PLACING THE CALL:

Select phone number from phone's memory (LISTS/PHONE LIST). Press **(Send)** when DIAL option is displayed. The first pause temporarily suspends the remaining information.

Press **(Send)** again to transmit the remaining information.

Press **(End)** to terminate the call.

Press **Menu** until **Messaging** ► is displayed.

Press **(S2)** to select. Display shows:

MESSAGING
Idle Active ►
Call Active
Alert Type

Press **Menu** to scroll through options which include:

Idle Active ► ON or OFF : Idle mode message alert tone.
Call Active ► ON or OFF : Conversation mode message alert tone.
Alert Type ► Normal : Select from three (3) different alert tones.
 (Note: Press **Msg** at these option settings to hear tone.)
 Option 1
 Option 2
Memory Full ► : At 90% (Alert tone occurs @ 90% full)
 : At 75% (Alert tone occurs @ 75% full)
 : (Memory alert tone off)

Press **(S2)** to select one of the above options. Press **Menu** to select option setting.
 Press **(Send)** to save the desired setting.

Press and hold **(Cir)** to return to the idle mode display.

Press **(S2)** to set options. The display shows: **MINUTE BEEP**
(If ON is selected) ☒
(Press **Menu** to select between off/on minute)
Press **(S2)** to set minutes. Enter desired number of minutes (1-99) at flashing cursor.
Press **(Send)** to save setting. Press **(Clr)** once to return to General Menu. Press **(Clr)** again to return to idle mode display.

SERVICE AREA ALERT
When Service Area Alert is set, you will hear an alert tone as you are entering or leaving a service area.
From the idle mode display, press **Menu** five (5) times to access **Alerts Set** ▶

Press **Menu** to select **Service Area** ▶
Press **(S2)**. The display shows: (If ON is selected) **Service Area** ☒
On
Press **Menu** to select between off/on minutes. **Off**

Press **(Send)** to save setting. Press **(Clr)** once to return to General Menu. Press **(Clr)** again to return to idle mode display.

MESSAGING ALERT
Messaging alert allows setting for alert tones for various message functions including receiving a message in Idle Mode, receiving a message during conversation mode, alert tone type selection, and when the message memory is full.

From Idle Mode, press **Menu** five (5) times to access **Alerts Set** ▶.

STORING NAMES
Enter phone number (up to 32 digits), press **(S2)** (SAVE). Press **(S2)** to select **Name** option. Enter Name (See Programming example). Press and hold **(S2)** to save. Press **(S1)** to return to Change menu.
PROGRAMMING EXAMPLE/STORING "MOM":
(6→) (M) + ▲ (to move to next space) + (6→) (6→) (O) + ▲ (to move to next space) + (6→) (M).
Press **(Clr)** to edit entries prior to saving. The volume **▼** key may be used to select lower case letters and volume **▲** key to select upper case letters. The **(S1)** and **(S2)** keys may be used to move forward or backwards to a specific character's position. Press **(Send)** to store.
Press **(S1)** to return to Secure Menu.
Press **(Clr)** to return to idle mode display.

CHANGE MENU
The CHANGE Menu appears after storing a new phone number or when selecting a memory location from the Phone Book. The CHANGE options include:

Name	< Add a name to an existing number
Number	< Edits the number
Location	< Assign number to different memory location
Hide	< Secret Memory Storage. (See Page 22)

CHANGING MEMORY LOCATION

While in the CHANGE Menu, press **Menu** until **Location** option flashes. Press **(32)** to select. Display will show current Phone Book memory location number, phone number and name (if name has been entered). Enter new memory location (00-99). Press **(31)** twice to return to CHANGE Menu. Press **(Clr)** to return to idle mode display.

SECRET MEMORY

You can "Hide" numbers from being displayed by selecting the HIDE option from the "LISTS" options when storing a phone number. (See Storing Phone Numbers page 19). When a number is hidden and then recalled, it will be displayed by all NINNs. You may "Unhide" the number by choosing the UNHIDE option and entering the phone's unlock code.

From the idle mode display, press **Menu** (5) times to access **Alerts Set** ▶

Press **(32)** to select. Display shows:

ALERTS SET ▶
Wake Up Tone
Minute Beep
Service Area

Press **(32)** to select. Display shows:

WAKE UP TONE ☒
On
Off

Press **Menu** to toggle between ON/OFF.

Press **(32)** to save desired setting. Press **(Clr)** to return to General Menu. Press **(Clr)** again to return to idle mode display.

MINUTE ALERT

Minute Alert, when active, provides an audible tone which you will hear 15 seconds prior to the minute setting. You may set the alert tone from one (1) minute to 99 minutes. Five (5) minutes is the default setting, therefore, an alert tone will occur at 4 minutes and 45 seconds after a call has started.

From the idle mode display, press **Menu** (5) times to access **Alerts Set** ▶

Press **Menu** to select **Minute Beep** ▶

The display shows:

ALERTS SET ▶
Wake Up Tone
Minute Beep
Service Area

SETTING YOUR CALENDAR (DATE)

From the idle mode display, press **Menu** four (4) times to access **Clock/Alarm** ▶

Press **(S2)** to select feature.

Press **Menu** until **Date Set** ▶ appears.

Press **(S2)** to select. Display will show:

CLOCK/ALARM
Alarm
Clock
Date Set ▶
DATE SET
08/15/97

Press **(S2)** to select. Display will show:

Enter date at flashing cursor (MM/DD/YY)

Press **(Send)** to save selection.

Press **(Cif)** twice to return to General Menu. Press **(Cif)** again to return to idle mode display.

ALERTS**WAKE UP ALERT**

A Wake-up tone occurs when you first turn your phone's power on. The volume level for this tone is set when setting the Keytone volume (see Volume Control in Basic Operations Section, page 11). If keytone volume is "Muted", the wake-up tone will also be muted regardless of setting **WAKE UP** alert to ON.

SELECTING A PHONE NUMBER FROM PHONE BOOK

Press **(S1)** (RECALL) from idle mode.

Display shows:

LISTS MENU ▶
Phone Book
Last Dialed

Press **(S2)** to view display options. Press **Menu** to scroll through options. (Stored memories may be displayed By Name, By Location or By Number).

Press **(S2)** after selecting option. Press **▲/▼** to view stored numbers. Press **(S2)** to select number. Press **(Send)** to DIAL the number or press **Menu** to scroll through options.

Change ▶
Delete

Press **(S2)** to select option. Press **(Send)** to save setting.

Selecting Change and Delete will prompt additional screen selections. (See Change Menu).

ONE STEP DIALING

To call numbers stored in locations 0-9, press and hold the desired one-digit memory location number for two (2) seconds.

The number is automatically dialed; therefore, you do not need to press **(Send)**. (You will hear dialing tones).

The following features must be subscribed to through your service provider, if offered in your area. Your OKI phone enables you to easily access these features:

- Calling Number Identification
- Short Message Services
- Voice Mail Notification
- Call Forwarding

CALL FORWARDING

You may forward your cellular calls to a specified phone number.

To activate:

Press **(M)** to turn on your phone.

Enter **(2) (3) (2) + Menu**, display shows: **Forward To:**

Enter number. Press **(S)** (YES), display shows: **Call Forward Activated!**

Press **(S)** (NO) or **(C)** to exit feature.

To deactivate:

Enter **(2) (3) (3) + Menu**, display shows: **Deactivate Call Forward**

Press **(S)** (YES), display shows: **Deactivated Call Forward**

Press **(S)** (NO) or **(C)** to exit feature.

The "Auto Prompt" feature allows you to set Call Forwarding which prompts you to enter a call forwarding number when you turn off your phone. The **Forward To:** message will appear and the previously entered call forwarding number will be displayed. You may either press **(S)** (Yes) to activate call forwarding or enter a new call forwarding number. You can **Deactivate** this feature by pressing **(S)** (No) or by pressing the **(C)** key.

SYSTEM CLOCK

You may set your phone to use the digital system clock or the phone's internal clock. If SYSTEM CLOCK is selected, the time will be displayed only while operating on a digital system.

To select this option, follow the steps listed above, but select **Source** from the CLOCK/ALARM menu list. Options include Phone Clock or System Clock. Press **Menu** to select between options. Press **(S)** to save selection. Press **(C)** to return to General Menu.

To Set Hourly Display Format

Press **Menu** four (4) times to access **Clock/Alarm**

Press **(S)** to select.

Press **Menu** until **Format** appears.

Press **(S)** to select option. The display will show:

Press **Menu** to select between options.

Press **(S)** to save selection.

FORMAT
24 Hour
12 Hour ☒

Press **(C)** once to return to General Menu. Press **(C)** again to return to idle mode display.

SETTING YOUR PHONE'S CLOCK

From the idle mode display, press **Menu** four (4) times to access **Clock/Alarm** ▶

Press **(52)** to select feature.

Press **Menu** to select **CLOCK** ▶ feature.

Press **(52)**. The display will show:

Note: "Set am/pm" option will not appear if the "24-hour" clock setting is active.

CLOCK/ALARM

Alarm

Clock ▶

Date Set

CLOCK

Time Set ▶

Set AM/PM

Time Set

Press **(52)** to select **Time Set**. Display shows:

Press **(52)** to set time. Display shows:

Enter desired time at flashing cursor

Press **(52)** to save setting.

Press **(Clr)** return to clock options list.

Press **Menu** to select **Set AM/PM**. Display shows:

Press **(52)** to set am/pm. (for normal clock selection)

Press **Menu** to toggle between am/pm setting.

Press **(Send)** to save selection.

Press **(Clr)** once to return to main menu list. Press **(Clr)** again to return to idle mode display.

CLOCK

Time Set

Set AM/PM ▶

To activate

Auto Prompt:

Press **(PM)** to turn on your phone.

Press **Menu** to enter the **GENERAL MENU**.

Press **Menu** until you reach **Call Forward** option. Press **(52)** to select.

CALL FORWARD options. Press **(52)** to select **Auto Prompt** > option.

Press **Menu** to select between On or Off. When selection blinks, press **(52)** to select.

CALLING NUMBER IDENTIFICATION**CALLING NUMBER DISPLAY**

Calling Number, if supplied, will be checked against numbers previously stored in the phone's memory and will be displayed with alpha tag.

RECEIVING CALLING NUMBER

Display shows:

(Displayed if calling number identification is supplied)

>Receiving!<

123-456-7890

<PRESS SEND>

Press **(Send)** to answer the call. If call is unanswered, display shows: Missed

Calls: 01

RECALL INFO

If Calling Number is not provided, display may show: **Private No.** or **# Not Avail.**

NOTE:

If Calling Number is provided, and unanswered, number will automatically be stored in the "Caller List" memory for review at a later time.

RETRIEVING CALLING NUMBER

Calling numbers are displayed on the "Caller List". You have several options for handling the call. You can send the call by selecting, **Move** the number to the "Phone Book" (to save or delete) or move to the **Time Log** to view when the call was received (date and time).

Example: Press **RECALL (S1)** from idle mode display or scroll through **INFO** menu to select **Lists Menu**.

Display:

LISTS MENU			
Phone List			S.Jones 267-
Called By ▶	Press Msg to select options		
Last Dialed	- or -	Move	
Scratchpad	(Menu or ▲/▼ to scroll through numbers)	Time Log	

SHORT MESSAGE SERVICE/VOICE MAIL NOTIFICATION

When you subscribe to Short Messaging Services or Voice Mail Notification Service, messages will be sent to your phone. Your phone will indicate "NEW" received messages by a flashing  symbol. A steady  symbol indicates old messages are stored in memory. Voice Mail Notification Service will notify you that a voice mail message has been sent to your voice mail number which is indicated by a flashing .

Things you need to know about Short Message Service and Voice Mail Notification:

- Received messages can be set to include information such as Emergency or Urgent, Time and Date Stamp and Callback Number.
- New EMERGENCY and URGENT messages will be displayed first regardless of the number of new messages received. (See Setting Up Message Preferences, page 31)

SETTING ALARM TIME

From the idle mode display, press **Menu** four (4) times to access **CLOCK/ALARM ▶**

Press **(S2)** to select feature. The display will show: **CLOCK/ALARM**

Press **(S2)** to select **ALARM ▶**

Alarm
Clock
Date Set
ALARM
Time Set
Set AM/PM
Set On/Off

Display shows:

Press **(S2)** to set alarm time (on). Display shows: **TIME SET**
Enter desired time at flashing cursor **00:00!**

Press **(Snd)** to save desired setting and return to ALARM options LIST. Press **(Clr)** 3 times to return to idle mode display.

SETTING ALARM ON/OFF

Follow the steps listed above, but select **SET ON/OFF ▶** from the **ALARM** options list.

Press **Menu** to toggle between on and off. Press **(Snd)** to save desired setting and return to **ALARM** options list.

Press **(Clr)** once to return to main menu LIST. Press **(Clr)** again to return to idle mode display.

RING TYPE

From the idle mode display, press **Menu** three (3) times to access **Ringling Set** ▶

Press **(S2)** to select. Display shows:

Press **Menu** to scroll through options.

RINGING SET**Volume** ▶**Escalating****Ring Type****RING SET** ☒**Normal****Option 1****Option 2**

Press **(S2)** to select **RING TYPE** ▶. Display shows:

Press **Menu** to scroll desired option (Normal, 1-2).

Press **(S2)** to save desired setting.

Press **(Clr)** twice to return to idle mode display.

NOTE:

To hear option setting, Press **Msg** key at the option setting.

- The last received message and will usually be the first displayed message when retrieving new messages.
- Voice Mail will not appear in the LIST menu unless an unanswered Voice Mail Notification exists. A flashing  will appear when new messages are received. The counter will indicate the number of new messages received.
- NEW MESSAGES will only appear when at least one new message has been received. A flashing  will appear when new messages are received. The counter will indicate the number of new messages received.
- MESSAGE LOG will not appear in the LIST menu if there are no stored short messages.
- If the message memory becomes full and a new message is received a warning display will appear. If message memory remains full, the oldest message may be deleted automatically.
- A message alert tone may be set to alert you when messages are received.

MESSAGE MENU

The MESSAGE Menu contains features which allow you to manage your messages when you access the Short Messaging features of your phone. The MESSAGE Menu options include:

- Voice Mail < Provides notification of incoming voice mail or short message
- New Messages < Appears when a new message has been received.
- Message Log < Appears when Short Messages are stored.
- Memory Used < Allows you to check percent of memory available.
- Preferences < Allows you set up how your messages will be displayed.

SHORT MESSAGE SERVICE

RECEIVING SHORT MESSAGES (Idle Mode) Display shows:

Oki CDMA
May.15 '97
12:00 PM

RECALL INFO

Incoming Message Display: Incoming
Message

1/16, 8:45
Read ▶
delete
lock

<PRESS MSG>

To answer, press **Msg** during incoming alert. Display shows: ***URGENT***
Press **▲/▼** to READ message: Jan.16 '97
5:00 PM
770-995-9800

If incoming call is not answered, call will automatically be stored in MESSAGE LOG.

RECEIVING SHORT MESSAGES (CONVERSATION Mode)

During Conversation mode, the incoming message display is the same as during idle mode. You may continue conversation while a message is displayed.

NOTE:

When a new message is received, the message Indicator will flash and counter (number) will change to indicate a new message is being received.

ESCALATING RINGING

From the idle mode display, press **Menu** three (3) times to access Ringing Set ▶

Press **(S2)** to select RINGING. Display shows:

RINGING SET

Volume ▶

Escalating

Ring Type

ESCALATING

(Press **Menu** to scroll through options)

Press **(S2)** to select. Display shows:

On

Off



Press **Menu** to toggle between on/off setting.

Press **(Snd)** to save desired setting.

Press **(Clr)** twice to return to idle mode display.

NOTE:

When Escalating Ringing is set to **On**, you cannot adjust the ring volume level when the phone is ringing. If the ring volume is MUTED, Escalating Ringing will not work.

RINGING SET**RING VOLUME**

Refer also to Basic Operation Section, Page 5 for setting Ring Volume, Earpiece Volume and Key Tone Volume.

From the idle mode display, press **Menu** three (3) times to access **RINGING SET** ▶

Press **(S2)** to select.

RINGING SET

Volume ▶

Escalating

Ring Type

VOLUME

(Press **(S2)** to select options)

Display shows:

L++++ H

Press **▲** or **▼** to adjust volume to desired level.

Press **(Send)** to save desired setting.

Press **(Clr)** twice to return to idle mode display.

RETRIEVE & REVIEW STORED MESSAGES (Idle Mode or CONVERSATION Mode)

Press **Msg** to display the MESSAGE MENU. Press **Msg** to scroll the to New Messages▶.
Press **(S2)** to select NEW MESSAGE list.

The message menu may include:

Voice Mail
New Messages ▶
Message Log
Memory Used

Press **(S2)**. New Messages list appears. Display shows:

NEW MESSAGES

1/16, 8:00

Press **Msg** or **▲/▼** to scroll to desired new message. Press **(S2)** to select

1/16, 10:00

1/16, 2:00

Options for handling messages include:

Read

Delete

Lock/Unlock

- VOICE MAIL will not appear in the **MESSAGE** menu unless an unanswered Voice Mail Notification exists.
- NEW MESSAGES item will only appear when at least one new message has been received and is unread.
- MESSAGE LOG will not appear in the **MESSAGE** menu if there are no stored short messages.

EXAMPLE:

New Message option has been selected. (This example shows messages listed by Date/Time, refer to Setting Up Message Preferences on page 31)

Display shows: **NEW MESSAGE ▶**

Press (52), in each case, to display next screens

1/16, 17:00	***URGENT***
1/16, 13:38	Jan. 16 '97
1/16, 9:10	5:00 PM
	770-995-9800
	Your flight
	will depart

Press ▲/▼ to read message:

When reading message(s), the message will scroll one line at a time with each press of ▲ or ▼.

DELETE & Lock/Unlock STORED MESSAGES

You are able to **Delete**, **Lock** and **Unlock** messages which have been stored in your phone's memory.

To Delete A Message:

Scroll to the desired message in **NEW MESSAGES** or **MESSAGE LOG**. Press (52) to display handling options. Press **Msg** or ▼ to select **DELETE ▶**. Press (53), then press (54) to delete the message or press (51) to go back without deleting.

1/16, 8:45	1/16, 8:45
Read	DELETE
DELETE ▶	Keep
Lock/Unlock	Delete
	(Press Msg or ▲/▼ to toggle)

LIGHTING

From the idle mode message display, press **Menu** twice to access **LIGHTING ▶**

Press (52) to select. Display shows:

(If OFF is currently set) ☒ **LIGHTING**
Off
On Always
On Seconds
(Press **Menu** to scroll to option)

Press (52) to select. Display shows:

A flashing "7" or current setting will appear.

Enter desired number of seconds (1-99)

Press (54) to save selection.

Press (Cir) twice to return to idle mode display.

ON SECONDS
7

AUTOMATIC ANSWER

This feature requires the use of an installed car kit (handsfree microphone) for mobile use or the personal earpiece microphone for portable use.

When this feature is activated, incoming calls will automatically be answered on the second ring (default setting) allowing you to talk to the caller in handsfree mode without pressing any buttons. A beep tone alerts you when the call is answered.

From the idle mode display, Press **Menu** to access **AUTO ANSWER** ▶

Press **(S2)** to select. The display will show:
(If OFF is currently set)
AUTO ANSWER ☒
OFF
On Ring

If **ON RING** is selected, the display will show:
 A flashing "2" (or current setting) will appear,
 enter desired number of rings (0-5).

Press **(Snd)** to save selection.

Press **(Clr)** twice to return to idle mode display.

To Lock/UNLOCK A MESSAGE

Press **Msg** to select lock (LOCK) or unlock (UNLOCK) option.

1/16, 8:45
 Read
 Delete
 LOCK/UNLOCK ▶
 Press **(S2)**
 1/16, 8:45
 LOCK/UNLOCK
 Lock
 Unlock
 (Press **Msg** or **▲/▼** to toggle)

Press **(Snd)** to unlock message, or **(S1)** to go back without unlocking.

Press **(Clr)** twice at any time to return to idle mode.

REVIEWING AMOUNT OF MESSAGE MEMORY USED

This feature allows you to review how much memory space is available (%).

Press **Msg** until display shows: MESSAGE MENU

Memory Used ▶
 Preferences
 Press **(S2)** to
 view status
MEMORY USED
 0% Full
 Delete Any
 Unused Msgs.

After two (2) seconds the Message Menu List returns or press **(Clr)** to return to MESSAGE MENU.

Press **(Clr)** again to return to idle mode display.

SETTING UP MESSAGE PREFERENCES

The options listed in PREFERENCES include:

- Message List < Allows you to select how you want you messages to appear.
- Broadcast < Allows you to receive messages sent out by your service provider.

MESSAGE LIST

Press **Msg** until Preferences ► flashes. Press (52) to select. Display will show:

PREFERENCES	Press	MESSAGE LIST	Press Menu to move through options.
Message Lis►	(52) to select	By Date/Time ☒	Press (52) to select option (flashing)
Broadcast		By Message	
		By Urgency	

BROADCAST MESSAGE

Press **Msg** until Preferences ► flashes. Press (52) to select. Display will show:

PREFERENCES	Press Menu	BROADCAST
Message Lis►	choose option.	Allow
Broadcast	Press (52) to select (flashing)	Ignore ☒

GENERAL MENU FEATURES

Your general menu features are listed in the following order.

- Auto Answer** Phone can be set to automatically answer after a specified number of rings.
- Lighting** Backlighting options (on, off or on for specified number of seconds).
- Ringling Set:** Ringing options (Volume Settings, Escalating Ringing or Ring Tone Selection)
- Clock/Alarm** Set date/time, alarm, and display style (normal or 24-hour).
- Alerts Set** Set alerts for wake-up, minute beeper, and entering/leaving a service area.
- Privacy Set** Used in "digital" mode to alert system for additional security.
- Call Forward** Forwards calls to specified phone number (Subscriber Service).

ACCESSING GENERAL MENU FEATURES

Press **Menu** repeatedly to scroll through features. Press (52) to select desired feature from the main menu list (► should be next to desired feature and flashing). Press (52) for programming options. Feature will be displayed in capital letters with option settings listed below. Press **Menu** to select between options. Press (52) to select setting. Press (52) to save selections. Press (Cir) once to return to main menu selection list. Press (Cir) again to return to idle mode message.

Menu and feature number are constantly lighted when accessing any General Menu feature.

Hint: Once a feature has been selected, **Menu** + (number) will appear on bottom of display so you can quickly access this feature by entering the two digit feature number and pressing **Menu**.