PAGE 4 **BACK** FRONT

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful nterference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular nstallation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

o Increase the separation between the equipment and receiver. o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modi?cations to this device not explicitly approved by manufacturer could void our authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1)ÿThis device may not cause harmful interference, and (2) this device must accept any interference 2)ÿeceived, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

90 DAYS LIMITED WARRANTY

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange

TO OBTAIN WARRANTY SERVICE

- Go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale) Prepay all shipping costs to the authorized service center,
- and remember to insure your return. Include a return shipping address (no P.O. Boxes),
- a telephone contact number, and the defective unit within the package
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is

Customer Service Dept 36 c/o Southern Telecom

400 Kennedy Drive

Sayreville, NJ 08872

SOME STATES DO NOT ALLOW THE EXCLUSION NOR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS ON EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GİVES YOU SPECIFIC LEGAL RIGHTS, AND YOU ALSO MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

MGD5001 / PRINTED IN CHINA / DESIGNED IN THE U.S.A.

PAGE 1

IN THE BOX

 MGD5001 Wireless Speaker & Diffuser • 12V/1A Power Adapter

 3.5mm Adxiliary Audio Cable User Manual

CONTROLS 1 12V/1A Power Jack

2 3 5mm Auxiliary Input Jack 3. LED Indicator

4. [POWER] Button: (Long Press) Power ON/OFF

(Quick Press) Cycle through light modes 5. [MIST] Button:

Turn aroma diffusion ON/OFF, continue pressing to adjust aroma diffusion strength

6 [TIMER] Button:

7. Bluetooth® LED Indicator 8. Diffuser Timer LED Indicators

Remove the diffuser and its contents from its packaging. Place the diffuser in a dry area, away from sources of water and heat but near an electrical socket

🗼 1h 3h 5h

7 8

Plug the pin of the supplied 12V/1A power adapter into the power jack on the side of the diffuser and plug into a wall socket.

PLAYING MUSIC VIA BLUETOOTH®

1. Long press the POWER BUTTON for 3 seconds to power the speaker ON. The Bluetooth® LED indicator will flash BLUE &

- 2. Select MGD5001 from the list of found devices in your mobile device's Bluetooth® menu Once successfully paired, the Bluetooth LED indicator will turn BLUE
- 3 Music playback and volume adjustment is controlled through your paired device.

PAGE 2

- Quick Press the POWER BUTTON to turn the lights on and cycle through the 6 light modes. Continue pressing the POWER BUTTON to turn the lights off.
- to your media-playing device. See the section above for playing music via Bluetooth®-

PLAYING MUSIC VIA AUXILIARY CONNECTION

- 1. Plug one connector of the supplied 3.5mm auxiliary cable to the 3.5mm auxiliary input jack on the side of the diffuser.
- 2. Plug the other connector into the headphone jack on your media-playing device 3. Music playback and volume adjustment is controlled through your connected device

SETTING UP THE AROMA DIFFUSER

- 1. If it is plugged in unplug the 12V/1A adapter from the wall socket and the pin from the power jack on the side of the diffuser 2. Remove the cover from the diffuser and lift the inner cap to reveal the water tank
- 3. Fill the tank with room temperature water. Make sure that water does NOT exceed the maximum level mark on the inside of the water tank
- 4. Add 4 5 drops of essential oil to the water tank 5. Place the cap back onto the water tank, and place the diffuser cover back on Connect the pin of the 12V/1A adapter back into the power lack and plug the adapter back into the wall socket.

CLEANING THE AROMA DIFFUSER

with a cotton ball or swab

After using 5-6 times, please clean the product as described below:

- Unplug the power adapter from the diffuser and remove the cover and lid from the tank and pour out any remaining water from the unit
- Put a small amount of dish detergent in the water tank and add
- some warm (~70°) water. Let sit for 5 minutes, then drain the solution from the unit-Wipe with a soft cloth, avoiding the inside pad of the tank, which should be cleaned

NEVER CLEAN THE DIFFUSER WITH ACIDS, ENZYMES, OR OTHER DETERGENTS, THESE KINDS OF CHEMICALS MAY MIX WITH WATER THE NEXT TIME THE DIFFUSER IS USED AND COMBINE WITH THE MIST, WHICH CAN CAUSE POTENTIAL HARM TO USERS.

Should you have any questions or problems concerning this product, please visit our website at: www.southerntelecom.com and click on Product Support.

Oil containing chemical fragrance, spice, or other impurities may cause malfunctions?

PAGE 3

FURTHER INFORMATION

• The amount and intensity of aroma produced will vary. Factors that affect production

PRECAUTION & WARNINGS

- of aroma can include water type, humidity, temperature, and/or air current-Note: The reactive light modes will operate ONLY if the diffuser is paired via Bluetooth® Only 100% natural essential oil should be used with this product
 - Only use 4.5 drops of essential oil
 - ONLY use the supplied power adapter to power this device. • When not in use, the diffuser should be stored in a dry, cool location,
 - away from sources of water or heat.
 - It is recommended that the diffuser be covered to protect it from exposure to dust if it will not be in use for a long period of time

- 1 Do not fill the oil cup over MAX level line
- 2. Do not turn the aroma function on when the oil cup is empty. 3. Do not touch the inside base of the tank
- 4. Clean regularly per the cleaning instructions in this user manual to avoid malfunctions
- 5. Always unplug the power adapter before maintenance 6. Always pour any remaining oil out of the oil cup and wipe with a clean, dry cloth-
- 7. Essential oils can stain. In the event of a spill or leakage π please wipe away any water or oil with a soft cloth.
- 8. Do not let aroma blow directly onto furniture, clothing, art, or any valuable objects.
- 9. Keep away from direct sunlight, heat sources, air conditioners, and fans
- 10. Always keep on a stable, flat surface. Do NOT place on a carpet, bed, cushion or other non-flat, non-stable surface
- 114 Keep away from electronic equipment. 12. Do not tip the product as it may cause oil to enter the mechanism and cause malfunction-
- 13. Do not use for more than 5 hours at a time: 14. Never move the product while in use
- 15. Do not touch any part of the product with wet hands.
- 16. Keep out of reach of children and pets. Children should not be left unsupervised near this product. This unit is not to be used by children or any person(s) with reduced physical, sensory, or mental capabilities, or lack of experience
- and knowledge, unless they have been given express supervision and instruction. 17. Keep the DC power jack clear of pathways, and do not forcefully pull or remove from the unit.
- 18. If smoke or burning smell is detected, immediately unplug the unit

