

Wireless Earbuds-R6 User Manual

PACKAGE WITH:

WMEGA-GRA,
WMEGA-RSG,
WMEGA-SLV

DATE:

01/09/2018

DESIGNER:

Calo Rios
crios@iworldnyc.com

COLORS:



Cyan

Magenta

Yellow

Black

**DIELINE
NO PRINT**

NOTES:

Artwork is 100% scale

Instruction Manual, Double-Sided

Front Side

Instruction Manual Bluetooth® Wireless Earbuds

FEATURES

- Works with most Bluetooth® devices including most models of iPad®, iPhone®, iPod® Touch, Galaxy® & Android™.
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away.
- Integrated rechargeable lithium-ion battery provides hours of playing time wherever you go.

SPECIFICATIONS

- Bluetooth Version: 4.2
- Wireless Range: Up to 33 feet
- Battery: Rechargeable Lithium-Ion
- Driver Unit: 10 mm
- Frequency Response: 20Hz-20KHz
- Sensitivity: 103dB±3dB
- Impedance: 16 ohms

CONTENTS

- 1 Pair Bluetooth Earbuds
- 1 USB Charge Cable
- 1 User Manual

CHARGING THE EARBUDS BATTERY

The internal battery must be fully charged before first use of the wireless earbuds. To charge, use the included USB charge cable:

1. Insert the smaller micro-USB end of the cable into the CHARGE INPUT on the earbud unit.
 2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will turn blue when charging is complete. Unplug from the power source when charging is complete. When power is low, there will be an alerting sound. Recharge the battery as advised above.
- NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

BLUETOOTH WIRELESS EARBUDS OPERATION

1. Make sure the battery is charged as explained above.
2. On the controller, press and hold the POWER/PLAY BUTTON until the indicator light flashes blue and red – this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device. NOTE: If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically. Restart this step to try to connect again.
3. Activate Bluetooth function on your audio device – it should automatically recognize the earbuds unit and allow you to select it using the name "iWorld". If required, enter the password "0000". To complete the wireless connection. When the earbuds are connected, the indicator light on the controller will flash blue and you are now set to enjoy wireless audio from within a 33ft range of the audio device.
4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.
5. To play audio, click the POWER/PLAY BUTTON once.
6. To pause audio, click the POWER/PLAY BUTTON once.
7. To increase the volume, press and hold +. To decrease the volume, press and hold -. The earbuds make a chime sound when they reach both maximum and minimum volumes – you may then adjust the volume on your audio device to make it even louder or softer as you please.
8. To go to the next song, click + once. To go to the previous song, click - once.
9. To answer an incoming call, click the POWER/PLAY BUTTON once.
10. To hang up a phone call, click the POWER/PLAY BUTTON once.
11. To disconnect and shut off the earbuds unit, press and hold the POWER/PLAY BUTTON until the indicator light goes out.

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

INSTRUCTIONS CONTINUED ON THE OTHER SIDE →

184.2 mm

142.9 mm

Back Side

Instruction Manual, Bluetooth® Wireless Earbuds (Continued)

CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not over-charge the battery.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

TECHNICAL SUPPORT: Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual or feel free to contact iWorld technical support:

iWorld LLC
65 West 36th St., 11th Floor
New York, NY 10018, USA
www.iworldnyc.com
email: support@iworldnyc.com
Please keep instructions for further reference.

© 2018 iWorld Global Trading LLC
iWorld has no affiliation to Apple Computer or iPod, iPhone, iPad products. iPod, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. iWorld has no affiliation to Google or Android products. Android is a trademark of Google Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by licensee is under license. All other trademarks and trade names are those of their respective owners. MADE IN CHINA.