



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




WIRELESS EARBUDS WITH MIC



INSTRUCTION MANUAL

PRODUCT DIAGRAM

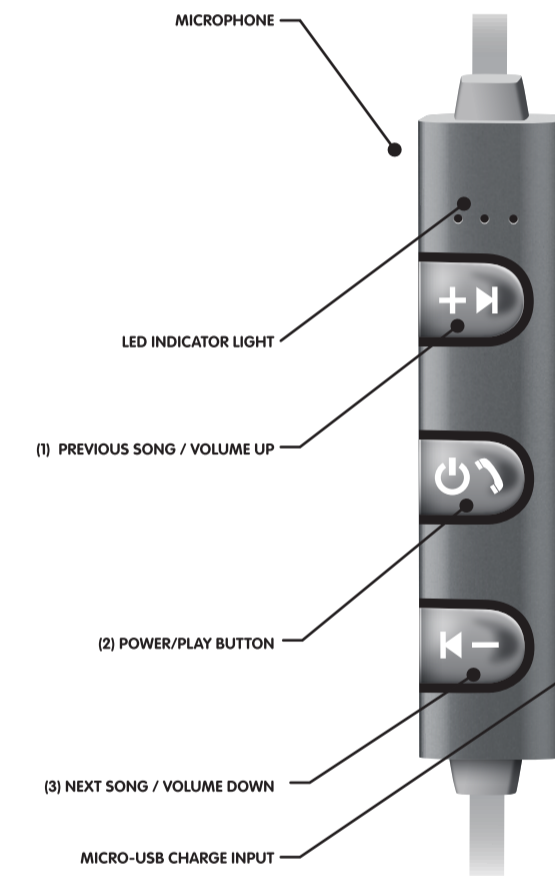

INSTRUCTION MANUAL

Bluetooth® Wireless Earbuds

FEATURES

- Works with most Bluetooth®-enabled smartphones and devices.
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away.
- Integrated rechargeable battery provides hours of playing time wherever you go.

CONTENTS

- Wireless Earbuds with Mic (1)
- 1 USB Charging Cable
- 1 User Manual

SPECIFICATIONS

- Power: Internal Polymer Lithium battery
- Bluetooth Version: Bluetooth v4.2
- Wireless Capability: Up to 33 ft range
- Supply Voltage: DC 5V (not included)

- Driver Unit: 10 mm
- Frequency Response: 20Hz – 20KHz
- Sensitivity: 105dB±3dB
- Impedance: 32 ohms

CHARGING THE BATTERY

The internal battery must be fully charged before first use of the wireless earbuds. To charge, use the included USB charge cable.

1. Insert the smaller micro-USB end of the cable into the CHARGE INPUT on the earbud unit.
2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will turn blue when charging is complete. Unplug from the power source when charging is complete.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as advised above to resume normal operation.

WIRELESS EARBUDS OPERATION

Wireless playback Via Bluetooth:

1. Make sure the battery is charged as explained above.
2. On the controller, press and hold the **button (2)** until the indicator light flashes blue and red – this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device. **NOTE:** If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically. Restart this step to try to connect again.
3. Activate Bluetooth function on your audio device – it should automatically recognize the earbuds unit and allow you to select it using the name "iWorld". If required, enter the password "0000" to complete the wireless connection. When the earbuds are connected, the indicator light on the controller will flash blue and you are now set to enjoy wireless audio from within a 33 ft range of the audio device.
4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.
5. To play audio, click the **button (2)** once.
6. To pause audio, click the **button (2)** once.
7. To go to the next song, press **button (3)** once. To go to the previous song, press **button (1)** once.
8. To increase the volume, click and hold **button (1)**. To decrease the volume, click and hold **button (3)**. The earbuds make a chime sound when they reach maximum volume. You may then adjust the volume on your audio device to make it even louder or softer as you please.
9. To answer an incoming call, click the **button (2)** once.
10. To hang up a phone call, click the **button (2)** once.
11. To disconnect and shut off the earbuds unit, press and hold the **button (2)** until the indicator light goes out.

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.

TECHNICAL SUPPORT

Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual or feel free to contact iWorld technical support:

iWorld LLC
65 West 36th St., 11th Floor
New York, NY 10018, USA

www.iworldnyc.com
email: support@iworldnyc.com

Please keep instructions for further reference.

© 2019 iWorld Global Trading LLC
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by iWorld is under license. All other trademarks and trade names are those of their respective owners. Actual product may differ slightly from image shown. MADE IN CHINA