





Serial Number - Replace "XYYWWZnnnnn" with

"X" = Core product revision as defined in BOM ("A" at launch)

"YY" = Year of Manufacture

"WW" = Week of Manufacture

"Z" = Production Location ("A" at this location)

"nnnnn" = serial number of product produced ("00001", "00002", etc)

