
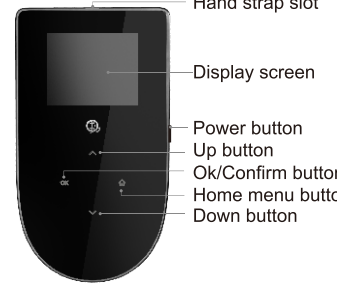
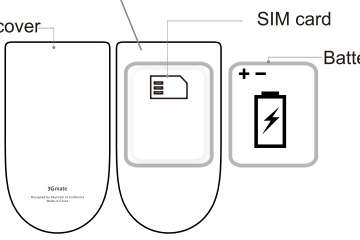

 <p>Quick Start Guide</p>  <p>W19</p> <p>Customer Support: 1.Email: 3gmate@skyroam.com 2.Skyroam App 3.Website Visit: www.skyroam.com for online support (hours: 9:00-18:00 Beijing Time)</p>	<p>3Gmate Device Overview</p>  <p>Hand strap slot Display screen Power button Up button Ok/Confirm button Home menu button Down button</p> <p>SN (Serial Number), Wi-Fi Name & Password labeled above</p>  <p>Back cover SIM card Battery</p>	<p>1.How to use your own physical SIM card to access 3G Internet:</p> <ul style="list-style-type: none"> After inserting your physical SIM card into 3Gmate device (under the battery), then click and hold the Power button to turn on your device. Once you see both the signal indicator and 3G up/down arrow, its ready to be used. Now you can use your phone/pad/laptop to search for 3Gmate's Wi-Fi Name, and logon to use its 3G Internet <p>* If the (3G) indicator on 3Gmate screen keep flashing, then your APN is not set correctly. Please download our Client app from Apple Store or Google Play, then use the client app to modify to the correct APN for your SIM card. (APN is provided by SIM card's network operator, please contact your operator to get the correct APN settings)-</p> <ul style="list-style-type: none"> If your physical SIM is roaming based on your current location/country, then 3Gmate will automatically detect if Skyroam Service is available in your current location to avoid any roaming charges. If Skyroam Service is not available, then you will be prompted to use your own physical SIM's roaming service, but will alert you. You must click 'Accept' in order to start using it. 	<p>2. How to use Skyroam Service globally</p> <ul style="list-style-type: none"> If your current location is supported by Skyroam Service (See Skyroam updated coverage at www.skyroam.com), even if you do not insert any SIM card, your 3Gmate will automatically launch Skyroam Service after powering on the device. Once you see signal and 3G indicator available, then you can start using by connecting to 3Gmate's Wi-Fi Name. <p>* Please be aware you must have an existing Skyroam account in order to use the service, to apply for an account, please visit www.skyroam.com</p> <p>3.You should also download our IOS/Android App from Apple Store or Google Play. With the App you can access:</p> <ol style="list-style-type: none"> 3Gmate's status and advanced settings Your Skyroam account information and balances Update 3Gmate's software Over-the-Air to the newest version for any bug fixes and feature enhancements Access our online customer support to answer any questions or report any issues <p>For more user guides and support information on our App, please visit: app.skyroam.com</p> <p>Attention: Up-coming new feature in our App including local phone number in each local country for voice call and sms.</p>	<p>3Gmate Warranty Card One Year Limited Warranty</p> <p>Purchase Date: SN:</p> <p>Thanks for purchasing 3Gmate product,we will provide you one year limited warranty since purchase date under normal usage.</p> <p>The warranty does not apply:</p> <ul style="list-style-type: none"> to consumable parts,such as batteries. to cosmetic damage,including but not limited to scratches, dents, and broken plastic on ports. to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external causes. if any 3Gmate serial number has been removed or defaced. if 3Gmate has been dis-assembled. <p>3Gmate Reseller:</p>  <p>Warranty is invalid without reseller's stamp or signature</p>
---	--	--	---	---

FCC Statement

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The mobile device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.451W/kg.
- This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

BATTERY CHARGE:

Connect the 3Gmate to your PC by USB port.