

PIR Motion Sensor IR-29

The PIR detects infrared signature to pick up movements within an assigned area and signals the Control Panel to activate the alarm if an intruder crosses its' path of detection.

The PIR consists of a two-part design made up of a cover and a base. The cover contains all the electronics and optics and the base provides a means of fixing. The base has knockouts to allow mounting on either a flat surface or in a corner situation

The PIR has a tamper switch which will be activated when the cover is opened. It can also alert you to signal communication problems and low battery situations.

The PIR is designed to give a typical detection range of 12 meters when mounted at 2 meters above ground.

The Pet-Immune models of IR-29 series PIR sensor further support pet immunity feature and will not detect pets of up to 27 kg within 7 meter range to minimize false alarm situation.

The IR-29 Series PIR Sensor includes the following models:

IR-29 / IR-29 F1 – PIR sensor with alkaline batteries

IRP-29 / IRP-29 F1 – Pet Immune PIR sensor with alkaline batteries

IR-29SL / IR-29SL-F1 – PIR sensor with lithium battery.

IRP-29SL / IRP-29SL-F1 – Pet Immune PIR sensor with lithium battery

● Identifying the Parts

1. Test Button/LED indicator

The test button is used for testing the radio performance and for learning purpose.

The LED indicator is used to indicate the status of system.

2. Battery Insulator

3. Supervision Enable/Disable Jumper Switch (JP2)



Jumper On

The jumper link is inserted connecting the two pins



Jumper Off

if the jumper link is removed or "parked" on one pin.

- When set as ON, Supervision is disabled. (Factory default for 433AM frequency models)

- When set as OFF, Supervision is enabled. (Factory default for 868WF frequency models)

433 FM and 868FM frequency models does not support JP2 Jumper Switch. Supervision is enabled and cannot be disabled.

4. Sensitivity Incomer Jumper Switch (JP3)

 



- When set as OFF, the PIR's detection sensitivity is in normal level. (Factory default for non Pet-Immune models)

- When set as ON, the PIRs detection sensitivity is high. (Factory default for Pet-Immune models)

5. Tamper Switch

The Tamper switch protects the PIR from unauthorized cover opening.

6. Corner Mounting Bracket

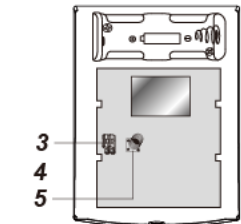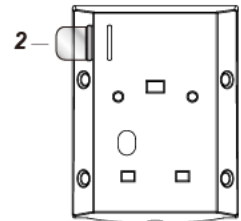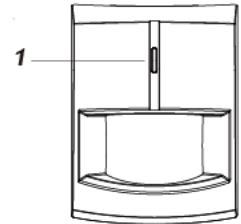

● Sleep Timer

The PIR has a "sleep time" of approximately 1 minute to conserve power. After transmitting a detected movement, the PIR will not retransmit for 1 minute; any further movement detected during this sleep period will extend the sleep time by another minute. In this way continuous movement in front of a PIR will not unduly exhaust the battery.

● Supervision Function

If enabled (see table above), when the PIR is in Normal operation mode it will conduct a Self-test Periodically by transmitting a supervisory signal once every 15 to 18 minutes

If the Control Panel fails to receive the Supervisory signals transmitted from a certain PIR for a preset time, an "Out-Of-Order" fault message will be generated.

● Sensitivity Incomer Function

You can use the sensitivity increaser function to increase the PIR's detection sensitivity. To increase detection sensitivity, connect the Jumper Switch (JP3), or the ON position (Factory default for Pet-Immune models). To maintain normal detection sensitivity, disconnect the Jumper Switch (JP3), or the OFF position (Factory default for non-Pet-Immune models).

● Test Mode

The PIR can be put into Test mode by pressing the Test Button on the front cover. In Test mode, it will disable the sleep timer and will enable the LED indicator to flash every time a movement is detected. Every time the Test Button is pressed, the PIR will transmit a test signal to the Control Panel for radio range test and enter the test mode for 3 mins. Test Mode will time out after 3 minutes..

● LED Indicator

In Normal operation mode, the LED Indicator light up in the following situations (For F1 models, the LED flashes instead):

- When movement is detected under low battery condition
- When the cover is opened and the tamper switch is triggered.
- When movement is detected if the Tamper condition persists.
- When movement is detected under Test mode
- When the Test Button is pressed under tamper condition or if PIR is under low battery.

The LED will not flash if the PIR tamper and battery are normal and is not under test mode,

If the LED flashes to indicate signal transmission, it will flash twice rapidly upon receiving acknowledgement from panel.

● Battery

IR-29 Series PIR Motions sensor uses with alkaline or lithium batteries as power source:

- The alkaline-powered models use two alkaline AA 1.5 V batteries as its power source.
- The lithium-powered models use one 3V 2/3A (EL123AP) Lithium battery as its power source.

The PIR features low battery detection function. If low battery voltage is detected, a low battery signal will be sent to the Control Panel along with regular signal transmissions for the Control Panel to display the status accordingly.

For each installation, the battery is installed in by the factory before shipment with an Insulator inserted.

<NOTE>

- ☞ When changing batteries, after removing the old batteries, press the Tamper Switch twice to fully discharge before inserting new batteries.

● Getting Started

- Pull out the battery insulator to activate battery.
- The LED indicator will flash for 30 seconds. (The PIR is warming up). During the warm up period, the PIR will not be activated. After the warm up period is over, the LED will turn off and the PIR will be ready for operation.
- Put the Control Panel into learning mode, refer to Control Panel manual for detail..
- Press the test button on the front cover.
- Refer to Control Panel manual to complete the learn-in process.
- After the PIR is learnt-in, put the Control Panel into "Walk Test" mode, hold the PIR in the desired location, and press the Test button to confirm this location is within signal range of the Control Panel, refer to Control Panel manual to complete Walk Test.
- When you are satisfied that the PIR work in the chosen location, you can proceed to mounting.

● Mounting Method

- The PIR is designed to be mounted on either a flat surface or in a corner situation with fixing screws and plugs provided.
- The base has knockouts, where the plastic is thinner and can be broken for mounting purpose. Two knockouts are for surface fixing and four knockouts are for corner fixing as shown in the picture.
- For corner mounting, an optional triangular bracket is provided to add Back Tamper Protection. The bracket includes four knockouts to mount on the wall.

● Surface mounting:

- I. Remove the fixing screw and cover assembly.
- II. Break through the knockouts on the inside of base
- III. Using the holes as a template, drill holes in the surface.
- IV. Insert the wall plugs if fixing it into plaster or brick.
- V. Screw the base into the wall plugs.
- VI. Screw the cover onto the base.

● Corner mounting:

- I. Break through the four corner knockouts.
- II. Using the four holes as a template, drill holes in the surface of the corner
- III. Insert the wall plugs
- IV. Screw the base into the wall plug.
- V. Screw the cover onto the base.

● Corner mounting with triangular bracket:



The triangular bracket can be mounted on the wall with provides screws or double-sided adhesive pads.

Screw Mounting

- I. 4 knockouts are made on the triangular bracket. To fix the bracket on *Wall A*, break through *Knockout A & B*. To fix the bracket on *Wall B*, break through *Knockout C & D*. To fix the bracket on both of *Wall A & B*, break through *Knockout A & D* or *B & C*.
- II. Using the two holes as a template, drill holes in the surface of the corner. Insert wall plugs
- III. Screw the triangular bracket into the wall plugs with *the two pointing sticks (E)* on top facing you.
- IV. Fit the PIR onto the hooks of the triangular bracket.

Self-adhesive Mounting

- I. The mounting corner should be clean, dry, and smooth. Clean the mounting corner with a suitable degreaser if needed.
- II. Two double-sided adhesive pads are attached on the triangular bracket before shipment.
- III. Remove the protective covering from the double-sided adhesive pads.
- IV. Attached the triangular bracket onto the desired corner with the two pointing sticks on top facing you.
- V. Fit the PIR onto the hooks of the triangular bracket.

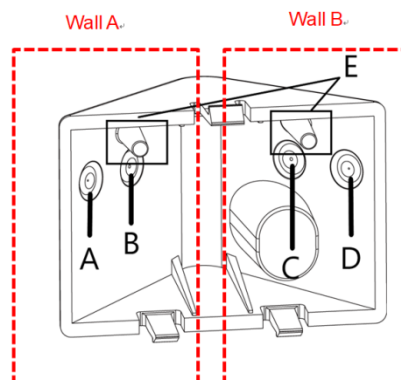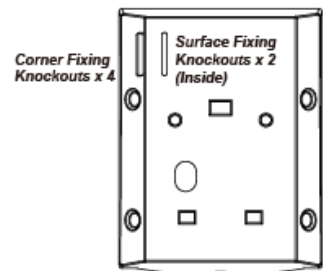

● **Installation**

- Decide on the location of the PIR and if it is to be corner or surface mounted.
- After the installation site is selected, follow the steps described above to mount the PIR.
- Press the Test Button to enter Test Mode. Walk around the protected area noting when the LED lights up and check that the detection coverage is adequate.
- When detection coverage is found to be satisfying, installation is now completed.

● **Installation Recommendations**

The PIR is designed to give a typical detection range of 12 meters when mounted at 2 meters above ground.


For Pet-Immune PIR series, it gives a typical PET IMMUNE range of 7 meters when mounted at 1.9-2.0 meters above ground. If mounted higher above ground, it gives a farther PET IMMUNE range.

To take full advantage of PIR, the following guidelines should be considered:


◆ **It is recommended to install the PIR in the following locations**

- Mount the detector at 1.9M-2.0M height for best performance:

Regular PIR Detection Range

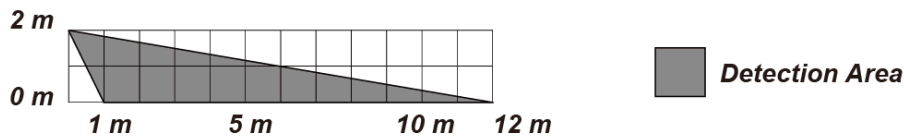

Pet Immune PIR Detection Range

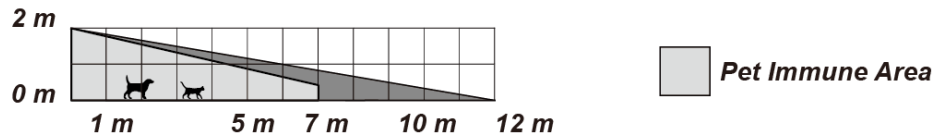

<IMPORTANT NOTE>

- ☞ For the most desirable performance of Pet-Immune PIR series, remember to adjust the height of PIR mounting site with respect to the height of the tallest animal in the house. Taller-than-average pets may require the PIR to be mounted higher for the Pet Immunity purpose.
- ☞ When deciding on the height of the PIR mounting site, remember to take the possible blind spot into consideration. The blind spot underneath the PIR enlarges proportionally to the height of the PIR mounting site.
- ☞ Please note that performance is affected by external factors, such as height of detected object, desired detection range, installation area...etc. The suggested mounting height could be adjusted according to actual installation environment factors.
- Mount where the animals cannot come to the detection area by climbing on furniture or other objects.
- Don't aim the detector at stairways the animals can climb on.
- In a position such that an intruder would normally move across the PIR's field of view from side to side.
- In a corner to give the widest view.
- Where its field of view will not be obstructed e.g. by curtains, ornaments etc.

◆ **Limitations**

- Do not position a PIR to look directly at a door protected by a Door Contact, this could cause the Door Contact and PIR radio signals to be transmitted at the same instant when entering, canceling each other out.
- Do not install the PIR completely exposed to direct sunlight.
- Avoid installing the PIR in areas where devices may cause rapid change of temperature in the detection area, i.e. air conditioner, heaters, etc.
- Avoid large obstacles in the detection area.
- Not pointing directly at sources of heat e.g. fires or boilers, and not above radiators.
- Avoid moving objects in the detection area i.e. curtain, wall hanging etc.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example – use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.