

# Remote Controller (RC-16-F1)

The Remote Controller is used to arm the system in home or away mode, disarm the system and send a panic signal.

## ● Identifying the parts

### 1. Away Arm Button

Press the button to arm the system in Away Arm mode.

### 2. Disarm Button

Press the button to disarm the system. When an alarm is activated, press the button to stop the alarm.

### 3. Home Arm Button

Press the button to arm the system in Home Arm mode.

### 4. Panic Button


Press and hold the button for 3 seconds to activate a Panic alarm.

#### <NOTE>

- ☞ Panic alarm cannot be stopped after activation by pressing disarm button on Remote Controller.

### 5. LED Indicator

The LED will flash when the Remote Control is transmitting radio signal.

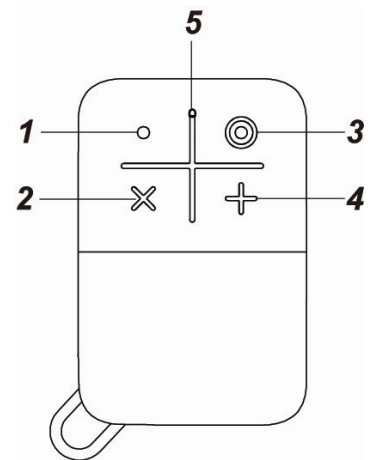


## ● Battery

The Remote Controller uses one **CR2032** 3V mAh Lithium battery as its power source. When low battery voltage is detected, a low battery signal will be sent to the Control Panel along with regular signal transmission to notify the Control Panel.

Insert the battery according to instruction below:

1. Separate the Remote Controller casing from the middle to reveal the battery compartment. (**Figure 1**)
2. Insert the battery into battery compartment, with the positive side facing the logo on the back, (**Figure 2**)
3. Replace the casing. (**Figure 3**)

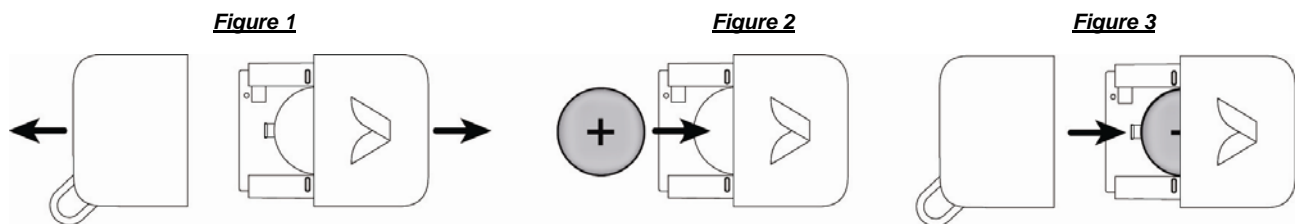

#### <NOTE>

- ☞ When changing battery, after removing the old battery, press any button twice to fully discharge before inserting new battery.
- ☞ When a low voltage battery is inserted, the LED will flash 3 times to indicate low battery.

## ● Getting Started

- Insert the battery according to instruction.
- Put the Control Panel into learning mode, refer to Control Panel manual for detail.
- Press any buttons on the Remote Controller.
- If the Control Panel receives the Remote Controller signal successfully, it will display the information accordingly.
- Please refer to your Control Panel manual to complete the learning process

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.