


The Transmitter (WTR-X)

The Transmitter (WTR-X) is designed sized and looks like a wristwatch, and is to be worn on the wrist at all times. The WTR-X brings help to your door when you need it most by pressing the button, which is on the top of it. The design ensures triggering the alarm is easily done while cautious handling to prevent false alarm is unnecessary.

● **Active Button**

- Pressing the Active Button will activate the Main Unit, causing it to dial emergency call alarm.
- When the Main Unit receives the alarm signal and is being activated, you can stop the activity if desired by pressing this button for more than 8 sec.

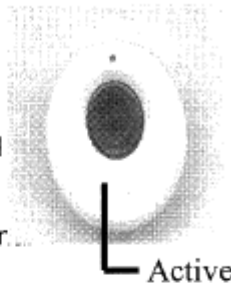

● **The Wrist Transmitter's ID Code**

Every Wrist Transmitter has a unique numeric code called "ID code". The ID code enables the Main Unit to identify the signal is transmitted from the Transmitter. At the same time, it also prevents interference from outside sources.

● **Battery Life**

The Transmitter use one 3V 125mAh Lithium battery as its power source. The battery can last for 3 years.

● **Application**

In CTC-797 System

- CTC-797 Main Unit uses "Learning" technology to set the Transmitter's ID code and up to six ID codes can be recorded by the Main Units.
- During installation, the ID code of the Transmitter should be learned by the Main Unit so that the Wrist Transmitter can communicate with the Main Unit.
- Learning the Transmitter's ID code:
 - Step 1. Put the Main Unit in Learn mode.
 - Step 2. Press the Active Button.
 - Step 3. If the Main Unit receive the signal, it will sound a long beep indicating Learning is successful.
 - Step 4. Put the Main Unit back to Normal operation mode.

88.10.06

NOTE

THIS MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.