









MiniBox IV IP Video Transmitter

Make sure your MiniBox-IV is properly configured according to the Operator Manual provided.



WARNING
Avoid personnel damage to the camera!
• Disengage the support bracket (shown positioned higher) turning the system ON.
• Engage the support bracket (see position) before running or shipping the system.
To Disengage the support bracket: pull spring tab out and lower bracket down into position.
To Engage the support bracket: pull spring tab out and raise bracket up to higher position.

Video Tx	1080P 8x
1	2813.00 1 138.600
2	2384.00 2 138.600
3	2042.00 3 138.750
4	2451.25 4 135.975
5	2264.00 5 139.450
6	2082.25 6 139.450
7	2300.00 7 139.650
8	2190.00 8 139.650
9	2340.00 9 139.650
10	2280.00 10 139.650

NOTE: Make sure power cables do not block camera view.
WARNING: LIVE WIRE TRAP! - HAZARDOUS VOLTAGE!
110 VAC, SA Input
Wiring Block

NOTE: Refer to the MiniBox-IV Operator Manual for detailed instructions.
FCC ID: H25MBOX4DS
GO-102487 Rev A

DCI **COBHAM** **Scrubbers**
486 Amherst Street • Nashua, New Hampshire 03063 • 603-880-4411 www.dtecom.com

POWER STATUS
PUSH ON
AC BREAKER RESET
AC PWR RESET
AC PWR RESET
AUX VIDEO OUT 1
AUX VIDEO OUT 2
CAMERA
COAX
SIG
CHN SEL
AUDIO OUT
DIN 5
DIN 6
DIN 7
DIN 8
DIN 9
DIN 10
DIN 11
DIN 12
DIN 13
DIN 14
DIN 15
DIN 16
DIN 17
DIN 18
DIN 19
DIN 20
DIN 21
DIN 22
DIN 23
DIN 24
DIN 25
DIN 26
DIN 27
DIN 28
DIN 29
DIN 30

SONY IPELA
Support Bracket (Engage For Transport ONLY)
Cable Entry (1 of 2)

